

## IMPORTANT:

This "BT-THEATRE YOKE ADAPTER-HD2" (order code: B06035) should be used with "BT-THEATRE HD2" Fresnel projectors, starting from batch BGL-2212.

Older "BT-THEATRE HD2" Fresnel projectors should use "BT-THEATRE YOKE ADAPTER-HD1" (order code B06031)



### Tools required:

- PH2 Phillips screwdriver
- 6 mm hexagon wrench
- 3 mm hexagon wrench
- 14 mm open-end wrench



### Step 1:

- Remove the bracket with a 14 mm open-end wrench.



### Step 2:

- Remove the locking washers with a 3 mm hexagon wrench. (4 screws on both sides)



### Step 3:

- Use the screws from step 2 to mount the adapters (on both sides).



### Step 4:

- Fit the BT-THEATRE Yoke spacers using the enclosed Phillips screws (on both sides).





### Step 5:

- Fit BT-THEATRE Yoke washer (one-sided)



### Step 6:

- Install the BT-THEATRE Yoke with a 6 mm hexagon wrench (observe the order of the washers)



### Step 7:

- Check the assembly for functionality and strength.

### Parts that are no longer required:

- 2x M14 screws
- 2x M14 washers
- 2x locking washers
- 1x bracket with locking screws

