

RACER80 evo

GUIDE DE L'UTILISATEUR USER GUIDE

2 - Introduction

Nous vous remercions d'avoir choisi le système amplifié RACER80 Evo.

- Un tout en un facile à transporter
- Performance et qualité sonore
- Lecteur multimédias intégré
- Un emplacement pour récepteur UHF diversity en option


Le RACER80 Evo est un système tout-en-un puissant et doté d'une excellente qualité sonore pour toutes vos prestations nomades.

Équipé de série d'un lecteur USB/SD, d'un récepteur Bluetooth[®] TWS et d'un mixer permettant le branchement d'un micros supplémentaires et d'une source externe. Facile à transporter, il bénéficie en plus d'une excellente autonomie et peut être chargé pendant son utilisation. Il se range facilement, dans un minimum d'espace.

Pour sa protection vous pouvez ajouter une housse (code : H10431).

- Visualisation du niveau de la batterie par afficheur à LED
- Charge et utilisation simultanées
- Coupure automatique en cas de niveau trop faible de la batterie

3 - Les différents modules

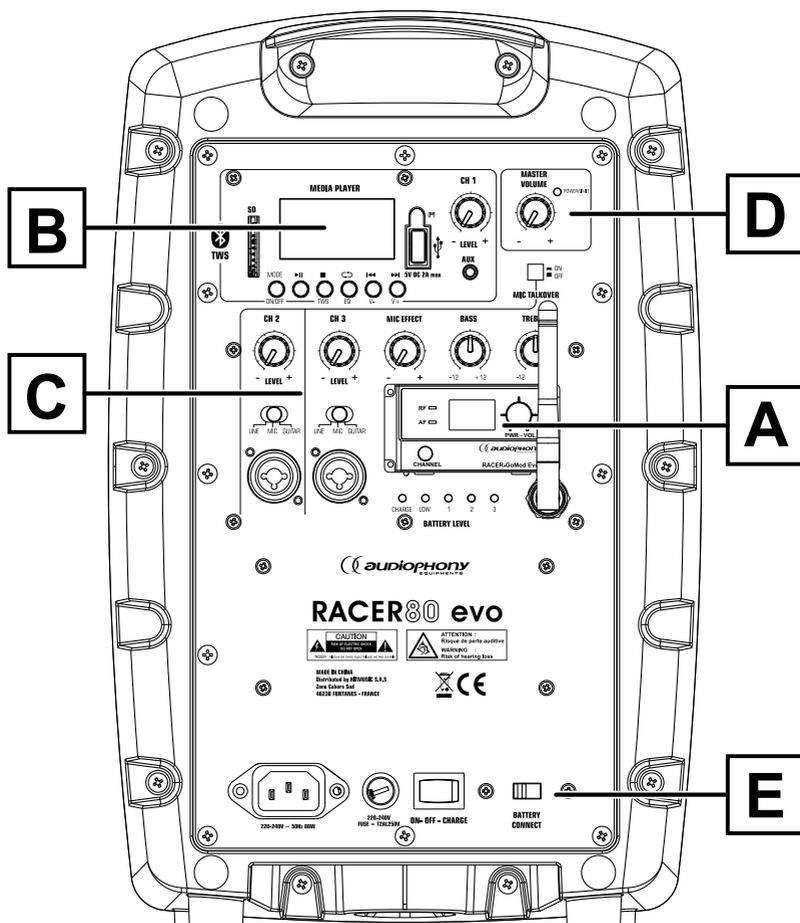

A - Module de réception UHF optionnel. Reportez vous au 4.6 concernant son installation

B - Module USB/SD/Bluetooth® TWS affecté au canal 1


C - Section mixeur des canaux 2 et 3

D - Section master

E - Section alimentation








4 - Descriptif des modules

4 - 1 : Le module USB/SD/Bluetooth® TWS

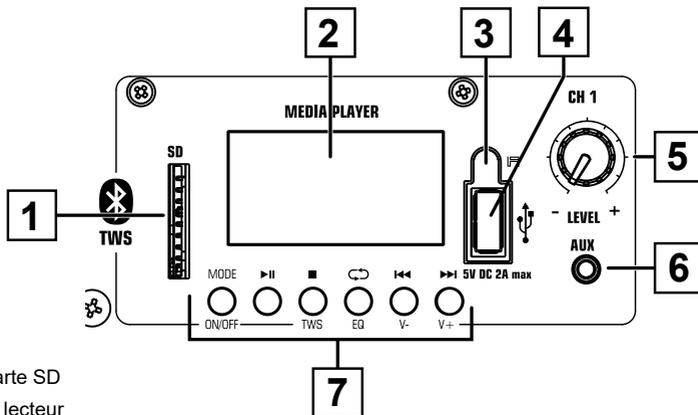

- 1 - Slot pour Carte SD
- 2 - Afficheur du lecteur
- 3 - Diode IR de réception des signaux de la télécommande
- 4 - Port USB mass storage pour clef USB. Cette fiche USB permet aussi de recharger un téléphone ou une tablette : 5 V 2 A
- 5 - Réglage du niveau : Ce réglage concerne le lecteur multimédias et l'entrée AUX
- 6 - Entrée AUX sur Jack 3.5 stéréo. Entrée AUX prioritaire sur le lecteur dès qu'une source est connectée.
- 7 - Commandes du lecteur multimédias :

Action	Affichage
<p>Allumer et éteindre le lecteur :</p> <p>Appui long sur la touche MODE</p> <p>Le lecteur se met en route.</p> <p>A la mise sous tension du RACER le lecteur s'allume automatiquement.</p>	
<p>Si aucun support USB ou SD n'est connecté au lecteur.</p>	
<p>Connecter un support USB ou SD :</p> <p>Si vous connectez un support USB ou SD contenant des morceaux de musique, ils seront automatiquement détectés.</p> <p>Le lecteur passe automatiquement en mode stop.</p> <p>Appuyer sur ► pour lancer la lecture.</p>	

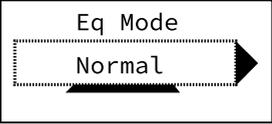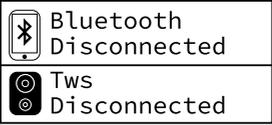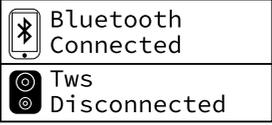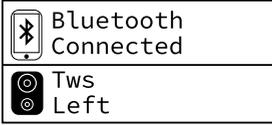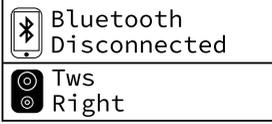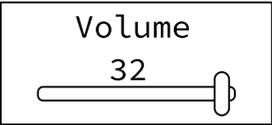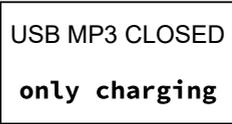
Action	Affichage	
<p>Choix du mode de répétition :</p> <p>Appui court sur la touche .</p> <p>Les différents modes de répétition sont : Repeat All (A)/ Repeat One (1)/ Repeat Folder (F) / Random (R).</p>		
<p>Choix du mode d'égalisation :</p> <p>Appui long sur la touche .</p> <p>Les différents mode d'égalisation sont : Normal / Rock / Pop / Classic / Jazz / Country.</p>		
<p>Passer en mode Bluetooth :</p> <p>Appui court sur la touche MODE.</p>		
<p>Appairage</p> <p>Pour appairer votre RACER80 Evo passez en mode Bluetooth l'afficheur indique «Bluetooth Disconnected». Il faut maintenant appairer une source Bluetooth®. Allumez votre source Bluetooth® et effectuez une recherche de périphériques. Sélectionnez «RACER» dans la liste et acceptez la connexion.</p>		
<p>Activer le mode TWS (reproduction stéréo avec deux RACER) :</p> <p>Mettez les deux RACER en mode Bluetooth. Appuyez longuement sur la touche TWS du RACER qui lit la source Bluetooth. Les RACER passent alors automatiquement en mode TWS.</p>	<p>RACER 1</p>	
	<p>RACER 2</p>	
<p>Régler le volume du lecteur :</p> <p>Appui long sur les touches V- ou V+.</p>		
<p>Activer ou désactiver le mode chargeur du port USB :</p> <p>En mode SD et USB : Appui long sur .</p> <p>En mode BT : Appui court sur la touche .</p> <p>Lorsqu'il est en mode charge le port USB délivre jusqu'à 2 ampères, le data USB est inactif et le port SD reste accessible.</p>		

Affichages des modes de lecture



	Indique le mode musical
	Indique le mode de lecture. Pour passer d'un mode à l'autre, utilisez la touche
0079 0144	Indique sur la ligne du haut le numéro du morceau en cours et, sur la ligne du bas le nombre total de morceaux.
POP 	Indique le mode d'égalisation en cours
128 MP3	Indique le type de fichier lu et son taux de compression
	Indique le support en cours de lecture
00:02:12 / 00:04:04	Indique le temps dans la lecture / Le temps total du morceau
▶ FILENAME.MP4	Indique le nom du morceau en cours de lecture
	Bargraph du niveau de lecture
<p>Utilisez les touches et pour passer d'un morceau à l'autre.</p> <p>Utilisez la touche pour lancer ou mettre en pause la lecture.</p> <p>Utilisez la touche pour arrêter la lecture.</p>	


4 - 2 : Télécommande

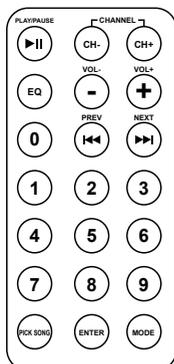

La télécommande infrarouge de votre lecteur permet de commander à distance certaines fonctions de votre lecteur pour vos sources SD/USB ou Bluetooth®.


- Les touches CH- et CH+ permettent de se déplacer dans les répertoires du support SD ou USB.
- La touche «EQ» permet de sélectionner les différents presets d'égalisations paramétrés selon différents genres de musique : Normal / Rock / Pop / Classic / Jazz / Country.
- Les touches Vol- et Vol+ permettent de régler le niveau de sortie du lecteur.
- La touche «ENTER» permet de choisir le mode de lecture : Repeat All (A) / Repeat One (1) / Repeat Folder (F) / Random (R).
- La touche MODE permet d'activer le mode Bluetooth® et de changer de mode si une autre source est accessible.
- Les touches 0 à 9 permettent d'accéder directement à un morceau.

4 - 3 : Section mixeur

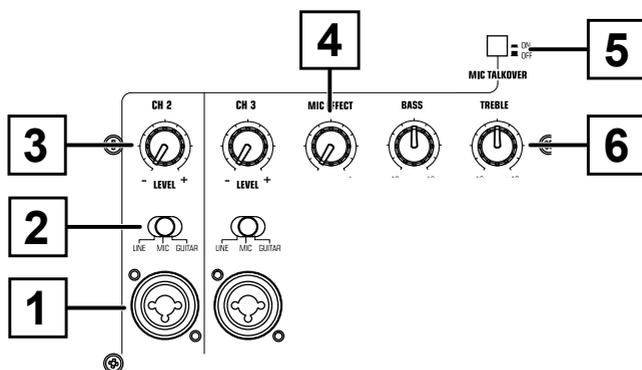

- 1 - Entrée sur fiche combo XLR et Jack 6.35. Permet de brancher une source en niveau ligne, un micro ou une guitare.
- 2 - Sélecteur de niveau d'entrée des canaux 2-3. Permet de sélectionner le niveau de chaque source sur chaque voie.
- 3 - Potentiomètres de réglage du volume des voies 2 et 3. De minimum à maximum dans le sens horaire. Ces réglages agissent sur le niveau de chaque voie.
- 4 - Potentiomètre de réglage du niveau de l'effet appliqué aux voies micro y compris le micro HF.
- 5 - Switch d'activation du talkover des voies micro y compris le micro HF.
- 6 - Réglage basse et aigu du signal en sortie.

4 - 4 : Section Master

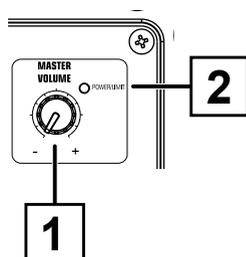

- 1 - Potentiomètre de réglage du volume MASTER. De minimum à maximum dans le sens horaire. Ce réglage agit sur le volume de sortie général du système.
- 2 - Voyant POWER/LIMIT. Permet d'indiquer si le système est sous tension et si le limiteur est actif. Lorsque le voyant est bleu le système est sous tension. Lorsque le voyant clignote en rouge alors cela veut dire que le système de protection limiteur de puissance est actif. Veuillez diminuer le niveau d'entrée de vos sources et/ou du master.

4 - 5 : Section Alimentation

1 - Fiche secteur.

Veillez brancher votre cordon secteur pour recharger la batterie et/ou utiliser votre appareil.

2 - Porte fusible.

Veillez remplacer le fusible par un modèle identique uniquement. Fusible T2AL 250V.

3 - Interrupteur ON-OFF-CHARGE.

- Sur la position ON : Le RACER80 Evo est sous tension secteur.
- Sur la position OFF : Le RACER80 Evo est hors tension secteur.
- Sur la position CHARGE : La batterie du RACER80 Evo est en charge. Pour que la charge puisse se faire il faut que l'interrupteur BATTERY CONNECT soit sur la position ON.

4 - Interrupteur BATTERY CONNECT.

Permet de déconnecter la batterie lorsque le RACER80 n'est pas utilisé pendant une longue période.


Ceci permet d'économiser la durée de vie de la batterie.

L'interrupteur est sur OFF à la livraison.

5 - Voyants du niveau de la batterie.

Il est impératif de charger la batteries lorsque le voyant LOW seul est allumé.

Le Voyant CHARGE de la batterie s'allume en vert lorsque la batterie est en charge.

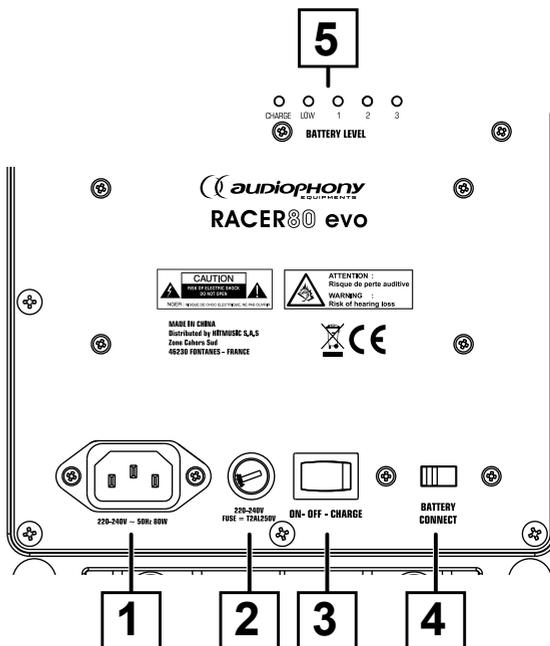

Précautions d'utilisation de la batterie intégrée

1 - Cet appareil est équipé d'une batterie DC 22.2 V 2200 mA Li-ion pour une autonomie de 5 heures en moyenne selon le type d'utilisation.

2 - Le temps de charge complet de la batterie dure environ 6 heures.

3 - Un système de gestion de charge est intégré à l'appareil et vous indique si une recharge est nécessaire.

4 - Si toutefois le niveau de la batteries est faible le voyant «LOW» seul est allumé, branchez votre appareil au secteur.

5 - La batterie usagée doit être prises en charge par le circuit prévu pour ce type de déchet. Ne pas jeter dans la nature.

6 - Pour préserver la batterie veuillez toujours éteindre complètement l'appareil lorsque vous ne l'utilisez pas et mettre l'interrupteur BATTERY CONNECT sur OFF.

7 - La batterie doit être chargée régulièrement pour éviter qu'elle ne sèche et deviennent complètement inutilisable.

Nous vous conseillons de charger la batterie au moins une fois tous les trois mois.


8 - La batterie de cet appareil est considérée comme une pièce d'usure et n'est donc pas couverte par la garantie.

4 - 6 : Module de réception UHF optionnel : RACER-GoMod (F5, F6 ou F8)

Avant toute manipulation, assurez vous que le RACER est hors tension et éteint.

1

Retirez le cache

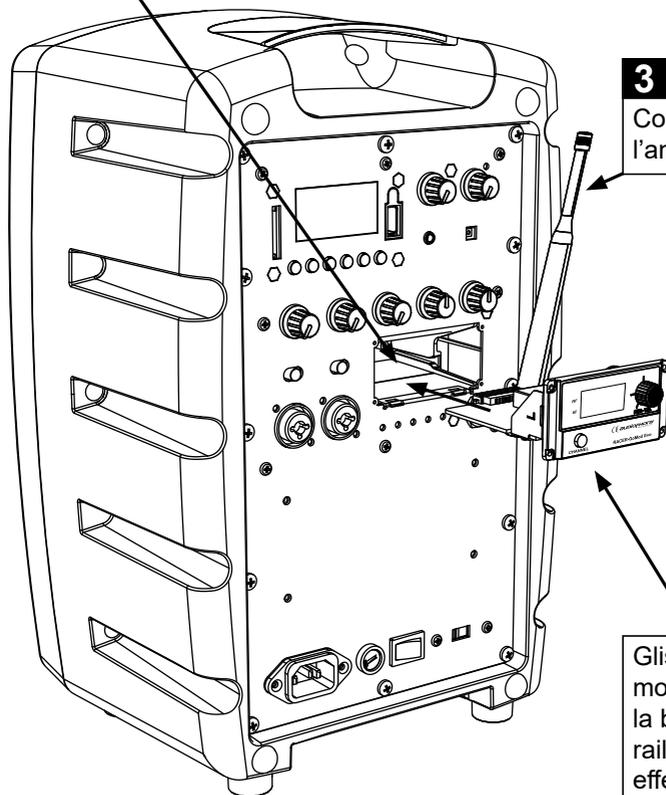

3

Connectez l'antennes BNC.

2

Glissez le module jusqu'à la butée dans les rails prévus à cet effet.

5 - Caractéristiques techniques

Entrées	2 canaux combo XLR/TRS ligne/micro 1 canal AUX jack 3.5 1 connexion Bluetooth® TWS 1 microphone UHF en option			
Sortie	1 Jack TRS mix			
Haut-parleur	HP 6,5" + compression 1" impédance totale de 4 Ohms			
Puissance	Amplificateur classe D 80 W RMS			
Courbe de réponse	80 - 20k Hz			
Pression acoustique	120 dB SPL max			
Micros HF (Option)	RACER-GoMod Récepteur UHFdiversity	Récepteurs	Émetteurs Go	Microphones Go GO-Head Code : H9991 GO-Lava Code : H9992
		RACER-GoModF5 (Gamme F5) Code : H11411	GO-Hand-F5 Code : H11030 GO-Body-F5 Code : H11031	
		RACER-GoModF6 (Gamme F6) Code : H11670	GO-Hand-F6 Code : H11671 GO-Body-F6 Code : H11672	
		RACER-GoModF8 (Gamme F8) Code : H11410	GO-Hand-F8 Code : H9989 GO-Body-F8 Code : H9990	
Bande de fréquences	Gamme F8 : UHF 823~832MHz/863~865 MHz - 10 mW Gamme F6 : UHF 630~660 MHz - 10 mW Gamme F5 : UHF 514~542 MHz - 35 mW			
Lecteur	Lecteur de clef USB ou carte SD et récepteur Bluetooth® TWS intégré Capacité maximale 32 Gb Livré avec télécommande infra rouge			
Bluetooth® TWS	Type V5.0 AVRCP, pour une excellente qualité de transmission audio équivalente au numérique			
Réglages et indicateurs	Réglages indépendants du niveau de chaque voie Égaliseur Basse et aigus de -12 dB à + 12 dB Effets de type ROOM et talkover sur toutes les voies micro Indicateur Power et Limit Indicateurs de charge de la batterie			
Finition	Enceinte moulée en polypropylène, grilles métal. Embase C36 pour pied.			
Dimensions en mm	376.5 x 245 x 200			
Poids net avec batterie	5.9 kg			
Batterie	DC22.2 V 2200 mA - Li-ion			
Autonomie	5 heures en moyenne suivant le volume			
Temps de charge	6 heures environ			
Gestion de l'alimentation	Visualisation du niveau de charge par afficheur à LED. Charge et utilisation simultanée. Coupe automatique en cas de niveau trop faible.			
Option	Housse de protection (code : H10431)			

6 - Tableau des fréquences disponibles

Série F8	
Canal 1	823.175 MHz
Canal 2	823.875 MHz
Canal 3	824.825 MHz
Canal 4	825.425 MHz
Canal 5	826.225 MHz
Canal 6	827.375 MHz
Canal 7	828.225 MHz
Canal 8	828.725 MHz
Canal 9	829.500 MHz
Canal 10	830.575 MHz
Canal 11	831.375 MHz
Canal 12	831.825 MHz
Canal 13	863.275 MHz
Canal 14	863.675 MHz
Canal 15	864.325 MHz
Canal 16	864.725 MHz

Série F6	
Canal 1	630.075 MHz
Canal 2	632.475 MHz
Canal 3	633.175 MHz
Canal 4	634.175 MHz
Canal 5	635.075 MHz
Canal 6	639.075 MHz
Canal 7	640.475 MHz
Canal 8	642.575 MHz
Canal 9	643.675 MHz
Canal 10	647.875 MHz
Canal 11	651.775 MHz
Canal 12	653.375 MHz
Canal 13	654.675 MHz
Canal 14	656.975 MHz
Canal 15	658.975 MHz
Canal 16	659.475 MHz

Série F5	
Canal 1	514.000 MHz
Canal 2	515.500 MHz
Canal 3	517.000 MHz
Canal 4	518.750 MHz
Canal 5	520.500 MHz
Canal 6	522,250 MHz
Canal 7	524.000 MHz
Canal 8	525.750 MHz
Canal 9	526,750 MHz
Canal 10	529.000 MHz
Canal 11	531.500 MHz
Canal 12	533.750 MHz
Canal 13	534.750 MHz
Canal 14	537.000 MHz
Canal 15	539.500 MHz
Canal 16	541.750 MHz

1 - Safety information

Important safety information



This unit is intended for indoor use only. Do not use it in a wet, or extremely cold/hot locations. Failure to follow these safety instructions could result in fire, electric shock, injury, or damage to this product or other property.



Any maintenance procedure must be performed by a CONTEST authorised technical service. Basic cleaning operations must thoroughly follow our safety instructions.



This product contains non-isolated electrical components. Do not undertake any maintenance operation when it is switched on as it may result in electric shock.

Symbols used



This symbol signals an important safety precaution.



The WARNING symbol signals a risk to the user's physical integrity. The product may also be damaged.



The CAUTION symbol signals a risk of product deterioration.

Instructions and recommendations

1 - Please read carefully :

We strongly recommend to read carefully and understand the safety instructions before attempting to operate this unit.

2 - Please keep this manual :

We strongly recommend to keep this manual with the unit for future reference.

3 - Operate carefully this product :

We strongly recommend to take into consideration every safety instruction.

4 - Follow the instructions:

Please carefully follow each safety instruction to avoid any physical harm or property damage.

5 - Avoid water and wet locations :

Do not use this product in rain, or near washbasins or other wet locations.

6 - Installation :

We strongly encourage you to only use a fixation system or support recommended by the manufacturer or supplied with this product. Carefully follow the installation instructions and use the adequate tools.

Always ensure this unit is firmly fixed to avoid vibration and slipping while operating as it may result in physical injury.

7 - Ceiling or wall installation :

Please contact your local dealer before attempting any ceiling or wall installation.

8 - Ventilation :

The cooling vents ensure a safe use of this product, and avoid any overheating risk. Do not obstruct or cover these vents as it may result in overheating and potential physical injury or product damage. This product should never be operated in a closed non-ventilated area such as a flight case or a rack, unless cooling vents are provided for the purpose.

9 - Heat exposure :

Sustained contact or proximity with warm surfaces may cause overheating and product damages. Please keep this product away from any heat source such as a heaters, amplifiers, hot plates, etc...

CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN

 
WARNING : This unit contains no user-serviceable parts. Do not open the housing or attempt any maintenance by yourself. In the unlikely even your unit may require service, please contact your nearest dealer.
In order to avoid any electrical malfunction, please do not use any multi-socket, power cord extension or connecting system without making sure they are perfectly isolated and present no defect.

Sound levels

Our audio solutions deliver important sound pressure levels (SPL) that can be harmful to human authorities when exposed during long periods. Please do not stay in close proximity of operating speakers.

Recycling your device

- As HITMUSIC is really involved in the environmental cause, we only commercialise clean, ROHS compliant products.
- When this product reaches its end of life, take it to a collection point designated by local authorities. The separate collection and recycling of your product at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment.



10 - Electric power supply :

This product can only be operated according to a very specific voltage. These information are specified on the label located at the rear of the product.

11 - Power cords protection:

Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at lugs, convenience receptacles and the point where they exit from the fixture.

12 - Cleaning precautions :

Unplug the product before attempting any cleaning operation. This product should be cleaned only with accessories recommended by the manufacturer. Use a damp cloth to clean the surface. Do not wash this product.

13 - Long periods of non use :

Disconnect the unit's main power during long periods of non use.

14 - Liquids or objects penetration :

Do not let any object penetrate this product as it may result in electric shock or fire. Never spill any liquid on this product as it may infiltrate the electronic components and result in electric shock or fire.

15 - This product should be serviced when :

Please contact the qualified service personnel if :

- The power cord or the plug has been damaged.
- Objects have fallen or liquid has been spilled into the appliance.
- The appliance has been exposed to rain or water.
- The product does not appear to operate normally.
- The product has been damaged.

16 - Inspection/maintenance :

Please do not attempt any inspection or maintenance by yourself. Refer all servicing to qualified personnel.

17 - Operating environment :

Ambient temperature and humidity: +5 - +35°C, relative humidity must be less than 85% (when cooling vents are not obstructed).

Do not operate this product in a non-ventilated, very humid or warm place.

2 - Introduction

Thank you for choosing the RACER80 Evo amplified system.

- All-in-one mains and battery operated system
- Performance and sound quality
- Integrated media player
- Optional UHF diversity system

The RACER80 Evo is a powerful all-in-one system with excellent sound quality for all your mobile performances.


Equipped as standard with a USB/SD player, a Bluetooth® TWS receiver and a mixer allowing the connection of two additional microphones and an external source, the RACER80 is a complete, high-performance and easy-to-use solution.

Compact and light, it operates autonomously thanks to its built-in lithium battery.

For its protection you can add a cover (code: H10431).

- Visualisation of the battery level by LED display
- Simultaneous charging and use
- Automatic switch-off in case of low battery level

3 - The different modules

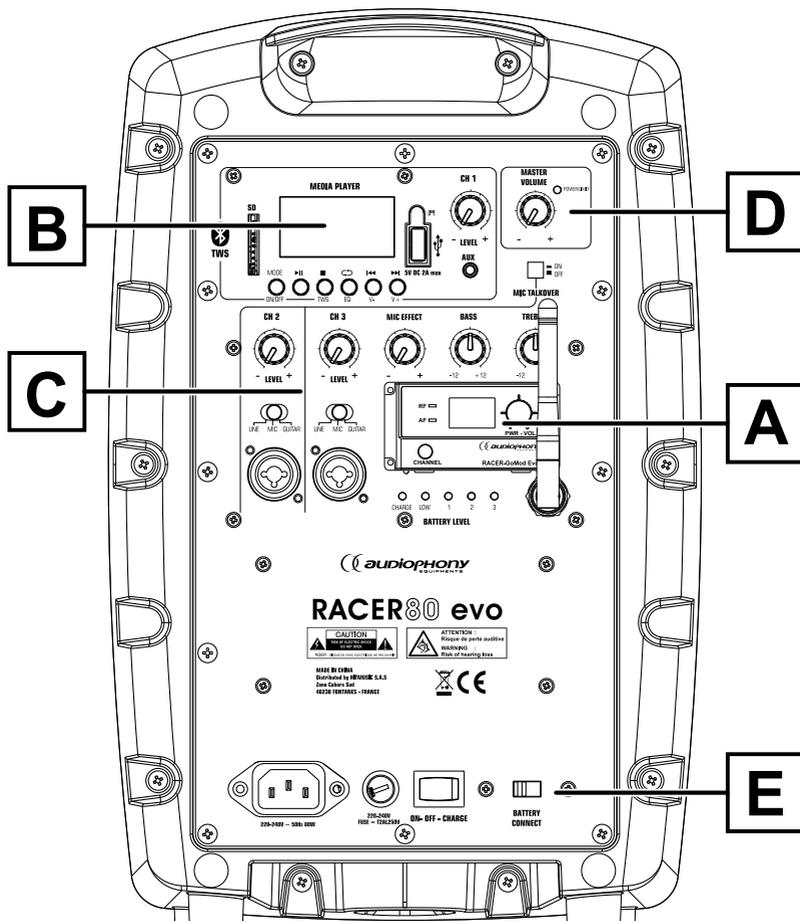

A - Optional UHF receiver module. See 4.6 for installation.

B - USB/SD/Bluetooth® TWS module assigned to channel 1


C - Channel 2 and 3 mixer section

D - Master section

E - Power supply section

4 - Description of modules

4 - 1 : USB/SD/Bluetooth® TWS module

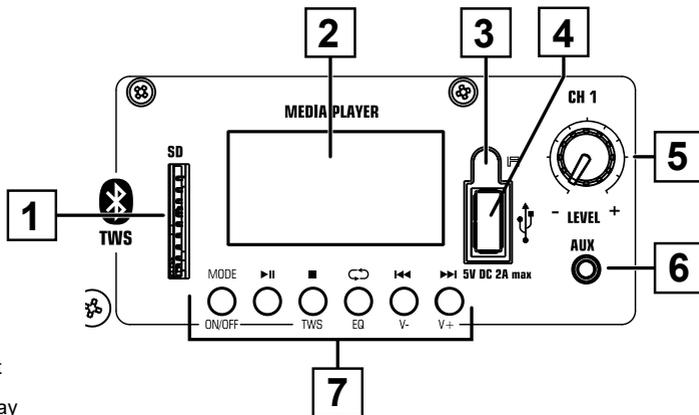

1 - SD card slot

2 - Player display

3 - IR diode for receiving remote control signals









4 - USB mass storage port for USB key. This USB plug can also be used to recharge a phone or a tablet: DC5 V 2 A

5 - Level control: This control is for the multimedia player and the AUX input level

6 - AUX input on 3.5 stereo jack. Priority AUX input on the player as soon as a source is connected.

7 - Multimedia player controls

Action	Display
<p>Switch the player on and off:</p> <p>Long press on the MODE button</p> <p>The player starts up.</p> <p>When the RACER is turned on, the player turns on automatically.</p>	
<p>If no USB or SD media is connected to the player.</p>	
<p>Connecting a USB or SD media :</p> <p>If you connect a USB or SD media containing music tracks, they will be detected automatically.</p> <p>The player automatically switches to stop mode.</p> <p>Press ► to start playback.</p>	

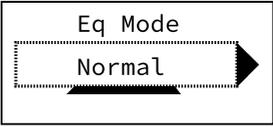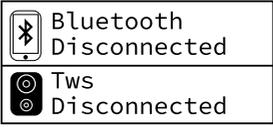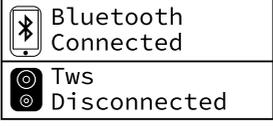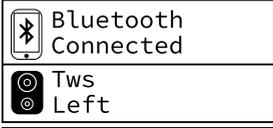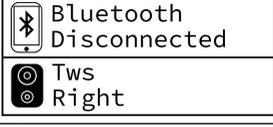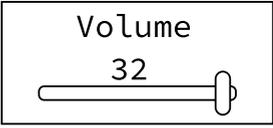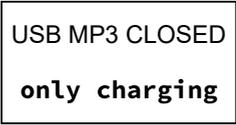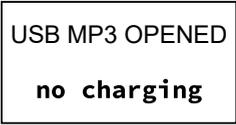Action	Display	
<p>Selecting the repeat mode:</p> <p>Short press on .</p> <p>Different repeat modes are: Repeat All (A) / Repeat One (1) / Repeat Folder (F) / Random (R).</p>		
<p>Choice of equalization mode:</p> <p>Long press on .</p> <p>Different equalization modes are : Normal / Rock / Pop / Classic / Jazz / Country.</p>		
<p>Switch to Bluetooth mode :</p> <p>Short press on MODE.</p>		
<p>Pairing :</p> <p>To pair your RACER80 Evo switch to Bluetooth mode and the display will show «Bluetooth Disconnected». Now you need to pair a Bluetooth source. Turn on your Bluetooth source and perform a device search. Select «RACER» from the list and accept the connection.</p>		
<p>Activate the TWS mode (stereo reproduction with two RACER) :</p> <p>Switch both RACERs to Bluetooth mode. Long press the TWS button on the RACER that is playing the Bluetooth source. The RACERs will automatically switch to TWS mode.</p> <p>Note: The TWS mode works with all models in the RACER Evo range (80 / 120 / 250)</p>	<p>RACER 1</p>	
	<p>RACER 2</p>	
<p>Setting the player level :</p> <p>Long press on V- or V+.</p>		
<p>Activate or deactivate the charger mode of the USB port :</p> <p>In SD and USB mode: Long press on .</p> <p>In BT mode: Short press on the key .</p> <p>When in charge mode, the USB port delivers up to 2 amps, the USB data is inactive and the SD port remains accessible.</p>		

Multimedia player mode displays




	Indicates musical mode.
	Indicates the playback mode. To switch from one mode to another, use key.
0079 0144	The top line shows the number of the current song and the bottom line shows the total number of songs.
POP 	Indicates the current equalization mode.
128 MP3	Indicates the type of file being played and its compression ratio.
	Indicates the media being played.
00:02:12 / 00:04:04	Indicates the time in the song playback / the total time of the song
▶ FILENAME.MP4	Indicates the name of the song being played
	Reading level bar graph
Use and keys to switch from one song to another.	
Use key to start or pause playback.	
Use key to stop playback	


4 - 2 : Remote control

The infrared remote control of your player allows you to remotely control certain functions of your player for your SD/USB or Bluetooth® sources.

- The CH- and CH+ keys are used to move through the folders on the SD or USB media.
- The «EQ» button allows you to select different equalization presets according to different music genres: Normal / Rock / Pop / Classic / Jazz / Country.
- The Vol- and Vol+ keys are used to adjust the output level of the player.
- The «ENTER» key allows you to choose the playback mode: Repeat All (A)/ Repeat One (1)/ Repeat Folder (F)/ Random (R).
- The MODE button activates the Bluetooth® mode
- The 0 to 9 keys allow direct access to a song.

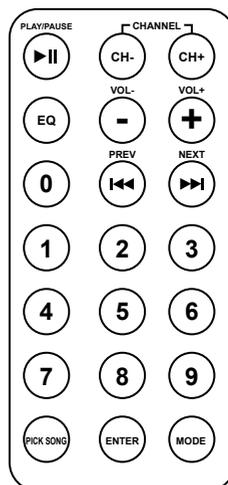


4 - 3 : Mixer section

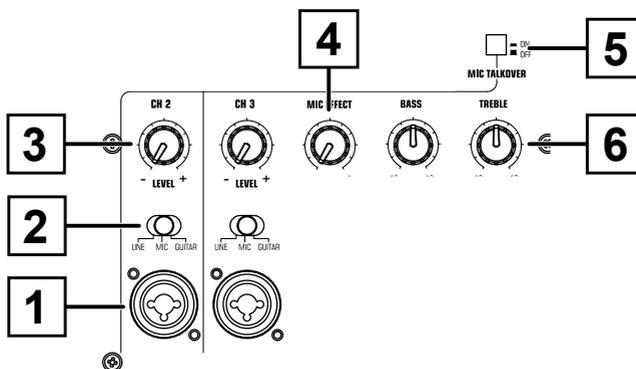

- 1 - Input on combo XLR and 6.35 jack. Allows you to connect a line level source, a microphone or a guitar.
- 2 - Input selector for channels 2-3. Allows you to select the source on each channel.
- 3 - Volume control knobs for channels 2 and 3. From minimum to maximum clockwise. These adjustments affect the level of each channel.
- 4 - Potentiometer for adjusting the level of the effect applied to the microphone channels.
- 5 - MIC TALKOVER button. Activates or deactivates the talkover function on the microphone channels including the HF microphone.
- 6 - Bass and treble adjustment of the output signal.

4 - 4 : Master section

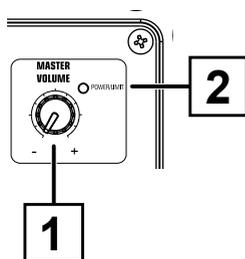

- 1 - MASTER volume control. From minimum to maximum clockwise. This control affects the overall output volume of the system.
- 2 - POWER/LIMIT light. Indicates whether the system is powered and whether the limiter is active. When the light is blue, the system is powered up. When the light is flashing red, it means that the power limiter protection system is active. Please lower the input level of your sources and/or the master.

4 - 5 : Power supply section

1 - Mains plug.

Please plug in your power cord to recharge the battery and/or use your device.

2 - Fuse holder.

Please replace the fuse with an identical model only. Fuse T2AL 250V.

3 - ON-OFF-CHARGE switch.

- In the ON position: The RACER80 Evo is powered on.
- In the OFF position: The RACER80 Evo is off.
- In the CHARGE position: The RACER80 Evo batteries are charging. The BATTERY CONNECT switch must be in the ON position for charging to take place.

4 - BATTERY CONNECT switch.

Disconnects the battery when the RACER80 Evo is not used for a long time.


This saves the battery life.

The switch is set to OFF on delivery.

5 - Battery level indicators.

It is imperative to charge the battery when only the LOW light is on.

The CHARGE indicator of the battery lights up green when the battery is charged.

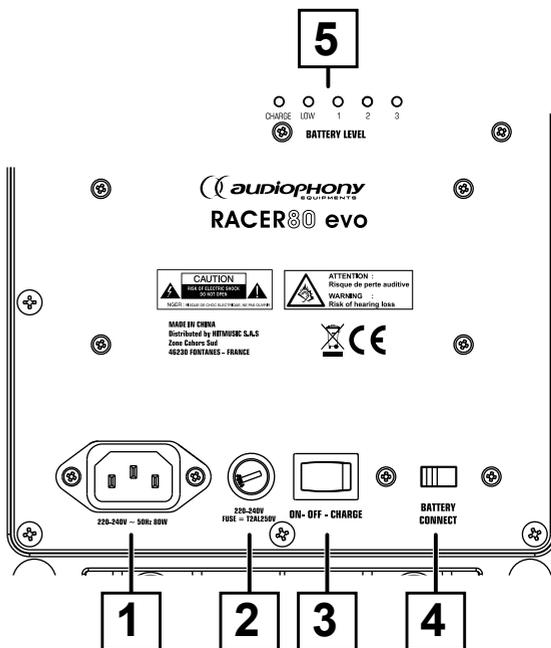

Precautions for using the integrated battery

1 - This device is equipped with a DC22.2 V 2200 mA Li-ion battery for an average autonomy of 5 hours depending on the type of use.

2 - The battery takes about 8 hours to fully charge.

3 - A charge management system is built into the device and tells you when a recharge is needed.

4 - If, however, the battery level is low and only the «LOW» indicator is lit, connect your device to the mains or replace the batteries with charged ones.

5 - The used battery must be disposed of in the appropriate waste disposal system. Do not dispose of in the environment.


6 - To conserve battery power, always turn the unit completely off and set the BATTERY CONNECT switch to the OFF position when not in use.

7 - Battery must be charged regularly to prevent them from drying out and becoming completely unusable. We recommend charging the battery at least once every three months.

8 - The battery in this unit is considered wear parts and is not covered by the warranty.

4 - 6 : Optional UHF receiver module: RACER-GoMod (F5, F6 or F8)

Before handling, make sure that the RACER is switched off.

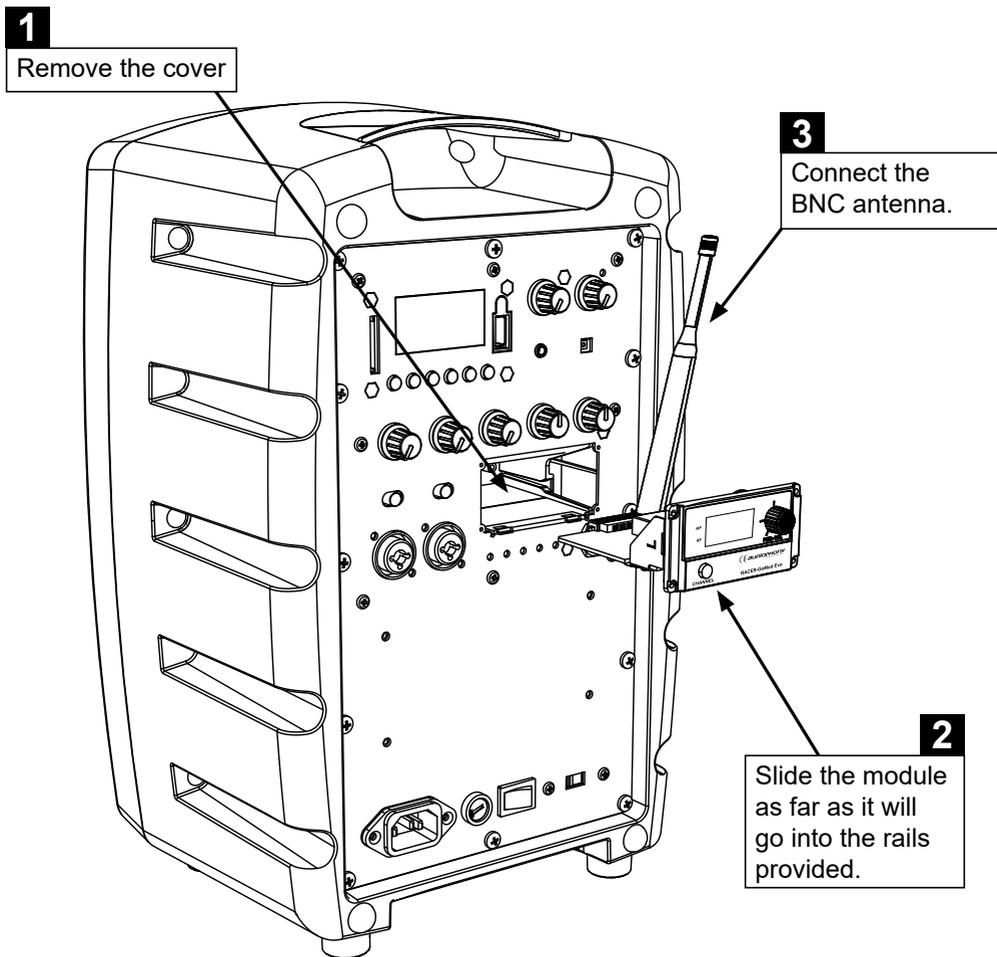

5 - Technical data

Inputs	2 channels XLR/TRS combo Line/Mic input 1 1/8" AUX channel 1 TWS Bluetooth connexion 1 optional UHF microphone			
Outputs	1 TRS mix output			
Loudspeaker	6.5" loudspeaker + 1" titanium driver, total impedance: 4 Ohms			
Power	80 W RMS Class D amplifier			
Frequency response	80 - 20k Hz			
Sound pressure level	120 dB SPL max			
HF microphone (Option)	RACER-GoMod UHFdiversity receiver	Receivers	Go emitters	Go microphones
		RACER-GoModF5 (F5 range) Code : H11411	GO-Hand-F5 Code : H11030 GO-Body-F5 Code : H11031	GO-Head Code : H9991 GO-Lava Code : H9992
		RACER-GoModF6 (F6 range) Code : H11411	GO-Hand-F6 Code : H11671 GO-Body-F6 Code : H11672	
RACER-GoModF8 (Gamme F8) Code : H11410	GO-Hand-F8 Code : H9989 GO-Body-F8 Code : H9990			
Frequency range	F8 range : UHF 823~832 MHz and 863~865 Mhz - 10 mW F6 range : UHF 630~660 MHz - 10 mW F5 range : UHF 514~542 MHz - 35 mW			
Reader	Built-in USB key / SD card reader and Bluetooth® receiver Maximum capacity 32 Gb Supplied with an infrared remote control			
Bluetooth®	Type V5.0 AVRCP, with an excellent, close-to-digital audio transmission			
Settings and indicators	Independent level settings for each channel Low and treble equalizer from -12dB to + 12dB ROOM and talkover effects on all mic channels Power and Limit Indicator Battery charge indicators			
Finish	Polypropylene housing, metal mesh grill. C36 mounting plate for speaker stands			
Dimensions (in mm)	376.5 x 245 x 200			
Net weight (incl. batteries)	5.9 kg			
Battery	DC22.2 V 2200 mA - Li-ion			
Autonomy	5 hours depending on the volume			
Charging time	Approximately 6 hours			
Power management	LED display to indicate the charge level. Charge it and use it at the same time. Automatic shutdown if the battery level is too low.			
Option	Protective cover (code: H10431)			

6 - Available frequencies

F8 series	
Channel 1	823.175 MHz
Channel 2	823.875 MHz
Channel 3	824.825 MHz
Channel 4	825.425 MHz
Channel 5	826.225 MHz
Channel 6	827.375 MHz
Channel 7	828.225 MHz
Channel 8	828.725 MHz
Channel 9	829.500 MHz
Channel 10	830.575 MHz
Channel 11	831.375 MHz
Channel 12	831.825 MHz
Channel 13	863.275 MHz
Channel 14	863.675 MHz
Channel 15	864.325 MHz
Channel 16	864.725 MHz

F6 series	
Channel 1	630.075 MHz
Channel 2	632.475 MHz
Channel 3	633.175 MHz
Channel 4	634.175 MHz
Channel 5	635.075 MHz
Channel 6	639.075 MHz
Channel 7	640.475 MHz
Channel 8	642.575 MHz
Channel 9	643.675 MHz
Channel 10	647.875 MHz
Channel 11	651.775 MHz
Channel 12	653.375 MHz
Channel 13	654.675 MHz
Channel 14	656.975 MHz
Channel 15	658.975 MHz
Channel 16	659.475 MHz

F5 series	
Channel 1	514.000 MHz
Channel 2	515.500 MHz
Channel 3	517.000 MHz
Channel 4	518.750 MHz
Channel 5	520.500 MHz
Channel 6	522,250 MHz
Channel 7	524.000 MHz
Channel 8	525.750 MHz
Channel 9	526,750 MHz
Channel 10	529.000 MHz
Channel 11	531.500 MHz
Channel 12	533.750 MHz
Channel 13	534.750 MHz
Channel 14	537.000 MHz
Channel 15	539.500 MHz
Channel 16	541.750 MHz

La société AUDIOPHONY® apporte le plus grand soin à la fabrication de ses produits pour vous garantir la meilleure qualité. Des modifications peuvent donc être effectuées sans notification préalable. C'est pourquoi les caractéristiques techniques et la configuration physique des produits peuvent différer des spécifications et illustrations présentées dans ce manuel.

Pour bénéficier des dernières informations et mises à jour sur les produits AUDIOPHONY® connectez-vous sur www.audiophony.com
AUDIOPHONY® est une marque déposée par **HITMUSIC S.A.S** - 595 Rue de la Pièce Grande - 46230 FONTANES - FRANCE

Because AUDIOPHONY® takes the utmost care in its products to make sure you only get the best possible quality, our products are subjects to modifications without prior notice. That is why technical specifications and the products physical configuration might differ from the illustrations.

Make sure you get the latest news and updates about the AUDIOPHONY® products on www.audiophony.com
AUDIOPHONY® is a trademark of **HITMUSIC S.A.S** - 595 Rue de la Pièce Grande - 46230 FONTANES - FRANCE