


**datavideo**

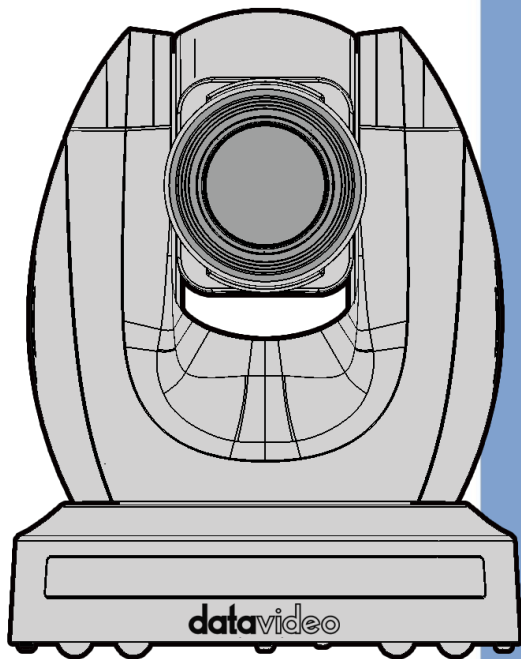

4K 30X TRACKING

PTZ CAMERA

PTC-325

**Instruction Manual**

[www.datavideo.com](http://www.datavideo.com)

# Table of Contents

<b>TABLE OF CONTENTS .....</b>	<b>2</b>
<b>FCC COMPLIANCE STATEMENT .....</b>	<b>5</b>
<b>WARNINGS AND PRECAUTIONS .....</b>	<b>5</b>
<b>WARRANTY .....</b>	<b>6</b>
<b>STANDARD WARRANTY .....</b>	<b>6</b>
<b>THREE YEAR WARRANTY.....</b>	<b>7</b>
<b>DISPOSAL .....</b>	<b>8</b>
<b>1. PRODUCT OVERVIEW .....</b>	<b>9</b>
<b>FEATURES.....</b>	<b>9</b>
<b>2. SYSTEM DIAGRAM .....</b>	<b>10</b>
<b>3. LOCATION AND FUNCTION OF PARTS .....</b>	<b>11</b>
<b>FRONT .....</b>	<b>11</b>
<b>REAR .....</b>	<b>12</b>
<b>BOTTOM .....</b>	<b>14</b>
<b>4. INSTALLATION INSTRUCTIONS .....</b>	<b>16</b>
<b>5. NETWORK CONNECTION .....</b>	<b>21</b>
<b>DHCP MODE .....</b>	<b>21</b>
<b>STATIC IP .....</b>	<b>23</b>
<b>DVIP .....</b>	<b>23</b>
<b>6. BASIC SETUP .....</b>	<b>26</b>
<b>POWER-ON INITIALIZATION.....</b>	<b>26</b>
<b>VIDEO OUTPUT .....</b>	<b>26</b>
<b>NDI HX3/DVIP/LAN Port.....</b>	<b>26</b>
<b>HDMI Video OUT .....</b>	<b>31</b>
<b>3G-SDI Video Output.....</b>	<b>31</b>
<b>7. IR REMOTE CONTROL AND ON-SCREEN MENU.....</b>	<b>32</b>
<b>IR REMOTE CONTROL.....</b>	<b>32</b>
<b>OSD MENU.....</b>	<b>36</b>
<b>8. WEB USER INTERFACE .....</b>	<b>43</b>

<b>CAMERA CONTROL</b>	43
<b>Focus</b>	44
<b>Zoom</b>	44
<b>Pan and Tilt</b>	45
<b>Speed</b>	45
<b>AT</b>	45
<b>Home</b>	45
<b>Presets</b>	45
<b>CAMERA SETUP</b>	46
<b>Basic Image Settings (Page 1)</b>	46
<b>Exposure (Page 1)</b>	46
<b>White Balance (Page 1)</b>	48
<b>Advanced Image Settings (Page 2)</b>	49
<b>VIDEO OUTPUT</b>	50
<b>STREAM</b>	51
<b>RTP Multicast</b>	53
<b>RTSP</b>	55
<b>RTMP(S)</b>	56
<b>SRT</b>	65
<b>NDI (NDI-Enabled Cameras Only)</b>	71
<b>ONVIF</b>	72
<b>NETWORK</b>	73
<b>Network Settings</b>	73
<b>NTP Settings</b>	74
<b>AUDIO</b>	74
<b>Audio Input</b>	74
<b>Soundtrack</b>	74
<b>Audio Standard</b>	74
<b>Sample Rate</b>	74
<b>Bitrate</b>	74
<b>ADTS Options</b>	74
<b>SYSTEM</b>	75
<b>General</b>	75
<b>Firmware</b>	75
<b>Account and Password</b>	75
<b>AUTO-TRACKING</b>	76
<b>Mode</b>	76
<b>Figure Size</b>	77
<b>AT Speed</b>	78

<b>9. REMOTE CONTROL.....</b>	<b>79</b>
RS-232/RS-422 .....	79
Wi-Fi .....	81
<b>10. FIRMWARE UPDATE.....</b>	<b>82</b>
ETHERNET PORT .....	82
Requirements .....	82
Procedure .....	82
<b>11. FREQUENTLY-ASKED QUESTIONS.....</b>	<b>84</b>
<b>12. DIMENSIONS.....</b>	<b>86</b>
<b>13. SPECIFICATIONS.....</b>	<b>87</b>
<b>SERVICE AND SUPPORT .....</b>	<b>92</b>

#### **Disclaimer of Product and Services**

The information offered in this instruction manual is intended as a guide only. At all times, Datavideo Technologies will try to give correct, complete and suitable information. However, Datavideo Technologies cannot exclude that some information in this manual, from time to time, may not be correct or may be incomplete. This manual may contain typing errors, omissions or incorrect information. Datavideo Technologies always recommend that you double check the information in this document for accuracy before making any purchase decision or using the product. Datavideo Technologies is not responsible for any omissions or errors, or for any subsequent loss or damage caused by using the information contained within this manual. Further advice on the content of this manual or on the product can be obtained by contacting your local Datavideo Office or dealer.

## FCC Compliance Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

## Warnings and Precautions

1. Read all of these warnings and save them for later reference.
2. Follow all warnings and instructions marked on this unit.
3. Unplug this unit from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
4. Do not use this unit in or near water.
5. Do not place this unit on an unstable cart, stand, or table. The unit may fall, causing serious damage.
6. Slots and openings on the cabinet top, back, and bottom are provided for ventilation. To ensure safe and reliable operation of this unit, and to protect it from overheating, do not block or cover these openings. Do not place this unit on a bed, sofa, rug, or similar surface, as the ventilation openings on the bottom of the cabinet will be blocked. This unit should never be placed near or over a heat register or radiator. This unit should not be placed in a built-in installation unless proper ventilation is provided.
7. This product should only be operated from the type of power source indicated on the marking label of the AC adapter. If you are not sure of the type of power available, consult your Datavideo dealer or your local power company.
8. Do not allow anything to rest on the power cord. Do not locate this unit where the power cord will be walked on, rolled over, or otherwise stressed.
9. If an extension cord must be used with this unit, make sure that the total of the ampere ratings on the products plugged into the extension cord do not exceed the extension cord's rating.



10. Make sure that the total amperes of all the units that are plugged into a single wall outlet do not exceed 15 amperes.
11. Never push objects of any kind into this unit through the cabinet ventilation slots, as they may touch dangerous voltage points or short out parts that could result in risk of fire or electric shock. Never spill liquid of any kind onto or into this unit.
12. Except as specifically explained elsewhere in this manual, do not attempt to service this product yourself. Opening or removing covers that are marked "Do Not Remove" may expose you to dangerous voltage points or other risks, and will void your warranty. Refer all service issues to qualified service personnel.
13. Unplug this product from the wall outlet and refer to qualified service personnel under the following conditions:
  - a. When the power cord is damaged or frayed;
  - b. When liquid has spilled into the unit;
  - c. When the product has been exposed to rain or water;
  - d. When the product does not operate normally under normal operating conditions. Adjust only those controls that are covered by the operating instructions in this manual; improper adjustment of other controls may result in damage to the unit and may often require extensive work by a qualified technician to restore the unit to normal operation;
  - e. When the product has been dropped or the cabinet has been damaged;
  - f. When the product exhibits a distinct change in performance, indicating a need for service.

## **Warranty**

### ***Standard Warranty***

- Datavideo equipment are guaranteed against any manufacturing defects for one year from the date of purchase.
- The original purchase invoice or other documentary evidence should be supplied at the time of any request for repair under warranty.
- The product warranty period begins on the purchase date. If the purchase date is unknown, the product warranty period begins on the thirtieth day after shipment from a Datavideo office.


- All non-Datavideo manufactured products (product without Datavideo logo) have only one year warranty from the date of purchase.
- Damage caused by accident, misuse, unauthorized repairs, sand, grit or water is not covered under warranty.
- Viruses and malware infections on the computer systems are not covered under warranty.
- Any errors that are caused by unauthorized third-party software installations, which are not required by our computer systems, are not covered under warranty.
- All mail or transportation costs including insurance are at the expense of the owner.
- All other claims of any nature are not covered.
- All accessories including headphones, cables, and batteries are not covered under warranty.
- Warranty only valid in the country or region of purchase.
- Your statutory rights are not affected.

### ***Three Year Warranty***

- All Datavideo products purchased after July 1st, 2017 are qualified for a free two years extension to the standard warranty, providing the product is registered with Datavideo within 30 days of purchase.
- Certain parts with limited lifetime expectancy such as LCD panels, DVD drives, Hard Drive, Solid State Drive, SD Card, USB Thumb Drive, Lighting, PCIe Card are covered for 1 year.
- The three-year warranty must be registered on Datavideo's official website or with your local Datavideo office or one of its authorized distributors within 30 days of purchase.



# Disposal

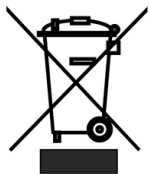

## **For EU Customers only - WEEE Marking**

This symbol on the product or on its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, your household waste disposal service or the shop where you purchased the product.




# 1. Product Overview

The PTC-325 series 4K 30X Tracking PTZ Camera incorporates a 1/2.8" CMOS sensor, enabling superior 2160p50/60 UHD video output. It boasts a 30x optical zoom, complemented by a 16x digital zoom and offers multiple output interfaces like 3G-SDI, HDMI and IP streaming. Elevate your remote video production effortlessly with the PTC-325 series—a clear frontrunner for enhanced capabilities.

## Features

- 2160p50/59.94/60 PTZ camera
- 30x Optical Zoom, 16x Digital Zoom
- 4K Video interfaces: HDMI, H.264/H.265 Streaming
- 2160p and 1080p (3G-SDI) Simultaneous video output
- RS-422 Serial Port Control
- External audio input: 3.5mm audio in/line in (switchable on the web UI)
- Friendly web UI
- White color model available.

## 2. System Diagram

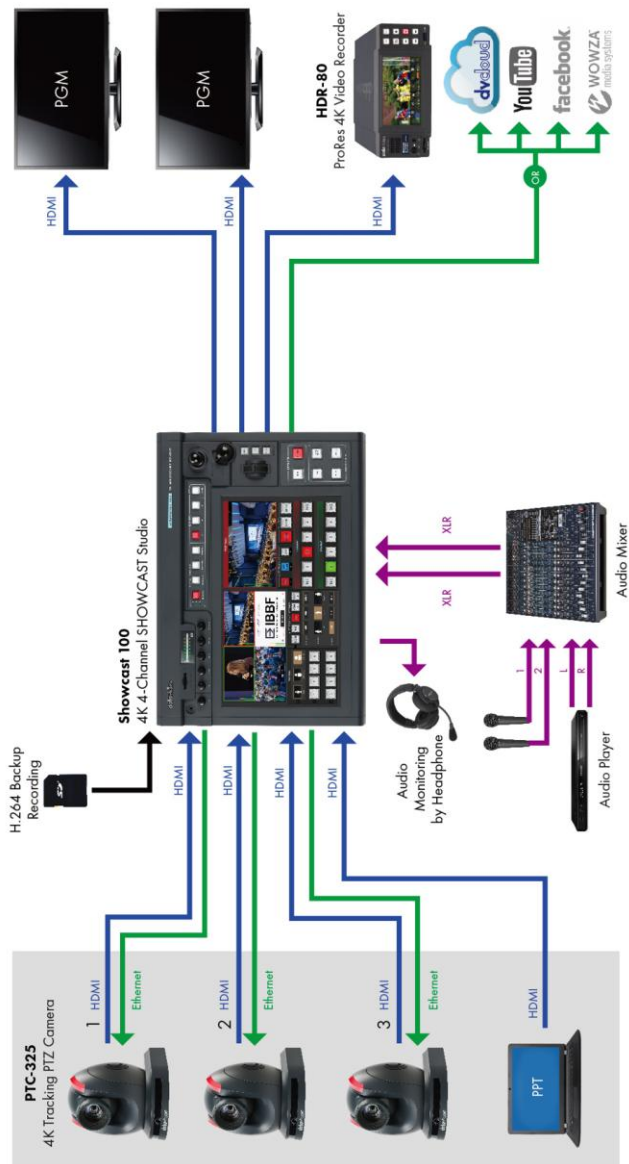

### 3. Location and Function of Parts


#### Front

 A front-facing view of a black, dome-shaped 4K camera mounted on a base. The camera has a large lens in the center. Two red Tally LEDs are positioned on the upper sides of the camera body. A small sensor is located on the front of the base. Red lines with circular numbers 1, 2, and 3 point to the lens, the Tally LEDs, and the sensor respectively. The base features a '4K' logo and the 'datavideo' brand name.	
1	<b>Lens</b> Built-in 1/2.8" 8.46M Pixel CMOS 4K color camera with white balance control, backlight compensation, automatic gain, etc.
2	<b>Tally LED</b> Tally lamp will be turned ON upon receiving the ON signal.
3	<b>Sensor for Remote Control</b> Remote control IR receiver

## Rear




1	<b>USB Port</b> Insert a USB drive containing the latest firmware file and use the OSD menu to start the firmware upgrade process. <b>Note:</b> See <a href="#">Firmware Update</a> section for details.
2	<b>Power Input</b> DC in socket connects the supplied 12V PSU. The connection can be secured by screwing the outer fastening ring of the DC In plug to the socket.
3	<b>4K HDMI OUT</b> The <b>4K HDMI OUT</b> allows you to connect an external HDMI monitor via an HDMI cable.

4	<p><b>3G-SDI OUT</b></p> <p>The <b>3G-SDI OUT</b> allows you to connect an external monitor via an SDI cable.</p>
5	<p><b>MIC IN/LINE IN</b></p> <p>The 3.5mm audio input receives external audio.</p> <p><b>Note:</b> Use the <a href="#">OSD Menu</a> or <a href="#">Web UI</a> to switch between MIC IN and LINE IN.</p>
6	<p><b>RS-232/RS-422 Interface (RJ-45)</b></p> <p>The RS-232/RS-422 interface is designed to connect an external RS-232/RS-422 device using a custom Ethernet cable. See the section on <a href="#">RS-232/RS-422</a> for wiring pinouts.</p>
7	<p><b>IRID DIP Switch</b></p> <p>The IRID DIP Switch is used to assign an ID number (1 to 4) to the camera. Simply toggle switches 1 and 2 on/off according to one of the combinations listed below to assign an ID number to the camera so that the user can use the IR remote control's camera select keys to select the camera.</p> <div style="display: flex; align-items: center;">  <div style="margin-left: 20px;"> <p><b>(1,2) = (0,0) CAM1</b></p> <p><b>(1,2) = (1,0) CAM2</b></p> <p><b>(1,2) = (0,1) CAM3</b></p> <p><b>(1,2) = (1,1) CAM4</b></p> </div> </div> <p><b>Note:</b> Switches 3/4 should be always OFF.</p>
8	<p><b>NDI HX3/DVIP/LAN Interface</b></p> <p>The DVIP interface is a protocol designed by Datavideo to allow the user to access the camera's Web UI by simply connecting a PC to the camera using a standard Ethernet cable. See <a href="#">Network Connection</a> for establishing connection and <a href="#">Web User Interface</a> for accessing the camera's internal settings.</p> <p>The <b>NDI HX3</b> interface allows the user to access the camera's internal settings by simply connecting a PC with NewTek's "<a href="#">NDI Studio Monitor</a>" installed to the camera with an Ethernet cable. Alternatively, you can connect the camera and your PC to the same network so that as soon as the camera is powered ON, you will immediately see the camera video appear in NDI Studio Monitor as well as other NDI compatible receiving devices. See <a href="#">Network Connection</a> for establishing connection and <a href="#">Web User Interface</a> for accessing the camera's internal settings.</p>

	The LAN interface allows users to stream the images captured by the camera to the desired online streaming platform.
--	--

## Bottom

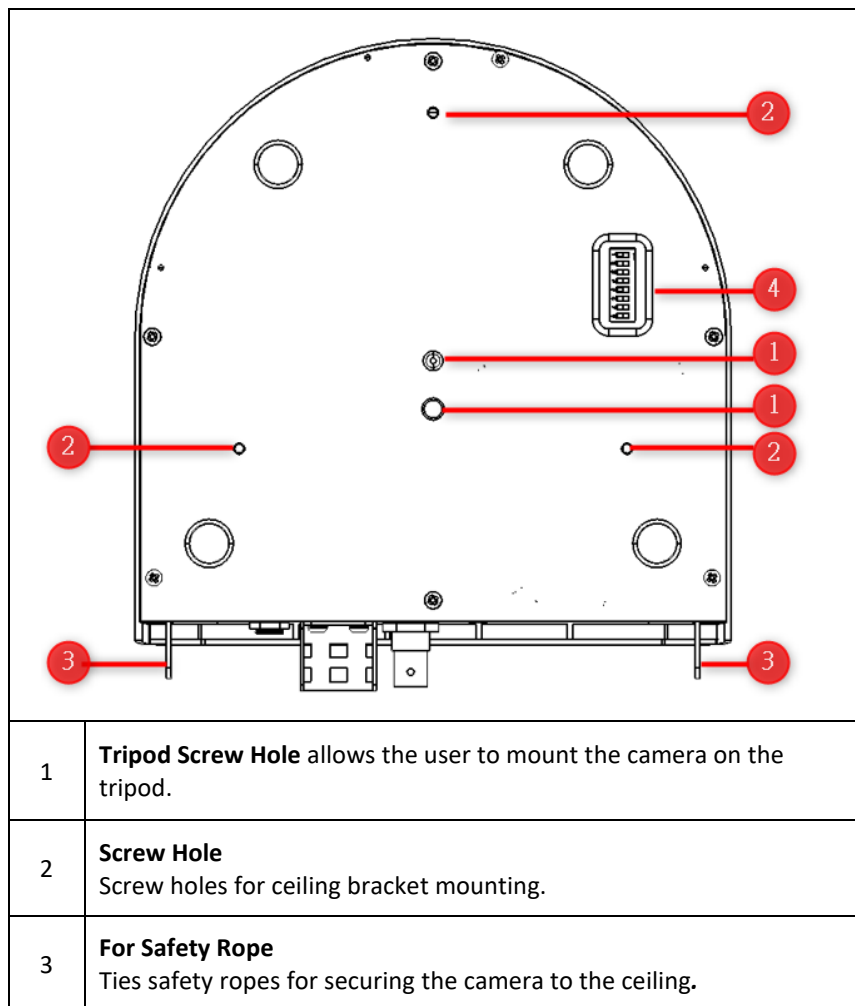

# DIP Switch



The DIP Switch allows the user to set the camera's VISCA ID, select the video resolution, and configure how the video format (or resolution) can be selected. See the following table for corresponding settings:

DIP SW 1/2/3	VISCA ID
(1,2,3) = (1,0,0)	VISCA-ID 1
(1,2,3) = (0,1,0)	VISCA-ID 2
(1,2,3) = (1,1,0)	VISCA-ID 3
(1,2,3) = (0,0,1)	VISCA-ID 4
(1,2,3) = (1,0,1)	VISCA-ID 5
(1,2,3) = (0,1,1)	VISCA-ID 6
(1,2,3) = (1,1,1)	VISCA-ID 7
DIP SW 4	Reserved
(4) = (Reserved)	
DIP SW 5/6/7	Resolution
(5,6,7) = (0,0,0)	1920 x 1080i 59.94
(5,6,7) = (1,0,0)	1920 x 1080i 50
(5,6,7) = (0,1,0)	1920 x 1080p 59.94
(5,6,7) = (1,1,0)	1920 x 1080p 50
(5,6,7) = (0,0,1)	3840 x 2160p 29.97
(5,6,7) = (1,0,1)	3840 x 2160p 25
(5,6,7) = (0,1,1)	3840 x 2160p 59.94
(5,6,7) = (1,1,1)	3840 x 2160p 50
DIP SW 8	Video Format (Resolution) Selection Means
1	DIP switch
0	OSD Menu

## 4. Installation Instructions


**Note:** Only mount the bracket on formwork or concrete surface. Do NOT mount the bracket on plasterboard.

### Step 1 – DIP Switch Setting

Enable Flip-H and Flip-V.

### Step 2 – One End of Retaining Wire

Attach the retaining wire to the junction box mounted on the ceiling by screwing one end of the retaining wire into a screw hole in the junction box with a screw (not supplied) as shown in the diagram below.

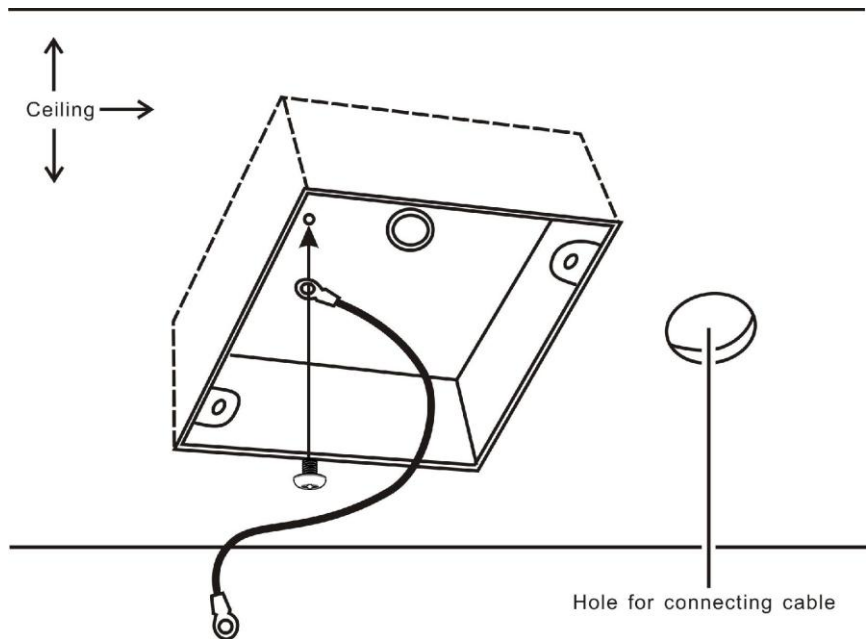


### Step 3 – Ceiling Bracket (B)

Again, as illustrated in the diagram below, screw a ceiling bracket (B) into the junction box mounted on the ceiling.

Make sure the screw holes of the ceiling bracket (B) are aligned with the holes on the junction box.




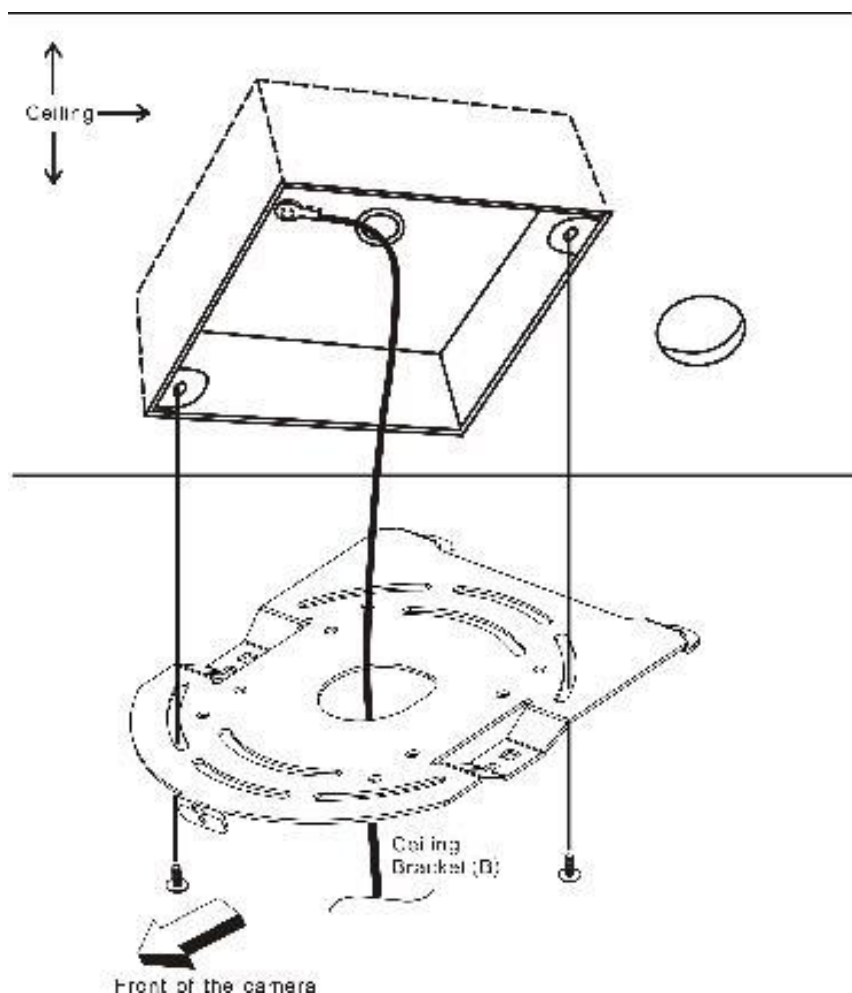


#### Step 4 – Ceiling Bracket (A) and Camera

- Screw ceiling bracket (A) into the bottom of the camera using three screws.
- Position the screws as shown in the diagram below.
- Align the screw holes on the bottom of the camera with those in the ceiling bracket.
- Insert the screws into the corresponding screw holes in the numbered order.

- The other end of the retaining wire is screwed into the screw hole #3.
- Securely tighten all three screws.

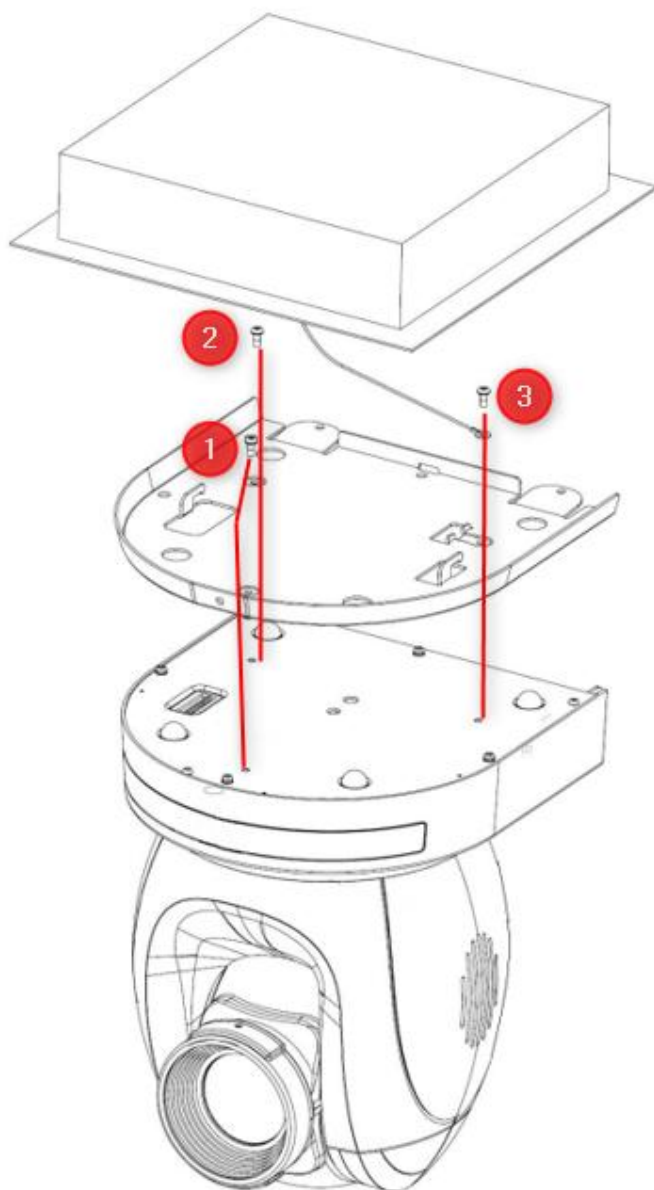


## Step 5 – Mount Camera to Ceiling

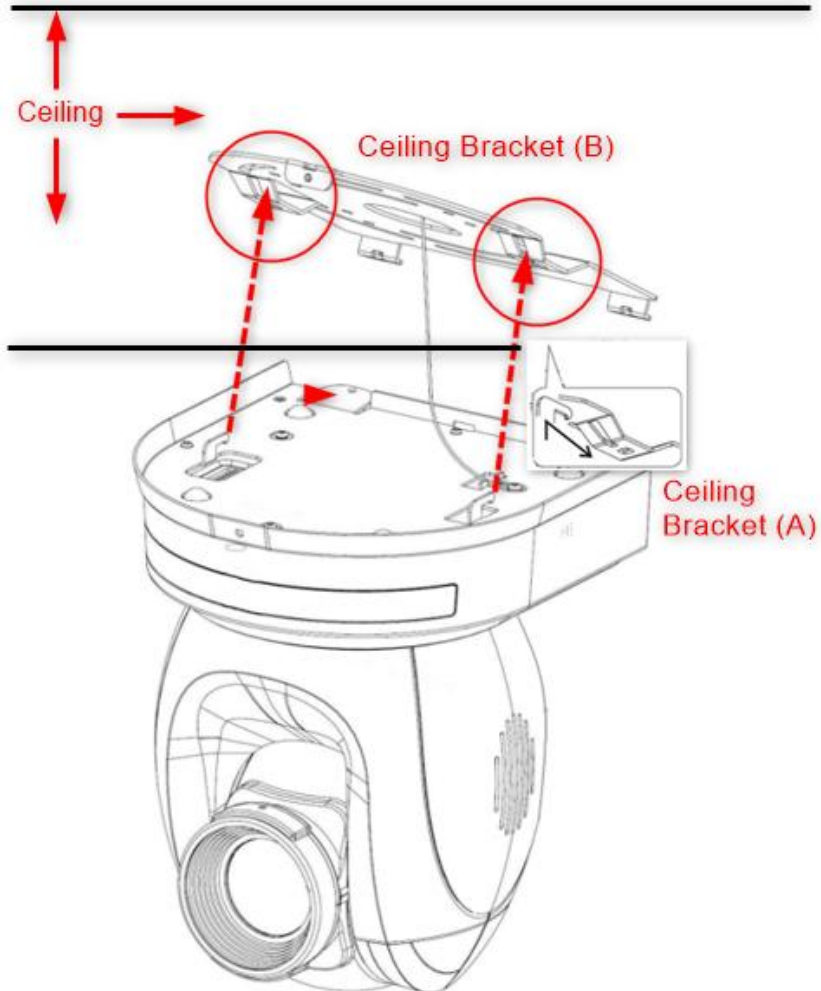


## Step 6 – Screw to Secure Camera

Secure the camera by screwing three screws into the corresponding screw holes as shown in the diagram below.

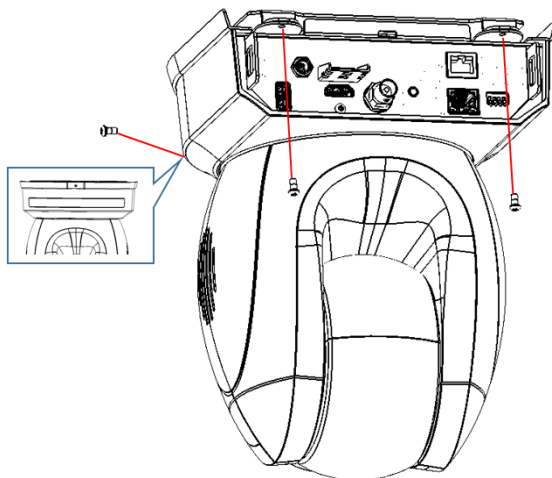

## Step 7 – Cable Connection

Connect the cables to the connectors located on the rear of the camera.

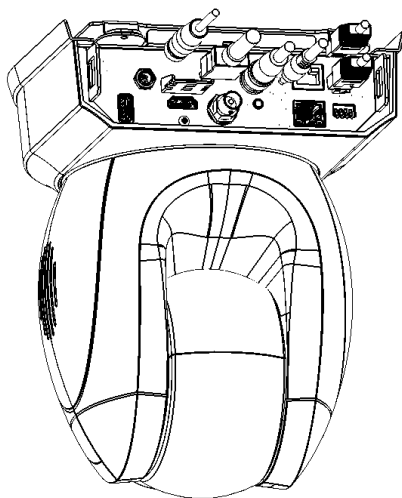

## 5. Network Connection


The Ethernet port on the back panel of your PTC-325 allows you to connect a PC/laptop to the camera with a static or dynamic IP address. To access and modify these network settings, you will need to log in to the camera's web interface.

If this is your first time using the device, please note that the camera's default connection mode is DHCP.

In this chapter, we will show you how to use the web UI to configure DHCP and Static IP modes in two separate sections.

### DHCP Mode

Dynamic Host Configuration Protocol (DHCP) is a network protocol that enables a server to allocate an IP address to a DHCP client device from defined IP address pools configured for a given network. An example DHCP server setup is illustrated in the diagram below.

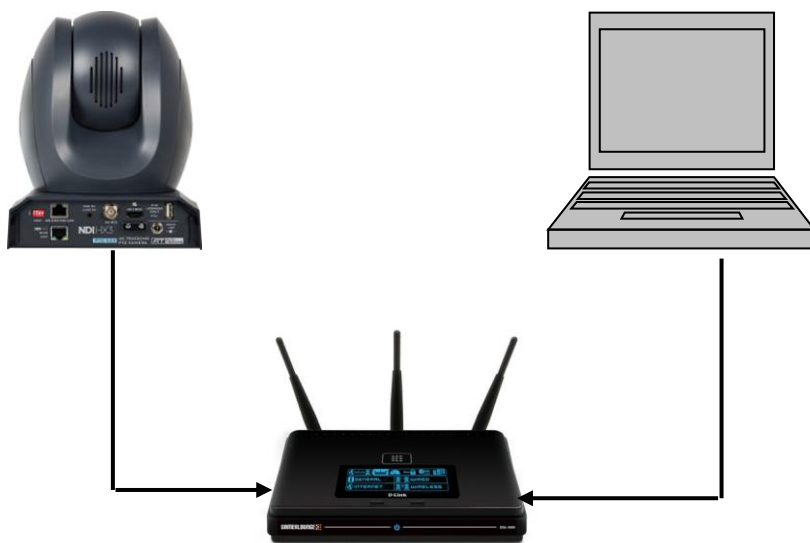


After connection has been successfully established, on your PC/laptop, use DVIP Configuration Tool to search for the camera's IP address. If you are new to DVIP, see the [DVIP](#) section for more descriptions of the tool.


Open a web browser and in the address bar, enter the camera's IP address then press the **ENTER** key which should take you to the login page of the web interface.

The default login credentials are:

- User Name: admin
- Password: admin

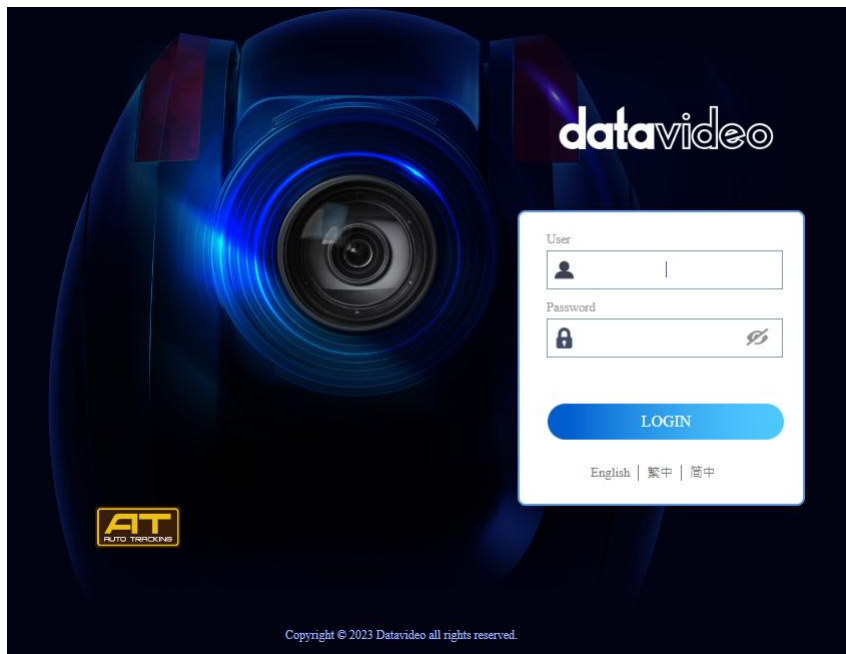

Once you are logged in, open the Network page to modify the network settings accordingly.

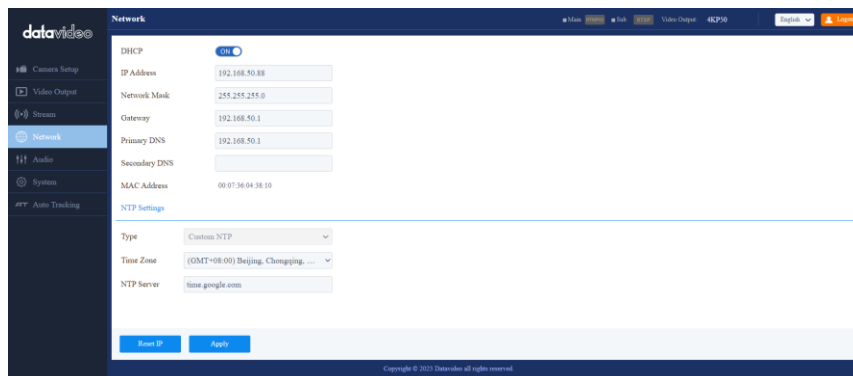


## Static IP

A static IP address is a fixed address manually assigned to PTC-325. First disable DHCP mode then enter an IP address for the camera, as well as the subnet mask and the gateway IP.

**Note: Never assign an address that ends in .0 or .255 as these addresses are typically reserved for network protocols. An address to the very start of the IP pool is also not recommended as it is always reserved for the router.**

After you've configured the camera's static IP mode, click the "Apply" button to save the new settings then reboot PTC-325.

Now set up direct connection between the camera and your PC/laptop as depicted in the diagram below; remember to manually assign an IP address to your PC/laptop. The first three octets of the IP addresses should be the same.

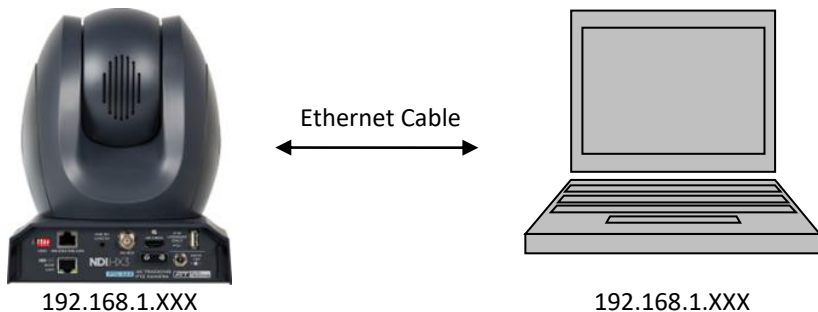

## DVIP

DVIP is an Ethernet-based protocol designed by Datavideo to connect a network of Datavideo devices. DVIP Configuration Tool is a special network configuration software tool designed for DVIP device search on the same network and configuring device network settings such as Hostname, DHCP mode, IP address, subnet mask, gateway IP, and primary and secondary DNS.

Depending on your operating system, download DVIP Configuration Tool from the respective sites listed as follows:

PC: <https://www.microsoft.com/en-us/p/dvip-network-config/9p6gtz839k6s?activetab=pivot%3Aoverviewtab>

Android:

[https://play.google.com/store/apps/details?id=com.datavideo.dvipnetconfig&hl=en\\_US](https://play.google.com/store/apps/details?id=com.datavideo.dvipnetconfig&hl=en_US)


iOS: <https://itunes.apple.com/tw/app/dvip-network-config/id1177895983?mt=8>

After you've installed the DVIP Network Configuration Tool, follow the steps outlined below to scan for online DVIP devices and configure their corresponding settings.

Step 1: Open the DVIP Network Configuration Tool then select your PC or laptop's network interface card from the drop-down menu in the pop-up window as shown in the diagram below.




Step 2: The DVIP Network Configuration Tool interface is shown below and you should see a list of the connected cameras.

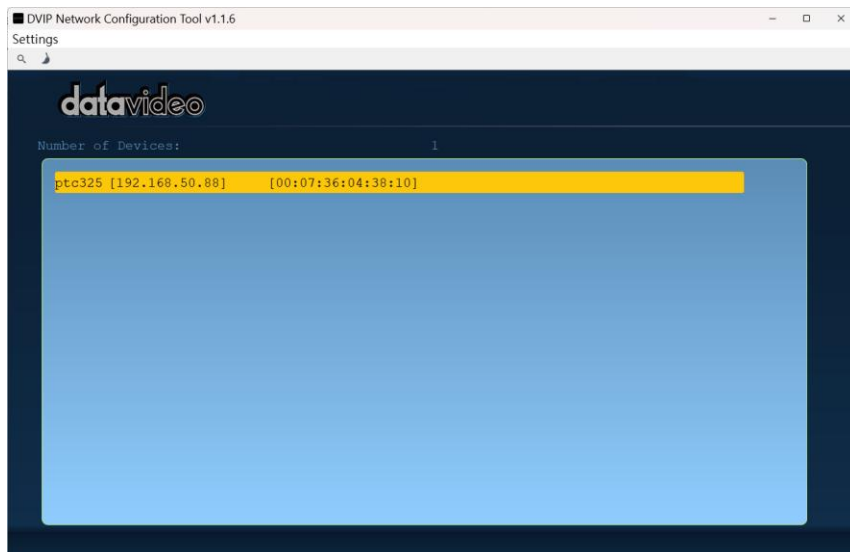




Step 3: Click one of the connected cameras to show the device information and its network settings in the pop-up window shown in the diagram below.

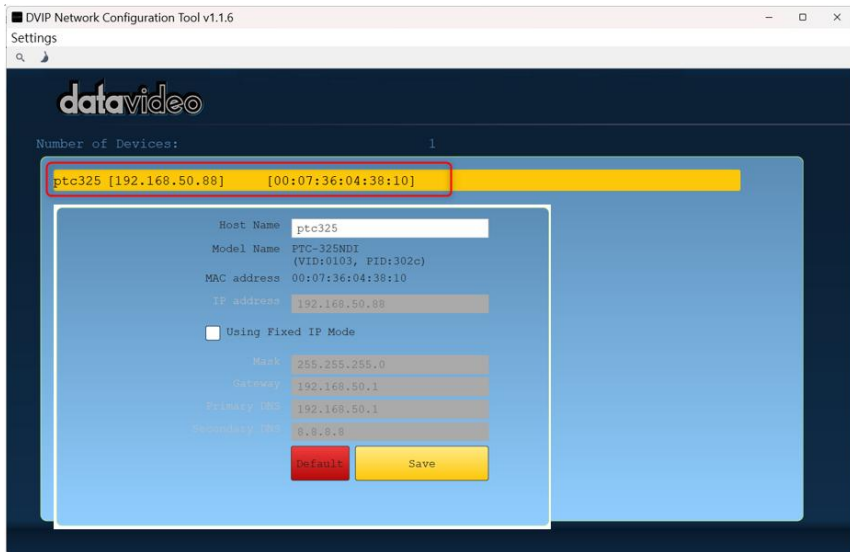

Step 4: You are allowed to change the device name in the Host Name field and modify the device's network settings accordingly. Click the Save button to confirm the change. To reset, simply click the Default button.

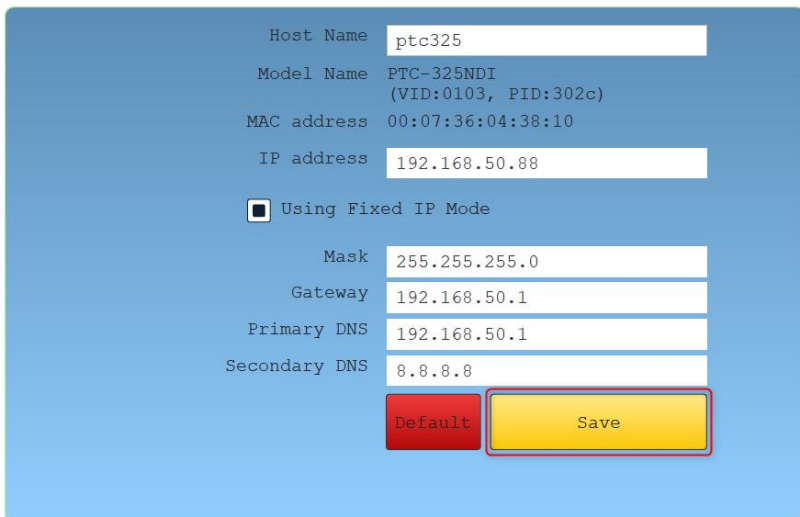

## 6. Basic Setup

### Power-On Initialization

As shown in the diagram below, after you plug in the power cord, the tally light in the front, depending on your tally setting, will start flashing red, green or a mix of both and will be OFF as soon as the power-on initialization is complete. Please note that the power-on initialization should not take more than 45 seconds before the camera image is shown on the connected monitor. If this is your first time using the camera, the camera head should be at the HOME position with the lens facing front. If the camera has been used before, the camera head should be at the position right before the camera is shut down the last time.

**Note:** Use the [OSD menu](#) or [web UI](#) to select the tally light color.



Connect the DC 12 V power adapter

### Video Output

You are allowed to view the camera video via **NDI HX3/DVIP/LAN**, **4K HDMI OUT** and **3G-SDI OUT**.

### NDI HX3/DVIP/LAN Port

NDI and DVIP are Ethernet-based protocols for bidirectional video and audio transmission. Both provide low latency and real time video transmission making it an ideal solution for any live productions.

See [Network Connection](#) for detailed network information if you are new to NDI and DVIP.



Follow the instructions below to view the camera video on the web user interface.

### **Connect the PTC-325 camera to your PC/Notebook PC over a network**

1. With Ethernet cables, establish connection between the PTC-325 and a PC/Notebook via a router.  
**Note: The PTC-325's default connection mode is DHCP.**
2. On the PC/Notebook, open the DVIP Network Configuration Tool and search for the PTC-325 then on a web browser, enter the camera's IP address into the address bar.
3. On the login page, enter the default username and password which are admin/admin respectively.
4. Once logged in, you should be able to see a preview window on which the video is shown.

### **Connect the PTC-325 camera directly to your PC/Notebook PC**

1. While still connected to the PTC-325 via a router in DHCP mode, open the camera's web UI on the PC/Notebook then the network page.
2. Disable DHCP then enter a static address in the **IP Address** textbox. Remember to enter a network mask and the rest are simply optional.
3. Do the same thing to your PC/Notebook. Make sure both IP addresses have the same first three octets.
4. Now connect the PTC-325 directly to the PC/Notebook using an Ethernet cable.
5. On your PC/Notebook, open the web browser and enter the camera's static IP address into the address bar.


6. On the Login page enter the default username and password which are admin/admin respectively.
7. Once logged in, you should be able to see a preview window on which the video is shown.

### **NDI Studio Monitor**


In addition to the PTC-325's web UI, the NDI Studio Monitor is another alternative to view the camera video.

Before connecting to the PTC-325, the NDI Studio Monitor must be installed on your PC/Notebook. You can download the latest version from NewTek's official NDI website <https://www.ndi.tv/>.


After the installation is complete, click "Start" then select Studio Monitor to open the NDI Studio Monitor.

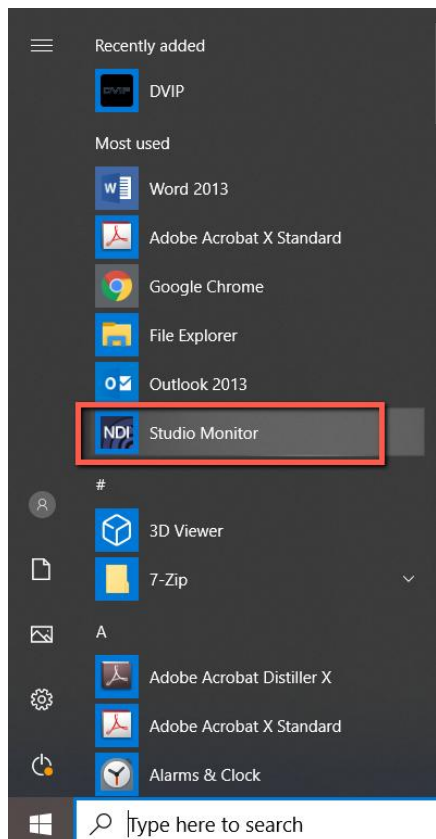


The NDI Studio Monitor interface is shown below.

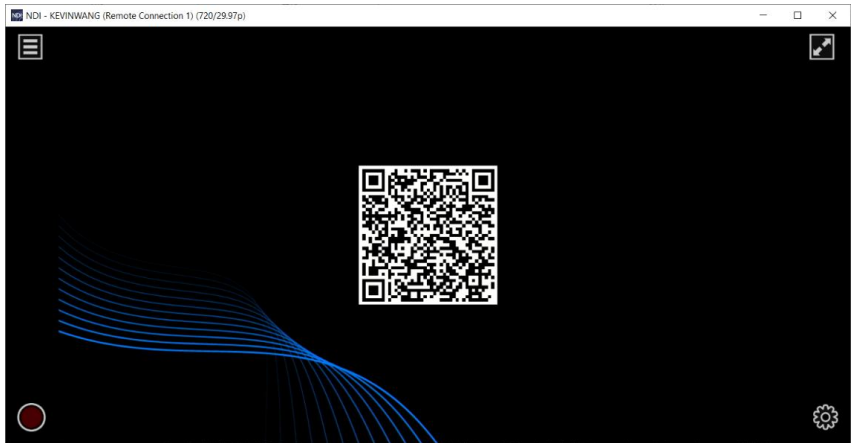


Click the menu icon located at the top left corner of the interface to open a pop-up menu. You can also right click anywhere on the interface to open the menu.

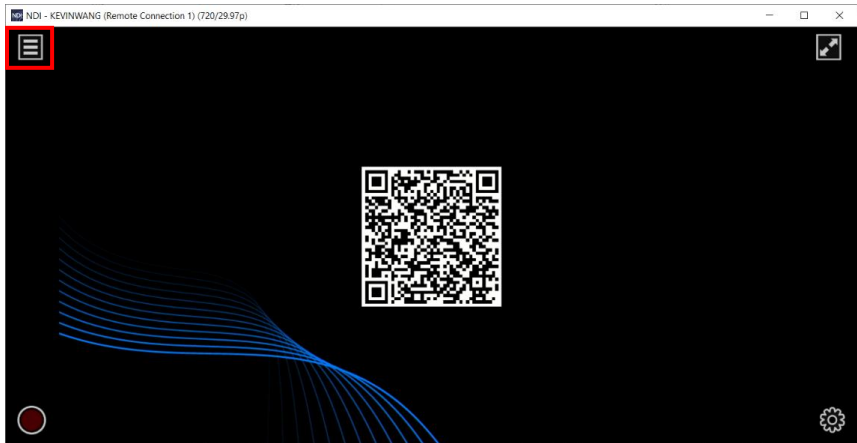


Click the PTC-325 camera detected by the NDI Studio Monitor to view the camera video.

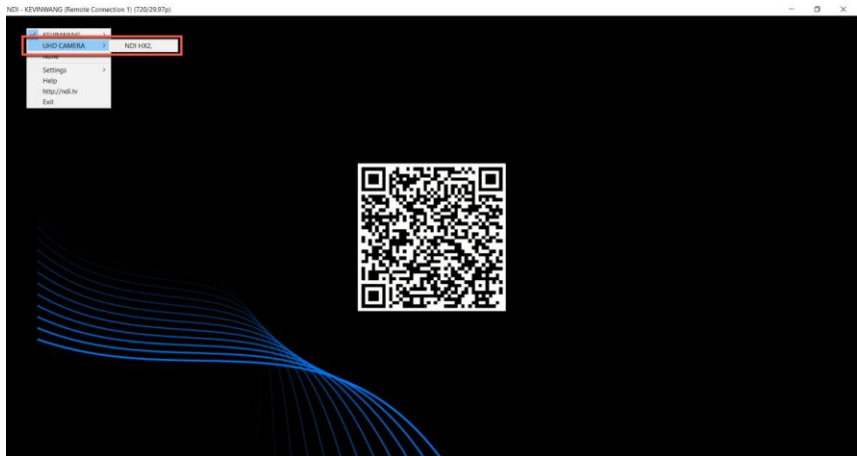

To enable the virtual PTZ joystick on the interface, right click on the interface, then follow the menu path Settings->PTZ Settings->Show PTZ Controls.

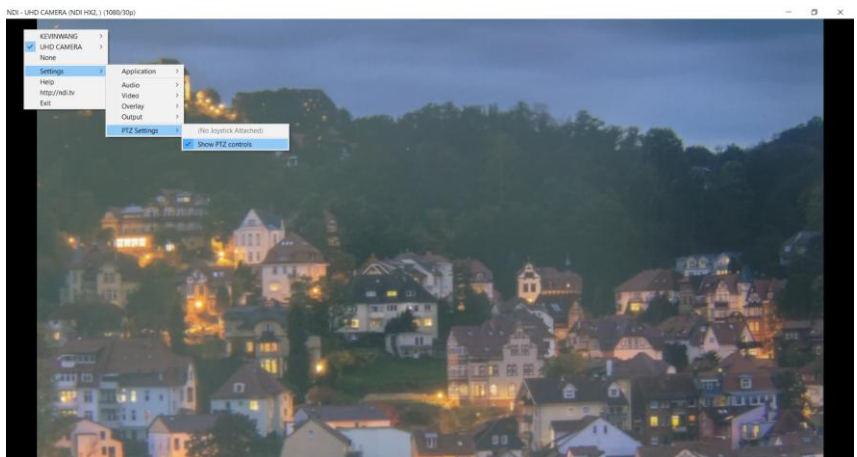

In addition to panning and tilting the camera, you can also enable auto focus, adjust the zoom, and save and recall presets.

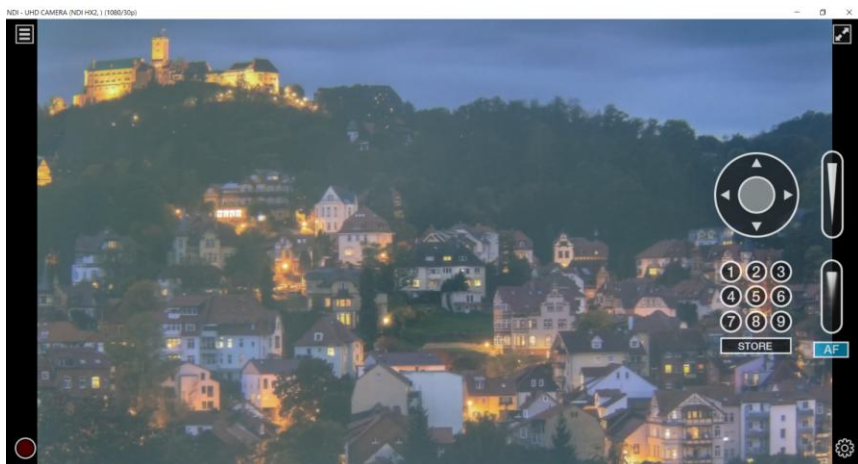

**Note:** If you have encountered problems when installing or using the NDI Studio Monitor, please visit NewTek's official NDI website <https://www.ndi.tv/> or contact NewTek's Technical Support Team.

## HDMI Video OUT

Connect the 4K HDMI OUT to an external monitor using an HDMI cable.



## 3G-SDI Video Output


Connect the 3G-SDI OUT to an external monitor using an SDI cable.







## 7. IR Remote Control and On-Screen Menu

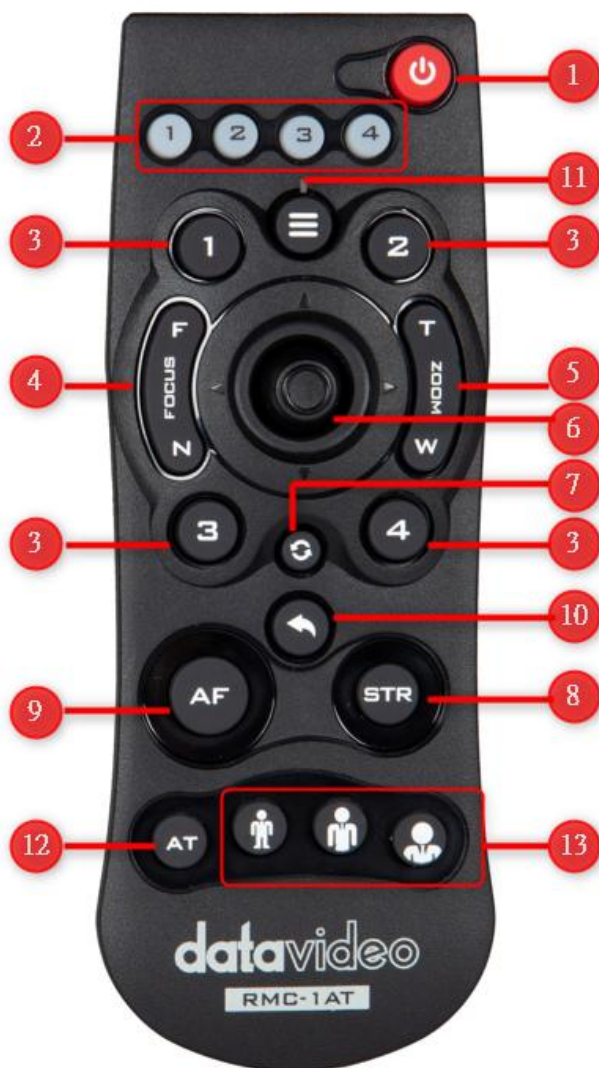




Chapter 7 provides an overview of remote control functions and the OSD menu.






### IR Remote Control






No	Function Keys	Descriptions
1		<p><b>Power Button</b> Press to switch between <b>Standby</b> and <b>Operation</b> modes.</p> <p><b>Note: The power consumption in Standby Mode is approximately half of the power consumption in Operation Mode.</b></p>
2		<p><b>Camera Select Keys 1-4</b> In a multi-camera environment, use the camera select keys (CAM1 – CAM4) to navigate between the four cameras. Use the IRID DIP Switch to assign an ID number from 1 to 4 to the cameras intended for operation.</p> <p>The IRID DIP switch can be found on the rear panel of the camera.</p>  <p>Toggle switches 1 and 2 on/off according to one of the combinations listed below to assign an ID number to the camera.</p> <p><b>(1,2) = (0,0) CAM1</b>  <b>(1,2) = (1,0) CAM2</b>  <b>(1,2) = (0,1) CAM3</b>  <b>(1,2) = (1,1) CAM4</b></p> <p><b>Note: Switches 3/4 should be always OFF.</b></p>
3		<p><b>Preset Keys 1 – 4</b> Use the preset keys to save and recall PTZ settings.</p> <p><b>Saving to the Preset Key:</b> First configure the camera's focus, zoom, pan and tilt settings, then press the STR key followed by one of the preset keys to save to the selected preset.</p> <p><b>Recalling the Preset:</b> Simply press one of the preset keys to load the settings saved therein.</p>

No	Function Keys	Descriptions
4		<p><b>Focus Button</b> Auto focus will be disabled as the Focus button (either F or N) is pressed. Press F to focus on a far object and N to focus on a near object.</p> <p>Note: You can also adjust the focus using the web UI. See <a href="#">Focus</a> for more details.</p>
5		<p><b>Zoom Button</b> The zoom function adjusts the size of the image. Press T (telephoto lens) to zoom in on a subject from far away and W (wide-angled lens) to zoom out.</p> <p>Note: You can also adjust the zoom using the web UI. See <a href="#">Zoom</a> for more details.</p>
6		<p><b>PT Joystick</b> Use the joystick to pan and tilt the camera head. Press the up and down arrow keys to tilt; press the left and right arrow keys to pan.</p> <p>While the OSD menu is opened, press the up and down keys to move between options. Press the right and left keys to toggle between values. Press the center button to enter a sub menu or confirm a selection. To exit a sub menu, press the MENU or Back button.</p>
7		<p><b>Reset IP Button</b> Press and hold for about 3 seconds to reset the camera's network settings to DHCP.</p> <p><b>Note: If there is no DHCP server on your network, the camera will use static IP to connect after the reset. The default IP address is 192.168.100.100.</b></p>
8		<p><b>STR Button</b> Use the <b>STR button</b> along with the preset keys to save the PTZ settings. See <b>Preset Keys 1 – 4</b> for more information.</p>

No	Function Keys	Descriptions
9		<b>AF Button</b> Press to enable Auto Focus.
10		<b>Back Button</b> Press to return the camera head to its default position. When the OSD menu is opened, press to return to the previous item on the menu.
11		<b>MENU Button</b> Press the “MENU” button to open the OSD menu on the connected monitor. See <a href="#">OSD Menu</a> for descriptions of various menu options.
12		<b>AT Button</b> Press to enable auto-tracking.  <b>Note:</b> Once auto-tracking is enabled, the message “Start Tracking” should appear on the monitor showing the camera video. See <a href="#">Auto-Tracking</a> for various relevant settings.
13		<b>Auto-Tracking Mode Selection Buttons</b> From left to right, these three buttons select, in the respective order, full body, half body and close-up framing.

## OSD Menu

On-Screen Menu allows the user to modify various camera settings. Press **[MENU]** on the **remote control** to open the on-screen menu as shown below.

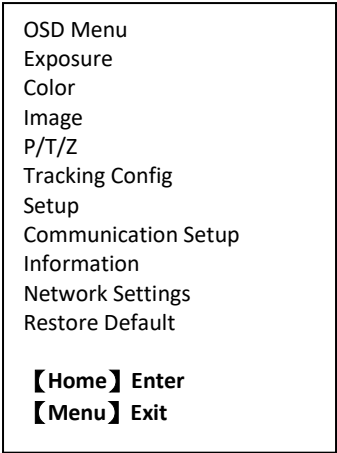A screenshot of the On-Screen Display (OSD) menu. The menu is displayed in a white box with a black border. It lists the following options: OSD Menu, Exposure, Color, Image, P/T/Z, Tracking Config, Setup, Communication Setup, Information, Network Settings, and Restore Default. At the bottom, there are two instructions: 【Home】 Enter and 【Menu】 Exit.

OSD Menu  
Exposure  
Color  
Image  
P/T/Z  
Tracking Config  
Setup  
Communication Setup  
Information  
Network Settings  
Restore Default

**【Home】 Enter**

**【Menu】 Exit**

The table below summarizes the main option items and their sub-options.

Main Options										
Sub-Options	Exposure	Color	Image	P/T/Z	Tracking Config	Setup	Communication Setup	Information	Network Settings	Restore Default
	Mode	WB Mode	Luminance	SpeedByZoom	Tracking	Language	Protocol	ARM	DHCP On/Off	Restore?
	ExpComp Mode	RG Tuning	Contrast	AF-Zone	Tracking Mode	HDMI RGB Mode	V_Address	SOC		
	Backlight	BG Tuning	Sharpness	AF-Sense	Figure Size	Video Format	V_AddrFix	Date		
	Gain Limit	Saturation	Flip-H	L/R Set	Detected Indicator	Audio Select	P_D Address	AF		
	Anti-Flicker	Hue	Flip-V	Display Info		SDI-3G Mode	P_P Address	Format		
	Meter	RG	B&W-Mode	Image Freeze		USB UPGRADE	Baudrate	Model		
	DRC	BG	NR3D-Level	Digital Zoom		VISCA ID	Com Inf	IP		
	Iris	Color Temp	Style	Pre Speed		Audio Channel		GateWay		
	Shutter			Pre Zoom Speed				NetMask		
	Gain									
	Bright									

Details of all options in the on-screen menu are listed in the table below.

Main Menu	Sub Menu	Options		Descriptions
Exposure	Mode	Auto		See <a href="#">Exposure</a>
		Manual		
		SAE		
		AAE		
		Bright		
	ExpCompMode	Off		Exposure Compensation Mode; See <a href="#">Exposure</a>
		On		
	Backlight	Off		Backlight Compensation Mode; See <a href="#">Exposure</a>
		On		
	Gain Limit	1 – 22; Step Size: 1		See <a href="#">Exposure</a>
	Anti-Flicker	Off		See <a href="#">Advanced Image Settings</a>
		50Hz		
		60Hz		
	Meter	Average		Light Meter; See <a href="#">Exposure</a>
		Center		
		Smart		
		Top		
	DRC	0 – 8; Step Size: 1		Dynamic Range Compression; See <a href="#">Exposure</a>
	Iris	F1.8		Accessible when exposure mode is set to Auto, Manual and AAE; See <a href="#">Exposure</a>
		F2.0		
		F2.4		
		F2.8		
		F3.4		
		F4.0		
		F4.8		
		F5.6		
		F6.8		
		F8.0		
		F9.6		
		F11.0		
	Shutter	Close		Shutter speed; See <a href="#">Exposure</a>
		NTSC Shutter	PAL Shutter	
		1/30	1/25	
		1/60	1/50	
		1/90	1/75	
		1/100	1/100	
		1/125	1/120	
		1/180	1/150	
		1/250	1/250	
		1/350	1/350	
		1/500	1/500	
		1/725	1/725	
		1/1000	1/1000	
		1/1500	1/1500	

Main Menu	Sub Menu	Options		Descriptions
		1/2000	1/2000	
		1/3000	1/3000	
		1/4000	1/4000	
		1/6000	1/6000	
		1/10000	1/10000	
	Gain	0 – 22; Step Size: 1		Accessible when exposure mode is set to manual; See <a href="#">Exposure</a>
	Bright	0 – 17; Step Size: 1		Accessible when exposure mode is set to bright; See <a href="#">Exposure</a>
Color	WB Mode	Auto		See <a href="#">White Balance</a>
		Indoor		
		Outdoor		
		OnePush		
		Manual		
		VAR		
	RG Tuning	-10 – 10; Step Size: 1		Fine tunes red gain; See <a href="#">Exposure</a>
	BG Tuning	-10 – 10; Step Size: 1		Fine tunes blue gain; See <a href="#">Exposure</a>
	Saturation	60 – 200%; Step Size: 10%		See <a href="#">Basic Image Settings</a>
	Hue	0 – 14; Step Size: 1		See <a href="#">Basic Image Settings</a>
	RG	0 – 255		Red gain; See <a href="#">Exposure</a>
BG	0 – 255		Blue gain; See <a href="#">Exposure</a>	
Color Temp	2500 – 8000K; Step Size: 100		Color temperature; See <a href="#">Exposure</a>	
Image	Luminance	0 – 14; Step Size: 1		See <a href="#">Basic Image Settings</a>
	Contrast	0 – 14; Step Size: 1		See <a href="#">Basic Image Settings</a>
	Sharpness	0 – 11; Step Size: 1		See <a href="#">Basic Image Settings</a>
	Flip-H	Off		When enabled, the camera video image will be flipped horizontally.
		On		
	Flip-V	Off		When enabled, the camera video image will be flipped vertically.
		On		
	B&W-Mode	Off		Black and White mode
		On		
NR3D-Level	Auto		See <a href="#">Advanced Image</a>	

Main Menu	Sub Menu	Options	Descriptions
	Style	Off	<a href="#">Settings.</a>
		1 – 8; Step Size: 1	
		Default	
		Norm	
		Bright	
		PC	
<b>P/T/Z</b>	SpeedByZoom	Off	Pan and tilt speed as a function of zoom once enabled. The PTZ speed should increase and decrease gradually in a linear fashion.
		On	
	AF-Zone	Front	Set auto focus to front, center, top or bottom area.
		Top	
		Center	
		Bottom	
	AF-Sense	High	Auto focus sensitivity
		Low	
		Normal	
	L/R Set	STD	Standard PAN direction
		REV	Reversing the PAN direction; usually selected when the camera is hung on the ceiling or installed upside down.
	Display Info	Off	PTZ info display
		On	
	Image Freeze	On	Once enabled, the image will be frozen when recalling a preset and the image should resume after the camera head is moved to the recalled position.
		Off	
	Digital Zoom	Off	
		2x	
		4x	
		8x	
		16x	
	Pre Speed	1 – 24; Step Size: 1	Adjust the P/T speed
	Pre Zoom Speed	0 – 7; Step Size: 1	Adjust the zoom speed.
<b>Tracking Config</b>	Tracking	On	Auto tracking ON/OFF
		Off	
	Tracking Mode	Production	See <a href="#">Mode</a> in <a href="#">Auto-Tracking</a>




Main Menu	Sub Menu	Options	Descriptions
Setup	Figure Size	Custom	See <a href="#">Figure Size</a> in <a href="#">Auto-Tracking</a>
		Full	
		Half-Body	
		Close Up	
	Detected Indicator	Default	
		Off	
		On	
	Language	Traditional Chinese	OSD menu language
		EN	
		Simplified Chinese	
	HDMI RGB Mode	HDMI	
		DVI	
	Video Format	1080P25	These are the available camera video resolutions which can also be found in the Resolution pull-down menu on the <a href="#">Video Output</a> page of the web UI.
		720P50	
		1080P60	
		1080P50	
		1080I60	
		1080I50	
		1080P30	
		720P60	
		1080P29.97	
		1080I59.94	
		1080P59.94	
		720P59.94	
		4KP29.97	
		4KP59.94	
		4KP25	
		4KP30	
		4KP50	
		4KP60	
	Audio Select	MIC	See <a href="#">Audio Input</a>
		LINE IN	
	SDI-3G Mode	LEVEL-A	Level-A or Level-B mapping
		LEVEL-B	
	USB UPGRADE	Off	<a href="#">USB FW Upgrade</a>
		On	
	VISCA ID	By DIP	Assign VISCA ID using DIP switch or OSD menu
		By OSD	
	Audio Channel	Stereo	See <a href="#">Soundtrack</a>
		Mono	
Communication Setup	Protocol	VISCA	Select the control protocol
		PELCO-D	
		PELCO-P	
		Auto	
	V_Address	1	Set VISCA ID for daisy chain of cameras
	V_AddrFix	Off	VISCA address will be fixed when enabled.
		On	
	P_D Address	0 – 254; Step Size: 1	Set the Pelco-D

Main Menu	Sub Menu	Options	Descriptions
			address.
	P_P Address	1 – 32; Step Size: 1	Set the Pelco-P address.
	Baudrate	38400	Select a baud rate for the protocol selected.
		2400	
		4800	
		9600	
	Com Inf	RS-232	Select your desired control protocol
		RS-422	
Information	ARM		Firmware information
	SOC		
	Date		
	AF		
	Format		Model number
	Model		
	IP		
	GateWay		
Network Settings	DHCP	On	Turn on/Turn off DHCP
		Off	
	Restore?	Yes/No	Factory reset
Restore Default			

## 8. Web User Interface


The web based user interface allows you to set and control your PTC-325 devices. On any browser, enter the camera's IP address then hit the Enter key, after which you should be taken to the login page. The default login credentials are admin/admin. Please note that the password can be changed later.

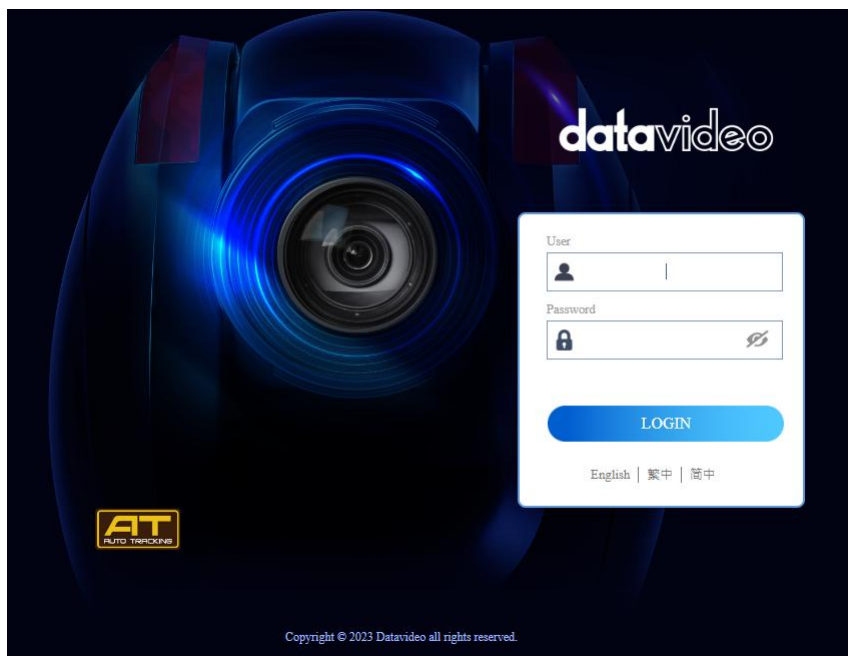

Please note that in order to access the web UI, your PC needs to be connected to the camera via the DVIP interface. See [Network Connection](#) to connect.



### Camera Control

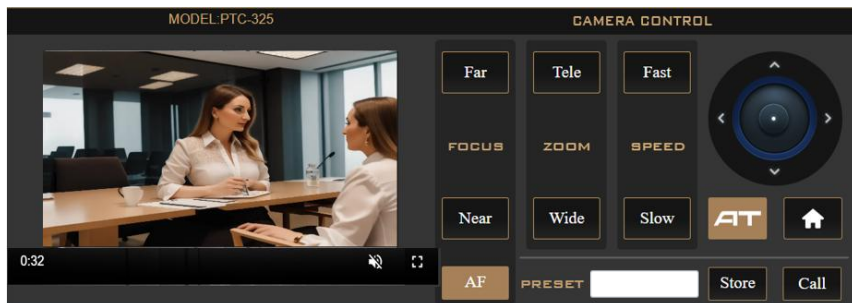
Once logged in to the web UI, you will be able to find the control panel shown below in [Camera Setup](#) and [Auto-Tracking](#).



A preview window is positioned in the left half of the panel, allowing you to view the live camera video. Elapsed time is shown in the bottom left corner of the window. At the bottom right corner, click  to enable sound. Use the sound slider that appears to adjust the volume accordingly. Click  to view the video in full screen.

On the right half, you will find various camera control options described as follows:

## Focus




You can focus on objects at varying distances by adjusting its focal length to bring both near and far subjects into sharp focus. Click **Far** to focus on a far object and **Near** to focus on a near object.

You can also enable **Auto Focus** by clicking the AF button, allowing the camera to automatically set the focus on the center of the image.

## Zoom

The zoom function adjusts the size of the image. Click Tele (telephoto lens) to zoom in on a subject from far away and Wide (wide-angled lens) to zoom out.



## Pan and Tilt



Use the up/down arrows to tilt the camera head up and down and the left/right arrows to pan the camera head left and right. You can also use your mouse to drag the central dot to control the camera's up, down, left, and right movements.

## Speed



Click the **Fast/Slow** buttons to increase/decrease the pan, tilt and zoom speed.

## AT

Click the **AT** button to enable auto-tracking. Auto-tracking detects motion of objects and use the PTZ to follow it. See [Auto-Tracking](#) for in-depth setup.



## Home



Click the **Home** button to return the PTZ position to the default settings.

## Presets

There are 255 memory presets where you can save the PTZ and focus settings to. First enter a preset number (0 – 254) in the **PRESET** textbox then click the **Store** button to save the current PTZ and focus settings to the selected preset position. To access a preset position, simply enter the number in the **PRESET** textbox then click the **Call** button.



## Camera Setup

In Camera Setup, you will be able to find various settings for the camera video. These options will be described in detail in this section.

### Basic Image Settings (Page 1)

#### Contrast

Adjust image contrast from 0 – 14.

#### Brightness

Adjust image brightness from 0 – 17.

#### Saturation

Adjust image saturation from 60 – 200%.

**Note: The higher the saturation, the more vivid the colors will be.**

#### Hue

Adjust image hue from 0 – 14.

#### Sharpness

Adjust image sharpness from 0 – 11.

### Exposure (Page 1)

Exposure modes are listed as follows:

**Auto** – Fully automatic settings for shutter speed and aperture with ability to adjust gain, dynamic range, backlight and anti-flicker.

**Manual** – Full iris, shutter speed and range control

**Shutter Automatic Exposure** – The camera will measure light and automatically set the aperture based on the selected shutter speed.

**Aperture Automatic Exposure** – The camera will measure light and automatically set the shutter speed based on the selected iris opening (aperture).

**Bright** – Manual adjustment of the brightness level.

Please note that every exposure mode has different settings. The table below summarizes the correlated settings of all exposure modes.

	Auto	Manual	SAE	AAE	Bright
Gain Limit	✓		✓	✓	✓
Shutter		✓	✓		
ExpCompMode	✓				
Backlight	✓				
Meter	✓		✓	✓	✓
DRC	✓	✓	✓	✓	✓
Bright					✓
Iris	✓	✓		✓	
Gain		✓			

### Gain Limit

Setting the gain limit allows you to cap the maximum gain to a value in the range of 1 – 22.

Accessible when **Exposure Mode** is set to **Auto**, **SAE**, **AAE**, and **Bright**.

### Shutter

Select shutter speed from the drop-down menu.

1/30, 1/60, 1/90, 1/100, 1/125, 1/180, 1/250, 1/350, 1/500, 1/725, 1/1000, 1/1500, 1/2000, 1/3000, 1/4000, 1/6000, 1/10000

Accessible when **Exposure Mode** is set to **Manual** and **SAE**.

### ExpCompMode

This is the **Exposure Compensation Mode**, which, when enabled, corrects brightness of an image whose exposure is already automatically adjusted.

Accessible when **Exposure Mode** is set to **Auto**.

### Backlight

This is the Backlight Compensation Mode, which, when enabled, optimizes exposure for backlight.

Accessible when **Exposure Mode** is set to **Auto**.

### Meter

A light meter is a tool that evaluates the amount of light reflected by a scene to set the aperture and/or shutter speed to achieve the perfect exposure. The light meter can function in following modes.

- Average: Measures the average brightness of the entire scene, while emphasizing the central area.

- Center: Measures only the central area.
- Smart: Measures light on each area after dividing the total scene area into multiple areas and determines the proper exposure of the entire scene.
- Top: Measures the top area.

## **DRC**

DRC sets the amount of Dynamic Range Compression where higher values lead to more compression (**1 – 8** or **off**).

## **Bright**

Bright sets the brightness level from 0 to 14.

Accessible when **Exposure Mode** is set to **Bright**.

## **Iris**

The Iris drop down menu allows you to select the iris setting from the list below:

F1.8, F2.0, F2.4, F2.8, F3.4, F4.0, F4.8, F5.6, F6.8, F8.0, F9.6, F11.0

Accessible when **Exposure Mode** is set to **Auto**, **Manual** and **AAE**.

## **Gain**

The Gain can be adjusted from 0 to 14.

Accessible when **Exposure Mode** is set to **Manual**.

## **White Balance (Page 1)**

Auto: When Auto is chosen, you are allowing the camera to constantly read the tones in your scene and set the brightest part of your image as the white point. You will be allowed to fine tune red and blue gains in this mode.

Indoor: For indoor video production.

Outdoor: For outdoor video production.

Manual: In this mode, you will allowed to manually set the camera's white balance by adjusting red and blue gains.

OnePush: One time auto white balance. You will be allowed to fine tune red and blue gains in this mode.

VAR: Select VAR if you would like to manually adjust color temperature in addition to fine tuning red and blue gains.



## **RGTuning**

This fine tunes red gain from **-10 to 10**.

Accessible when **White Balance** is set to **Auto**, **OnePush** and **VAR**.

## **BGTuning**

This fine tunes blue gain from **-10 to 10**.

Accessible when **White Balance** is set to **Auto**, **OnePush** and **VAR**.

## **RGain**

RGain sets intensity of red color from 0 to 225.

Accessible when **White Balance** is set to **Manual**.

## **BGain**

BGain sets intensity of blue color from 0 to 225.

Accessible when **White Balance** is set to **Manual**.

## **Colortemp**

Color temperature measures the physical property of light in Kelvin (K), ranging from 2500K to 8000K with a step size of 100. It varies between different light sources.

The following table is a rule-of-thumb guide to the correlated color temperature of some common light sources.

<b>Color Temperature</b>	<b>Light Source</b>
1000 – 2000 K	Candlelight
2500 – 3500 K	Tungsten Bulb (household variety)
3000 – 4000 K	Sunrise/Sunset (clear sky)
4000 – 5000 K	Fluorescent Lamps
5000 – 5500 K	Electronic Flash
5000 – 6500 K	Daylight with Clear Sky (sun overhead)
6500 – 8000 K	Moderately Overcast Sky
9000 – 10000 K	Shade or Heavily Overcast Sky

Accessible when **VAR** is selected.

## **Advanced Image Settings (Page 2)**

### **Gamma**

Enable gamma correction for more natural look of images and the ability to differentiate between dark tones in a darker images.

## Mirror

The mirror function (Flip-H) flips the camera video image horizontally, and the flip function (Flip-V) does it otherwise. You can turn either or both of them on. Select the right combination from the drop-down menu.

- Mirror Off/Flip Off
- Mirror On/Flip Off
- Mirror Off/Flip On
- Mirror On/Flip On

## Anti-Flicker

To avoid video flicker, you can set your camera flicker frequency to **50 Hz** or **60 Hz**.

## AGC

Also known as **Automatic Gain Control**. Enable AGC in low-light conditions.

## 3DNR

3D noise reduction is applied in static areas of the field of view.


- OFF
- 1 – 8
- Auto

## WDR

Also known as wide dynamic range, often used in situations where there is a large difference in foreground and background light levels.


## Video Output

As shown in the diagram below, select a resolution for the camera video.

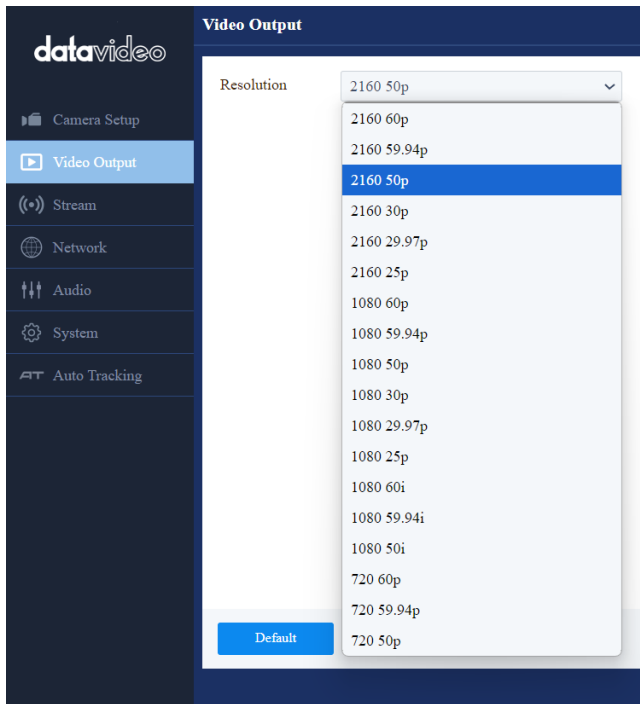

## Stream

In this section, we will first show you all common streaming setup options then the settings specific to the respective streaming protocols.

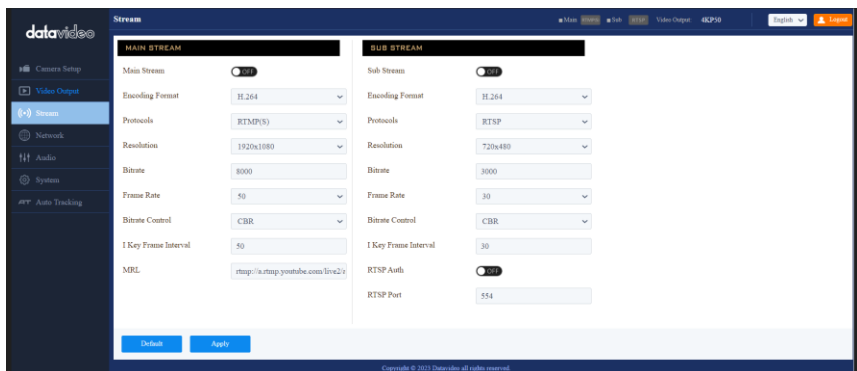

## Encoding Format

First select either the H.264 or H.265 video codec after you've turned on the streaming server (main or sub).

If you're working with high-resolution video formats such as 4K and 8K, H.265 is the better choice due to its improved compression efficiency. However, if you're working with older devices or platforms that may not support H.265, or if you're streaming video over a limited bandwidth connection, H.264 may be the better option.


## Protocol

Each streaming server offers the user multiple stream types. There are **RTP Multicast, RTSP, RTMP(S), SRT, NDI** and **ONVIF**.

Please note that when streaming, the server converts video into data, which are sent across an IP network. High bitrates consume more bandwidth across the IP network. In a gigabit office LAN, high bitrates may not be a concern and Speed/Bandwidth is therefore not a limitation.

If your available bandwidth is limited, you should reduce both your resolution and your bitrate accordingly. A good rule of thumb is for the bitrate of your stream to use no more than 50% of your available upload bandwidth capacity on a dedicated line. For example, if the result you get from a speed test shows that you have 20Mbps of upload speed available, your combined audio and video bitrate should not exceed 10Mbps.

## Resolution

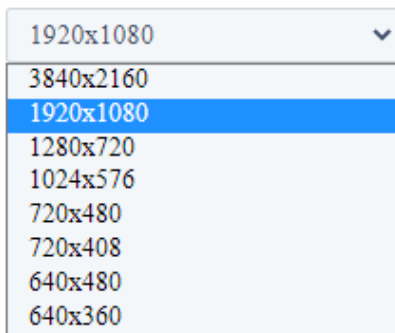

Adjusting the image size is a critical step of encoder setup. It is best to either match your original video source or scale it down. For example, capture at HD 720 and stream at HD 720. Or capture at 4K 2160 and stream at Full HD 1080.

You should never be scaling up and streaming at a higher resolution than

your original video source. For example, it does not make sense to capture at 720 and stream at 1080. Note that you will also have no gain in quality and you are using more bandwidth than is necessary for your viewers.

You should also be aware that higher resolutions require greater processing power to encode the stream. Attempting too high of a resolution on too little


processing power can result in degraded image quality and corrupted or interrupted streams or recordings.

### Bitrate

Enter the desired video bitrate for your video stream. The recommended video bitrates to use are listed as follows:

- 4,500 to 6,000 kbps for full HD videos with a high frame rate (1080p, 60fps)
- 3,500 to 5,000 kbps for full HD videos with a standard frame rate (1080p, 30fps)
- 3,500 to 5,000 kbps for HD videos with a high frame rate (720p, 60fps)
- 2,500 to 4,000 kbps for HD videos with a standard frame rate (720p, 30fps)

### Frame Rate

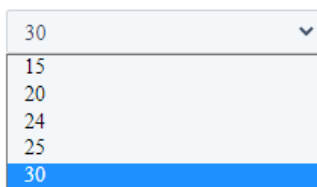

Select a frame rate from the drop-down menu for video streaming. Note that frame rates should always match the frame rate of the video source.

### Bitrate Control

There are two different bitrate types: CBR (constant) and VBR (variable). CBR is best for live streaming encoding and VBR is best for on-demand videos.

### Keyframe Interval

The keyframe interval in video encoding determines how often complete frames, called keyframes, are inserted into a video sequence. For live stream, a two-second keyframe interval is optimal, so if your frame rate is 30 fps, the keyframe interval would be every 60 frames.

**Note: A short keyframe interval can result in stuttered playback.**

### RTP Multicast

RTP allows data transfer to multiple destinations through IP multicast in IP networks. Once selected, the device will automatically generate an RTP address and a port number which are respectively 224.1.2.3 and 6688 as depicted in the diagram below. Enter **rtp://224.1.2.3:6688** into the client device to view a live video streamed from the camera via RTP multicast.

MAIN STREAM

Main Stream

OFF

Encoding Format

H.264

Protocols

Multicast

Resolution

1920x1080

Bitrate

8000

Frame Rate

50

Bitrate Control

CBR

I Key Frame Interval

50

Address

224.1.2.3


Port

6688


Default

Apply

It is recommended to use VLC media player to view an RTP live stream. Open VLC on your PC, then click **“Media”** → **“Open Network Stream”**.

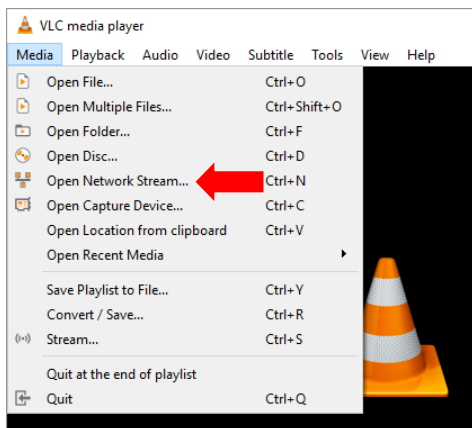

On the window that opens, enter **rtp://224.1.2.3:6688** as shown in the diagram below then click **Play** to start viewing.

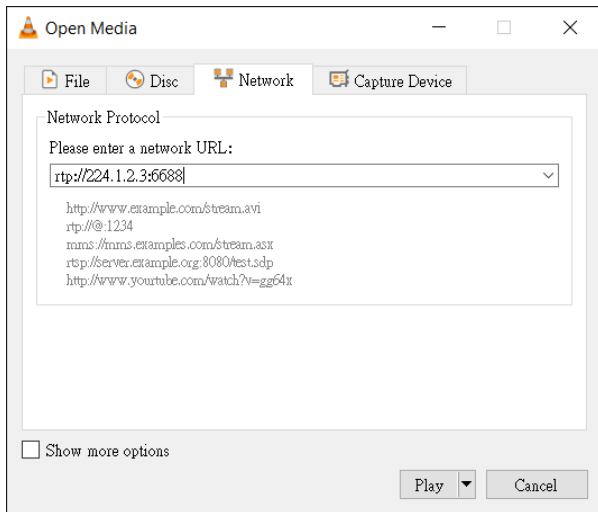

## RTSP


RTSP (Real-Time Streaming Protocol) is a network protocol designed to transfer video over a network or to the internet with an easy-to-use link.

The default RTSP port number is 554. The alternate port number is 8551.


When RTSP Auth is enabled, only authorized users have access to the footage captured by the camera.

MAIN STREAM	
Main Stream	<input checked="" type="checkbox"/>
Encoding Format	H.264
Protocols	RTSP
Resolution	1920x1080
Bitrate	4096
Frame Rate	30
Bitrate Control	CBR
I Key Frame Interval	30
RTSP Auth	<input type="checkbox"/>
RTSP Port	554
<input type="button" value="Default"/> <input type="button" value="Apply"/>	

It is recommended to use VLC media player to view an RTSP live stream. Open VLC on your PC, then click **“Media”** → **“Open Network Stream”**.

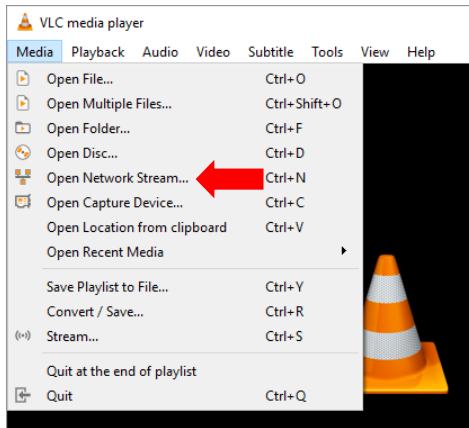

On the window that opens, enter **rtsp://IP address:554/channel number** as shown in the diagram below then click **Play** to start viewing.

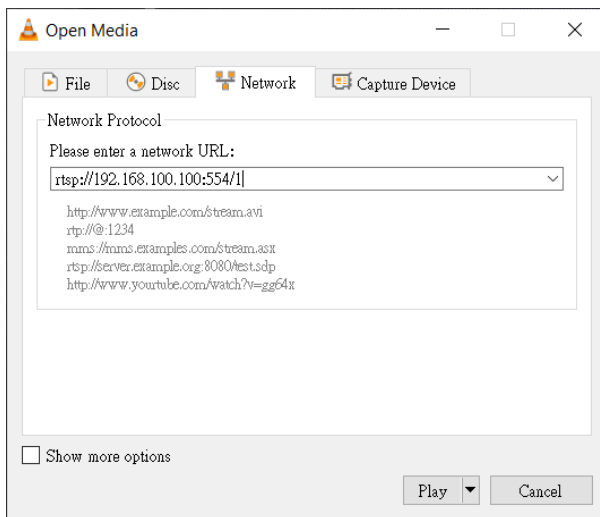

## RTMP(S)

Real-Time Messaging Protocol (RTMP) is a communication protocol for streaming audio, video and data over the Internet. Use the guide in this section to learn about streaming live media and publishing streams.



MAIN STREAM

Main Stream
☐ OFF

Encoding Format
H.264

Protocols
RTMP(S)

Resolution
1920x1080

Bitrate
8000

Frame Rate
50

Bitrate Control
CBR

I Key Frame Interval
50

MRL
rtmp://a.rtmp.youtube.com/live2/9

Default
Apply

After RTMP(S) is enabled, you will see the following options:

**MRL:** In the textbox, enter the RTMP link (Server URL/Stream Name) to which your video will be published. The link is usually retrieved from a live streaming platform.

See the examples below to set up an **RTMP(S)** stream to **Facebook** and **Youtube**. Please note that Facebook Live limits each stream to 8 hours.


### Facebook

1. Open Facebook Live by clicking the link below then click “Go Live Now”.

<https://www.facebook.com/formedia/solutions/facebook-live>




Please note that you can also link to Facebook Live from your Facebook



Personal Page or Facebook Fan Page by clicking “Live Video” as depicted on the right.

2. Select “Go live”.

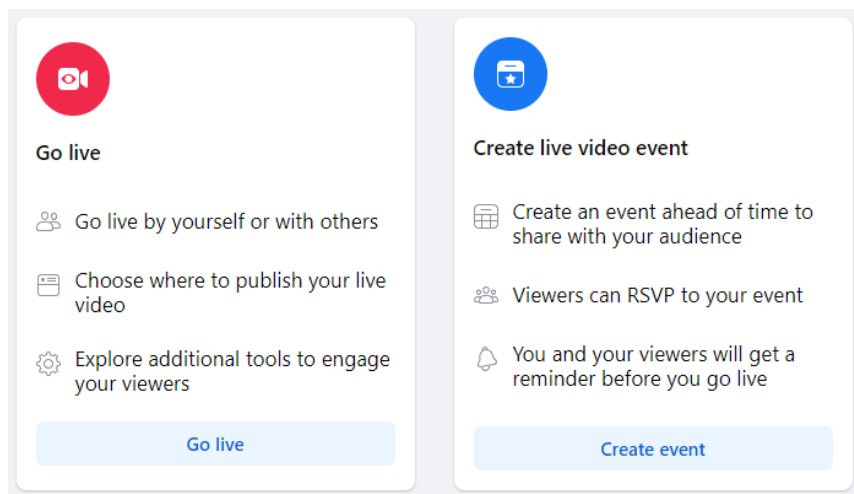

3. Select “Streaming software” where you will be able to find the server URL and the stream key. If you’d like, you can also enter the title and descriptions about this live stream.

### Select a video source ?

Webcam

Streaming software

Preview streams via streaming software are subject to our [Community Standards](#) and Facebook Live policies, and may be retained by Facebook for review and enforcement.

### Streaming software setup

Copy and paste the stream key into your streaming software.

#### Stream key

FB-370758482040289-0-AbwT\_NpvFKtprYPK

Copy

This stream key is valid until you log out of Facebook. Once you start to preview the broadcast you have up to 4 hours to go live.

#### Advanced Settings

Persistent stream key

This can be reused every time you go live. You can only broadcast one live video at a time with your persistent stream key.

Backup stream

Once a backup stream is added to your live video, it cannot be removed. It will not affect your stream if you choose not to use it.

#### Server URL

rtmps://live-api-s.facebook.com

Copy

Ingest URLs

This may be referred to as "URL" or "Address" in your streaming software.

### Add post details

#### Share to story

Your live video will also be added to your story.

Title (optional)

Description

- Go back to the camera's web UI and as depicted in the diagram on the right, Enter "Server URL/Stream key" in the MRL textbox. In this example, we use the link retrieved at step 3, which is **rtmps://live-api-s.facebook.com:443/rtmp/FB-370758482040289-0-AbwT\_NpvFKtprYPK**.

### MAIN STREAM

Main Stream

ON

Encoding Format

H.264

Protocols

RTMP(S)

Resolution

1920x1080

Bitrate

8000

Frame Rate

50

Bitrate Control

CBR

I Key Frame Interval

50

MRL

rtmps://live-api-s.facebook.com:4

Default

Apply

5. Click the **Apply** button to activate the RTMP video stream. Make sure both audio and video are enabled.




Data Update Successful

The RTMP video stream is successfully activated when you see “Data Update


Successful” appear at the bottom of the UI.

At the top right corner of the web UI, you should see that the main stream channel is now switched to RTMP(S) mode.




6. As shown in the diagram below, you can also preview the live camera video on Facebook Live.

Select a video source ?



Webcam



Streaming software

Preview streams via streaming software are subject to our [Community Standards](#) and Facebook Live policies, and may be retained by Facebook for review and enforcement.

Streaming software setup

Copy and paste the stream key into your streaming software.

Stream key


FB-370758482040289-0-AbwT\_NpvFKtrYPK

Copy


This stream key is valid until you log out of Facebook. Once you start to preview the broadcast you have up to 4 hours to go live.

Advanced Settings

Video



Expand video



Event logs

Add post details


Share to story

☒

Your live video will also be added to your story.


Title (optional)

Description




7. Before you activate the live stream on Facebook, on the left pane of Facebook Live, choose where and when you want to post your live video as well as the audience. Lastly, click the “Go live” button to start livestreaming of your camera video on Facebook.



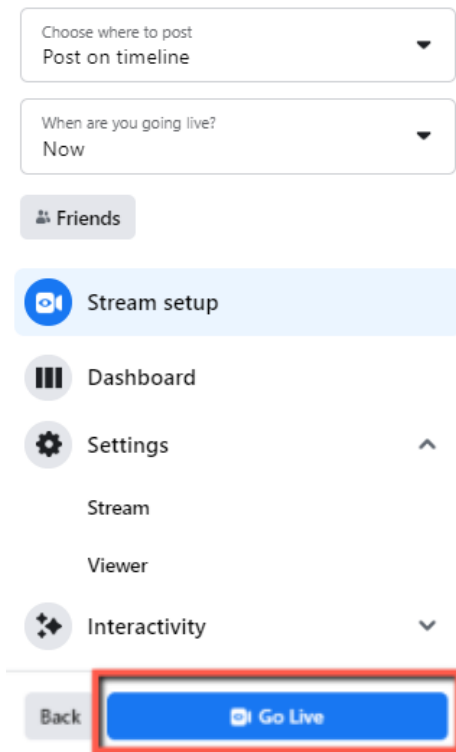


8. To end the live stream, simply click “End Live Video”.




## Youtube


1. Open the Youtube Live Control Room by clicking the link below:  
[https://www.youtube.com/live\\_dashboard](https://www.youtube.com/live_dashboard)  
Alternatively, log in to your Youtube account, locate and click the camera icon at the top right corner, then select “Go live”.

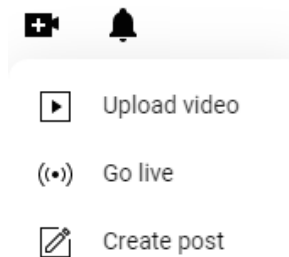


2. If this is your first time using **Youtube Live Control Room**, select “**Right Now**” on the pop-up prompt.

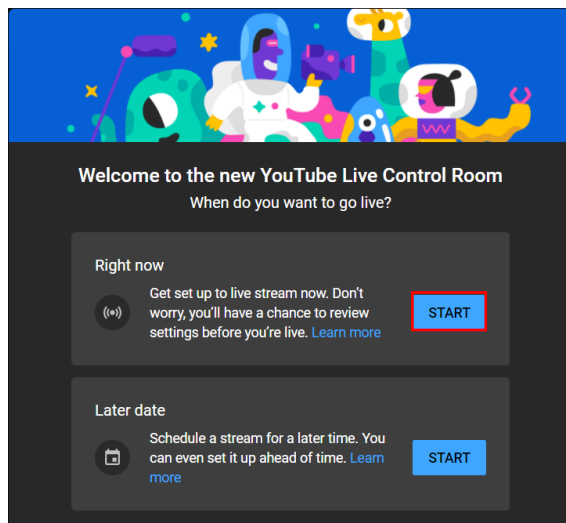

3. Select **Streaming Software**.

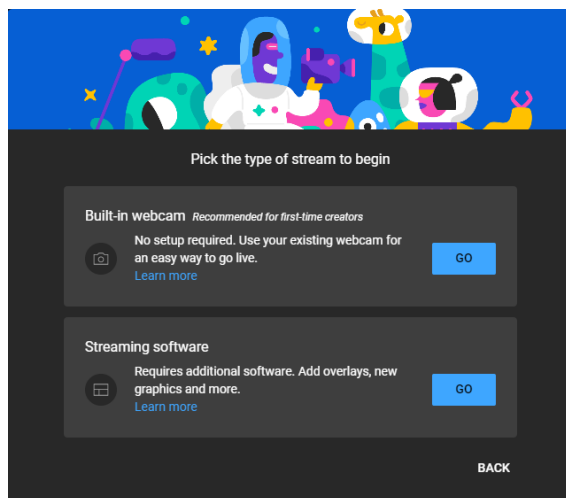

4. You will be able to find the server URL and the stream key in **Stream settings** pane of the Youtube Live Control Room. If you'd like, you can also click **Edit** to modify the stream information such as title and descriptions.



Connect streaming software to go live

Viewers will be able to find your stream once you go live

[STREAM SETUP HELP](#)

Title  
**Live Stream Test**

Category  
**People and blogs**

Privacy  
**Public**

Viewers waiting  
**0**

Likes  
**0**

[EDIT](#)

● Start sending us your video from your streaming software to go live

[Stream settings](#)
[Analytics](#)
[Stream health](#)

**Stream key**

Select stream key

Default stream key (RTMP, variable)

Stream key (paste in encoder)  
**8pbj-egmr-vjfg-acug-4**

[RESET](#) [COPY](#)

Stream URL  
**rtmp://a.rtmp.youtube.com/live2**

[COPY](#)

Backup server URL  
**rtmp://b.rtmp.youtube.com/live2?**

[COPY](#)

YouTube also supports RTMPS for secure connections. [Learn more](#)

**Stream latency**

☐ Normal latency

☒ Low-latency

☐ Ultra low-latency

**Additional settings**

Enable DVR ☒

360° video ☐

Added delay  
**None**

Closed captions ☐

Unlist live replay once stream ends ☐

- Enter “Server URL/Stream key” which is **rtmp://a.rtmp.youtube.com/live2/8pbj-egmr-vjfg-acug-6vsc** in this example in the MRL textbox as depicted in the diagram on the right.

MAIN STREAM

Main Stream ☒

Encoding Format **H.264**

Protocols **RTMP(S)**

Resolution **1920x1080**

Bitrate **8000**

Frame Rate **50**

Bitrate Control **CBR**

I Key Frame Interval **50**

MRL **rtmp://a.rtmp.youtube.com/live2/8**

[Default](#)
[Apply](#)




- Click the **Apply** button to activate the RTMP video stream. Make sure both audio and video are enabled.


✓ **Data Update Successful**

The RTMP video stream is successfully activated when you see “Data Update Successful” appear at the bottom of the UI.

At the top right corner of the web UI, you should see that the main stream channel is now switched to RTMP(S) mode.




- To end the live stream, simply click “**END STREAM**” which can be found at the top right corner of the Youtube Live Control Room.



## SRT

Read this section to learn how to establish a link between SRT source and destination devices.

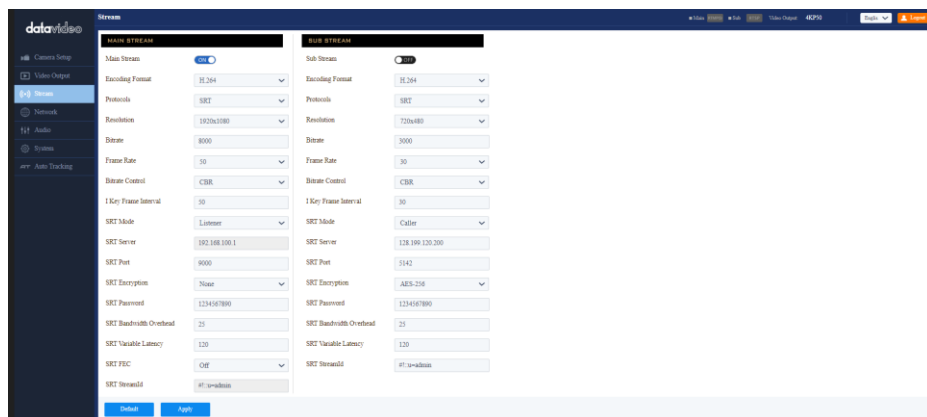

Caller and listener modes work together to establish the SRT link between source and destination devices. It is arbitrary to set one device to listener mode and the other to caller mode. Either can be the source device.

Common SRT parameters are described as follows:

**Port number:** Range is 1024 to 65535; default is 9000.

**SRT Encryption:** Options are 128/192/256 bit end-to-end AES encryptions to ensure that content is protected during streaming.

**SRT Password:** Enter a passphrase of 10 to 79 characters.

Please note that your stream is not encrypted by default. The encryption and the passphrase must be the same at both sender and receiver ends.

**Bandwidth Overhead:** This is the percentage of the average bandwidth used to accommodate SRT controls. The default is 25%.

**Latency:** This sets the maximum buffer size for managing SRT packets; the value ranges from 20 to 8,000 ms. The default is 120 ms.

**SRT FEC:** This option allows you to set the SRT FEC function On/Off. If SRT FEC is set to On, the receiver can recover lost packets without retransmission.

**Stream ID:** Enter a name for your video stream.

If Caller is selected, enter the IP address of the destination device (decoder) in the **Server** field. If your SRT stream destination is a CDN or media server, the IP address and the port number should be provided by the service provider.

If Listener is selected, **FEC**, also known as forward error correction, will be provided. It is a technique used for packet loss recovery. Select an FEC rate from the drop-down menu.

In the next two sections, we will show you how to establish an SRT link between the PTC-325 and a PC.

### ***Install the vMix Software***

Download and install the vMix software: <https://www.vmix.com/>

### ***SRT Stream Setup on PTC-325 and vMix***


The PTC-325/vMIX connection is bidirectional. Regardless of the caller-listener setup, either end can be the camera video source.

#### **PTC-325 set to the Listener Mode**


Open the web UI of the PTC-325 then the **Stream** page. Select **SRT** from the **Protocols** pull-down menu then set **SRT mode** to **Listener**. Use the default **SRT port** (9000). If necessary, you can set up **AES encryption** and a 10 digit **passphrase** for an SRT stream.

Lastly, click the **Apply** button to activate the SRT stream.

On the PC or laptop where the vMIX is installed, click Start Menu → vMix(x64) and you should see the interface below after the vMIX is opened.

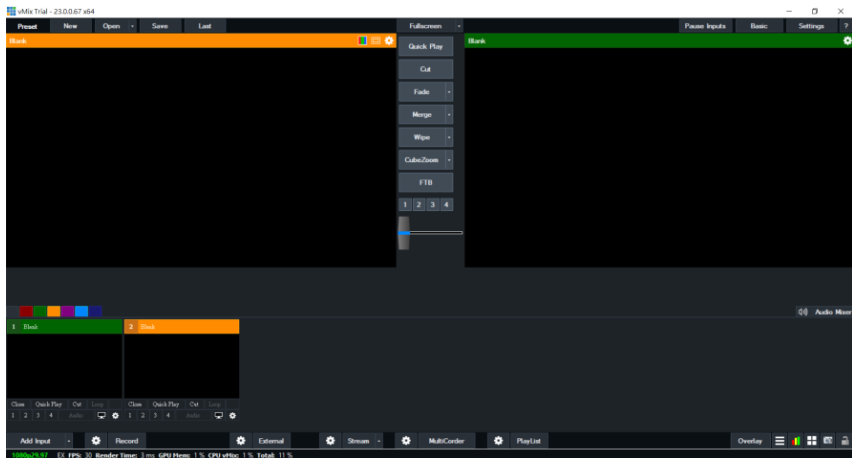

Click “Add Input” then “More”.

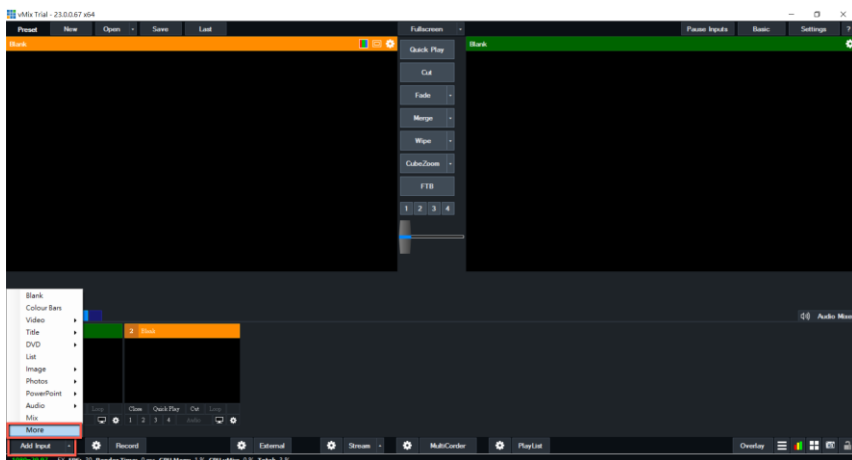

On the Input Select window, click “Stream/SRT” then select “SRT Caller” from the “Stream Type” drop-down menu. After that, enter the following into the respective fields.

- Hostname: 192.168.1.198 (The IP address of your connected device. In this case, it is the PTC-325)
- Port: 9000

- Passphrase: 1234567890 (The password set previously on the PTC-325's Web UI)
- Key length: 32

Input Select

Stream Type: SRT (Caller)

Hostname: 192.168.2.5 Port: 9000

Latency (ms): 200 Passphrase: 8888888888 ☒ Use Hardware Decoder

Decoder Delay (ms): 0 Key Length: 32

Stream ID:

Clear

Number: 1 OK Cancel

Click the “OK” button.

Input Select

Stream Type: SRT (Caller)

Hostname: 192.168.2.5 Port: 9000

Latency (ms): 200 Passphrase: 8888888888 ☒ Use Hardware Decoder


Decoder Delay (ms): 0 Key Length: 32

Stream ID:

Clear

Number: 1 **OK** Cancel

The PTC-325 camera video is now successfully streamed to the vMix via SRT.

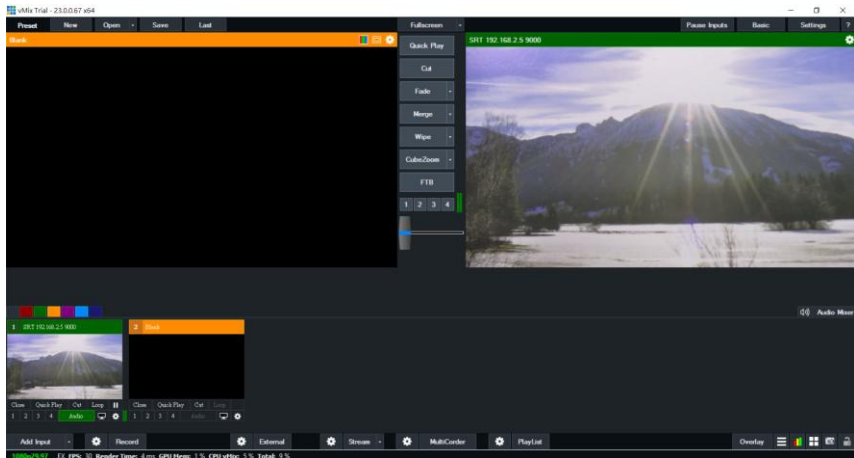


### PTC-325 set to the Caller Mode


Open the web UI of the PTC-325 then the **Stream** page. Select **SRT** from the **Protocols** pull-down menu then set **SRT mode** to **Caller**. Enter the IP address of the PC/laptop on which the vMIX is installed. Use the default **SRT port** (9000). If necessary, you can set up **AES encryption** and a 10 digit **passphrase** for an SRT stream.

Lastly, click the **Apply** button to activate the SRT stream.

On the PC or laptop where the vMIX is installed, click Start Menu → vMix(x64) and you should see the interface below after the vMIX is opened.

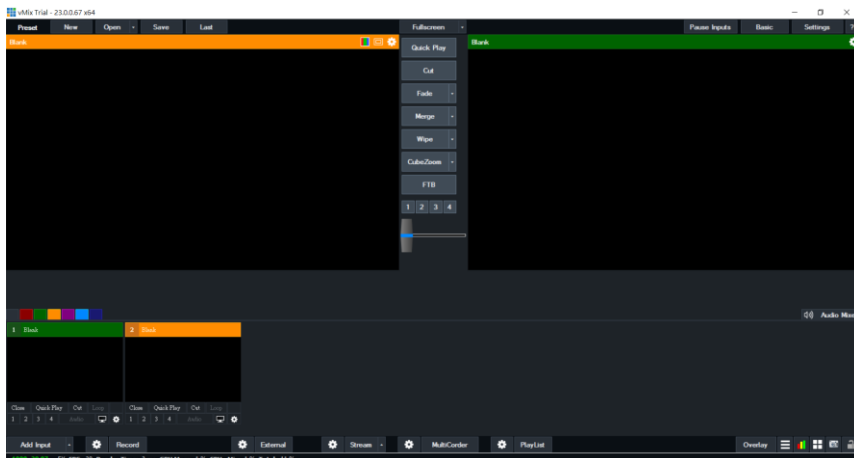


Click “Add Input” then “More”.

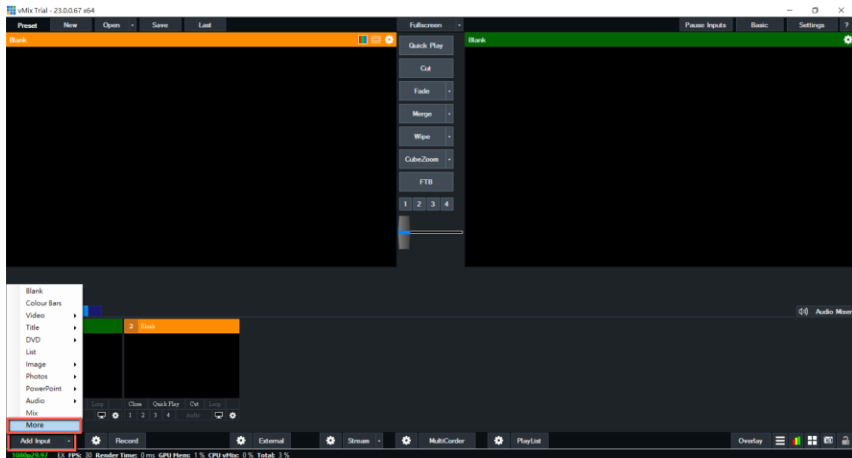


On the Input Select window, click “Stream/SRT” then select “SRT Listener” from the “Stream Type” drop-down menu. After that, enter the following into the respective fields.

- Port: 9000
- Passphrase: 1234567890 (Password for Stream Encryption)
- Key length: 32

Click the “OK” button.

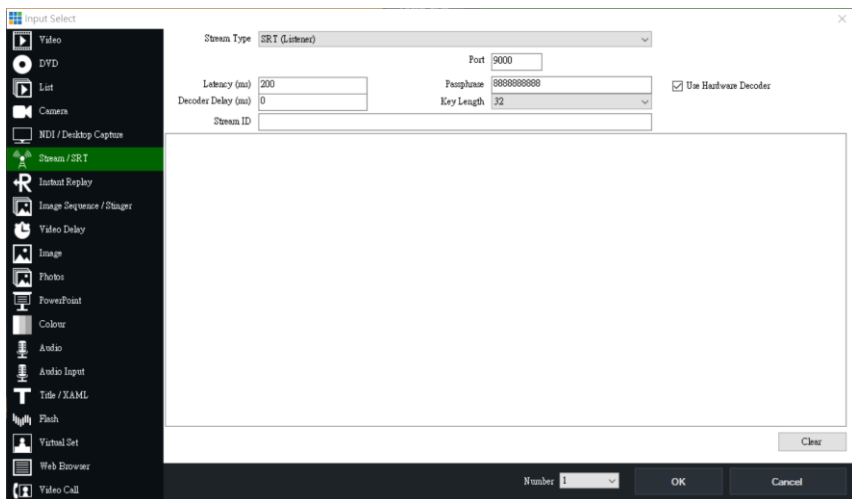


The PTC-325 camera video is now successfully streamed to the vMix via SRT.

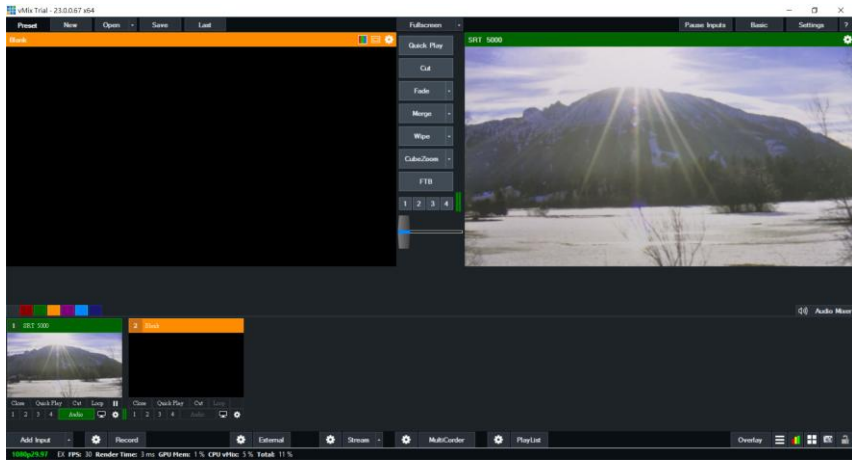

## NDI (NDI-Enabled Cameras Only)

NDI is a network protocol that enables real-time bi-directional delivery of audio and video over standard networks.

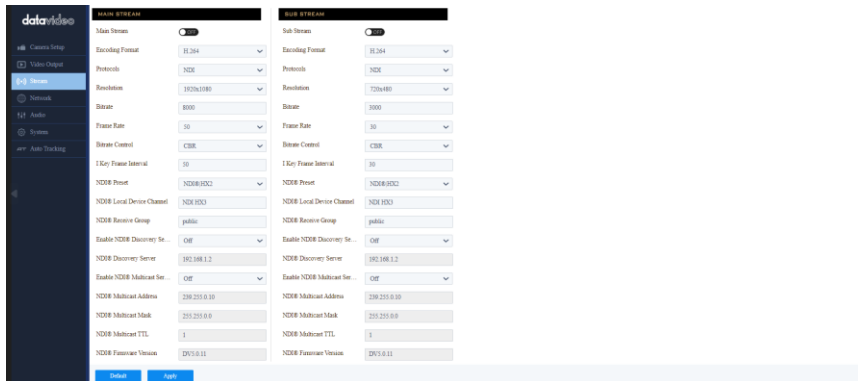

## NDI Preset

The NDI Preset pull-down menu allows you to select a compression option. The options are listed as follows:

- NDI HX2
- NDI HX3: H264 1080@50
- NDI HX3: H264 1080@60
- NDI HX3: H265 1080@50
- NDI HX3: H265 1080@60

### **NDI Local Device Channel**

Assign a local device channel name to the PTC-325 for easy identification if you have multiple devices connected to your network. The default name is NDI HX3.

### **NDI Receive Group**

Use an NDI receive group for security and organization purposes so that unauthorized users on the network will not be able to access the camera. If you would like to assign your PTC-325 to a receive group, enter the name of the group in the textbox. The default name is public.

### **Enable NDI Discovery Server**

An NDI Discovery server operates as a centralized registry of NDI sources. Set this option to ON if you would like to connect to one.

### **NDI Discovery Server**

Simply enter the IP address of the NDI discovery server in the textbox.

### **Enable NDI Multicast Service**

Set this option to ON if you would like the PTC-325 to subscribe to a multicast group.

**Note:** You must have a properly configured multicast enabled network in order to use the NDI Multicast features.

### **NDI Multicast Address**

Enter a multicast address in the textbox.

### **NDI Multicast Mask**

Enter the multicast mask in the textbox.

### **NDI Multicast TTL (Time-to-Live)**

Multicast TTL can be set to any value ranging from 1 to 255. The default is 1.

### **NDI Firmware Version**


The NDI firmware version number is shown here.

## **ONVIF**

Enable ONVIF (Open Network Video Interface Forum) to make your PTC-325 ONVIF compliant in order to allow interoperability with devices from other manufacturers.


**Note:** All ONVIF-enabled devices need to be connected to the same network.



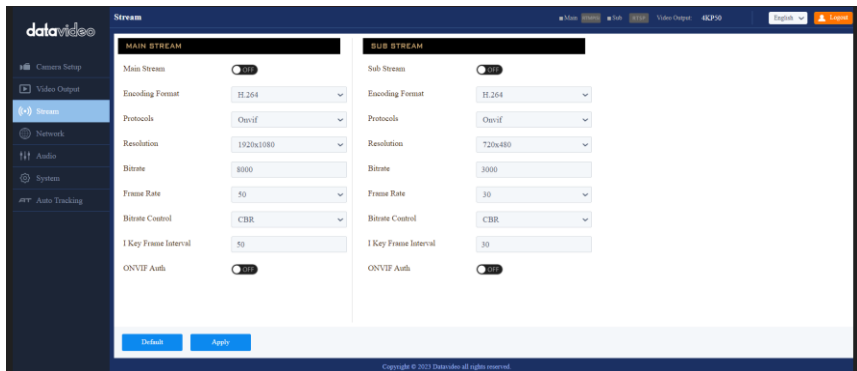

## Network

The PTC-325 uses DHCP to obtain an IP address over an Ethernet-based network by default. You can also configure the device to use a static IP address. In this section, we will show you how.

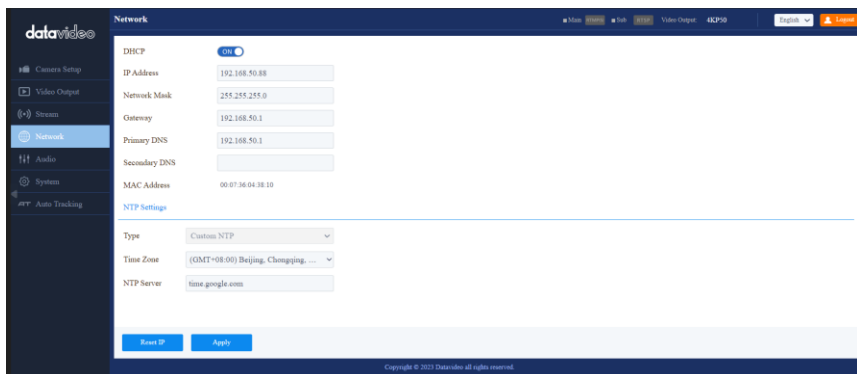

## Network Settings

First turn DHCP off then fill in the following fields.

**IP address:** Enter a static IP address.

**Network Mask:** Also known as the subnet mask.

**Gateway:** Enter a gateway IP.


You can also enter IP addresses of the primary and secondary DNS servers. They are however optional. The device's MAC address is shown below.

## NTP Settings

NTP settings are configured manually. First select a time zone from the Time Zone drop-down menu then enter the domain name of your NTP server. The default NTP server is time.google.com.

## Audio

You can connect an audio source to the PTC-325. Configure the MIC IN/LINE IN port on the Audio page.

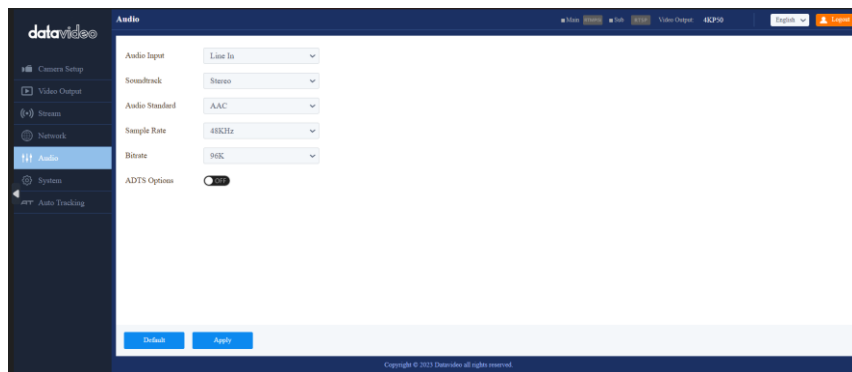

### Audio Input

Select between Line IN and MIC IN.

### Soundtrack

Set the audio output to Mono or Stereo.

Please note, if Mono is selected, then for a stereo audio source, the left audio channel will be replicated onto the right audio channel. On the contrary, if the audio source is mono, only the left audio channel can be heard.

### Audio Standard

AAC and G711 are available as audio standards.

### Sample Rate

You can set the input audio sample rate to either 44.1 or 48 kHz.

### Bitrate

Select a bitrate (96K, 128K and 256K) for your audio input.

### ADTS Options

Enable for streaming audio over the Internet.

# System

The screenshot shows the 'System' configuration page of the datavideo interface. The sidebar on the left contains navigation options: Camera Setup, Video Output, Stream, Network, Audio, System (highlighted), and Auto Tracking. The main panel is divided into sections: 'Camera Name' (UHHD Camera), 'Language' (English), and 'Tally Mode' (Red/Green). Below these is the 'Firmware' section, which displays the current version (SOC v1.1.62 - ARMV7.6.108D) and provides 'Browse' and 'Update' buttons for the file path. The 'Account and Password' section includes an 'Admin Password' field. At the bottom of the main panel are 'Factory Default', 'Apply', and 'Refresh' buttons. A footer at the bottom of the page reads 'Copyright © 2013 datavideo. All rights reserved.'

## General

### Camera Name

Enter a name for your camera.

### Language

Select a preferred language for the web UI.

### Tally Mode

Enable the tally light by selecting either green or red. You can also select dual color mode (Red/Green). To disable the tally light, simply select OFF.

Red: The red tally light indicates that the camera is live (enabled for the program channel) and currently being used for the broadcast. It signals to the camera operator and talent that they are actively being recorded or broadcasted.

Green: The green tally light signifies that the camera is on standby (enabled for the preview channel). It indicates to the camera operator and talent that the camera will be the next in use for the broadcast.

### Firmware

The current version of firmware installed will be shown here. To update the firmware, click the **Browse** button to search for the latest firmware file saved on the PC's hard disk. Click the **Update** button after the file is uploaded.

### Account and Password


View and change the current password here.

# Auto-Tracking

Configure the auto-tracking function on this page.

MODEL PTC-325

CAMERA CONTROL



Far

Tele

Fast

FOCUS

Zoom

SPEED

Near

Wide

Slow

AT

AF

PRESET:

Store

Call

AUTO TRACKING SETTING

Track

ON

Mode

Production Mode

Auto Zoom

OFF

Auto Tilt

OFF

Detected Indicator

Default

Tracking Start Position

Current Location

OSD Reminder

OFF

Figure Size:

Full

Half Body

Close Up

Customized

Size

\$0

Save

Headroom(Low/High)

Low

High

Default

Figure Size Default:

Back to default

Select Subject:

←

→

Confirm

Placement:

Left

Center

Right

AT Speed:

Fast

Mid

Slow

Default

## Mode

In Production mode, the PTC-325 will start tracking as soon as a presenter is on the stage or in the camera view and stops when the presenter leaves the stage.

## Auto Zoom

Enable auto zoom so that the camera zooms in/out automatically when the presenter is tracked.

## Auto Tilt

Enable auto tilt so that the camera tilts automatically when the presenter is tracked.

## Detected Indicator

Once enabled, the camera will detect the presenter and automatically pan, tilt and zoom to follow the targeted person.

## Tracking Start Position

This sets the initial tracking position. Use the **Camera Control** panel to move the camera view to where you would like the tracking to begin, then select **Current Location** from the pull-down menu. You can also select **Preset 1** to **Preset 254** which is a pre-saved location.

## OSD Reminder

When OSD reminder is enabled, you will see the following message prompt when auto-tracking is turned ON.

Auto Tracking : ON (Production Mode Mode)

## Figure Size

You can track **full body**, **half body** or **close-up** of the presenter.

Figure Size:



The interface for configuring the Figure Size includes four selection buttons: 'Full', 'Half Body', 'Close Up', and 'Customized'. The 'Customized' button is highlighted with a brown background and a double-headed arrow. Below these buttons is a 'Size' slider with a circular knob, currently set at 80. To the right of the slider is a 'Save' button. Below the 'Size' slider is a 'Headroom(LowHigh)' slider with a circular knob, currently positioned towards the 'High' end. To the right of this slider is a 'Default' button. At the bottom, there is a 'Figure Size Default:' label and a 'Back to default' button.

Full Half Body Close Up Customized

Size 80 Save

Headroom(LowHigh) Default

Low High

Figure Size Default: Back to default

Select **Customized** if you would like to customize the tracking profile. Use the **Size** slider to adjust between 80 and 360. Use a smaller value if you would like track a closer view and use a larger value otherwise. Click the **Save** button to confirm.

To reset, simply click the **Default** button.

### Headroom(Low/High)

The slider allows you to set the headroom for a custom person size. After setting, press the **Save** button to apply the setting. To reset the setting, tap the **Default** button.

### Select Subject

When there are multiple targets, you can use the right and left arrow keys to switch between them. Click the **Confirm** button to confirm selection of the target.

### Placement

As shown in the diagram below, you can keep the target to the left, in the center or to the right of the image while the camera tracks it.



### AT Speed

You can set the auto-tracking speed to **slow**, **medium (mid)** or **fast**.

# 9. Remote Control


In addition to using the Ethernet port for remote control, you can also connect external controllers to the PTC-325 via the RS-232/RS-422 interface or Wi-Fi.

## RS-232/RS-422

You can connect your PC or any keyboard controllers to the RS-232/RS-422 remote port to control your PTC-325. Use an Ethernet cable and make your own cable using the pinout information provided in this section.



The RS-422 pinouts are shown below.

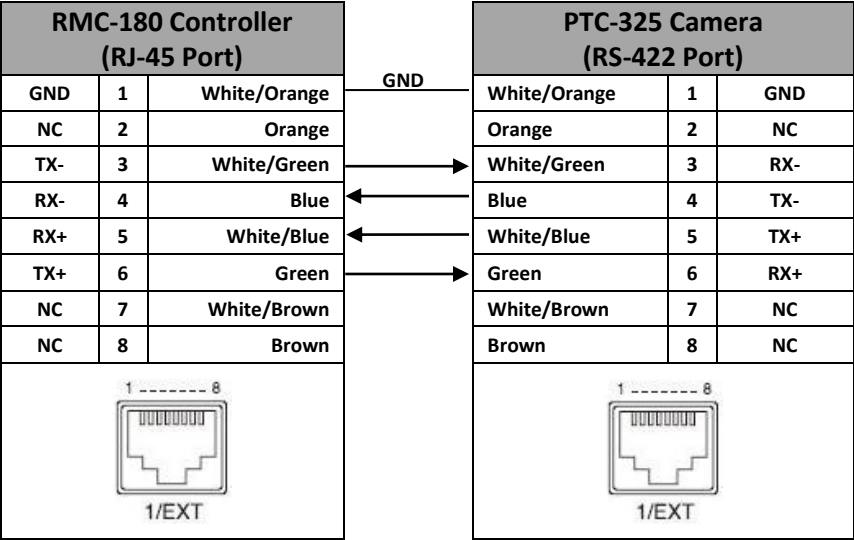

The RS-232 pinouts are shown below.

<b>PTC-325 Camera (RS-232 Port)</b>		
<b>GND</b>	<b>1</b>	<b>White/Orange</b>
<b>NC</b>	<b>2</b>	<b>Orange</b>
<b>NC</b>	<b>3</b>	<b>White/Green</b>
<b>NC</b>	<b>4</b>	<b>Blue</b>
<b>TX</b>	<b>5</b>	<b>White/Blue</b>
<b>RX</b>	<b>6</b>	<b>Green</b>
<b>NC</b>	<b>7</b>	<b>White/Brown</b>
<b>NC</b>	<b>8</b>	<b>Brown</b>
		



## Wi-Fi




PTZ View Assist is an App designed by Datavideo for controlling up to 4 PTC-325 cameras using an Android or iOS device. Wirelessly connect your Android or iOS device to a wireless router and make sure the DVIP port of the camera is also connected to the same router.

Depending on your network environment, you can either connect in DHCP mode or using a static IP address. See [Network Connection](#) of this manual for configuring your network.

For Android devices, please download PTZ View Assist from Google Play.

For iOS devices, please download PTZ View Assist from Apple Store.

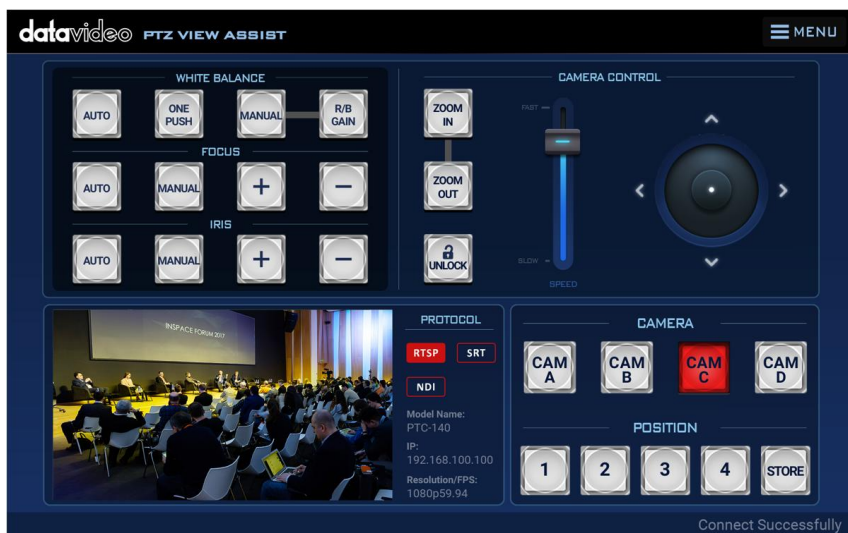

## 10. Firmware Update

Datavideo usually releases new firmware containing new features or reported bug fixes from time to time. Customers can either download the firmware as they wish or contact their local dealer or reseller for assistance.

This section outlines the firmware upgrade process which should take ***approximately few minutes to complete.***

**The existing settings should persist through the *firmware upgrade process, which should not be interrupted once started* as this could result in a non-responsive unit.**

### Ethernet Port

The DVIP port allows you to update the firmware from a remote location. You should connect the PTC-325 and your PC to a DHCP server. In the procedure outlined below, we assume you will be connecting in DHCP mode.

You can establish direct connection if you are using a static IP address.

### Requirements

- PTC-325 Unit
- A PC/Laptop
- Latest firmware downloaded from <https://www.datavideo.com/product/PTC-325>
- Ethernet Cables and a router if the camera is set to DHCP

### Procedure

1. With Ethernet cables, establish connection between the PTC-325 and a PC/Notebook via a router.

**Note: The PTC-325's default connection mode is DHCP.**

2. Unzip the downloaded file in which you should find the latest firmware file.
3. Open a web browser and enter the camera's IP address in the address bar.
4. On the web user interface that opens, click **System** then locate **Firmware** where the current version of firmware installed will be shown here.

**dataVUE** System

Video 1080P Video Output 48.2750

Camera Setup Video Output Stream Network Audio **System** Auto Tracking

Camera Name: UHD Camera

Language: English

Tally Mode: Red-Green

**Firmware**

Version: SOC v1.1.62 - ARMV7.8.588D

File Path:  **Browse** **Update**

**Account and Password**

Admin Password:

**Factory Default** **Apply** **Exit**

Copyright © 2021 DataVUE Inc. All rights reserved.

5. To update the firmware, click the **Browse** button to search for the latest firmware file saved on the PC's hard disk.
6. Click the **Update** button after the file is uploaded.


# 11. Frequently-Asked Questions

This section describes problems that you may encounter while using PTC-325. If you have any questions, please refer to related sections and follow all suggested solutions. If problem still exists, please contact your distributor or the service center.

No.	Problems	Solutions
1.	What are important points for product maintenance?	<ol style="list-style-type: none"><li>1. If the camera will not be used for a long time, please unplug the 12V DC power plug, and remove AC power adapter from AC outlet.</li><li>2. Use soft cloth or tissue to clean the camera.</li><li>3. After washing the camera lens, dry it with a soft dry cloth. Use a neutral detergent rather than acidic or corrosive detergents to clean the lens.</li></ol>
2.	There is no output video.	<ol style="list-style-type: none"><li>1. Check that your power is properly connected. This is indicated by the power LED.</li><li>2. Make sure the camera is switched ON with no issues.</li><li>3. Check your video cable connection.</li></ol>
3.	I have seen image jitter while zooming in or out.	<ol style="list-style-type: none"><li>1. Make sure the camera is properly mounted.</li><li>2. Make sure that machines that could cause vibration are not in proximity of the camera.</li></ol>
4.	The camera's web UI cannot be opened using the IE browser.	Microsoft permanently disabled the Internet Explorer browser. Use other browsers such as Google Chrome, Safari and Microsoft Edge.
5.	The remote control is not working.	<ol style="list-style-type: none"><li>1. Try setting the camera to CAM1 and try again.</li><li>2. Make sure the remote control's battery is fully charged.</li><li>3. Check your device working mode.</li><li>4. Make sure the OSD menu is closed.</li></ol>
6.	The serial port is not working properly.	<ol style="list-style-type: none"><li>1. Make sure your baud rate and device address are correct.</li><li>2. Check your device working mode.</li></ol>

		3. Make sure the OSD menu is closed as the serial port is disabled if the OSD menu is active.
<b>7.</b>	I cannot log in to the Web UI.	1. Check your Ethernet connection. 2. Check your network settings such as IP address.

# 12. Dimensions

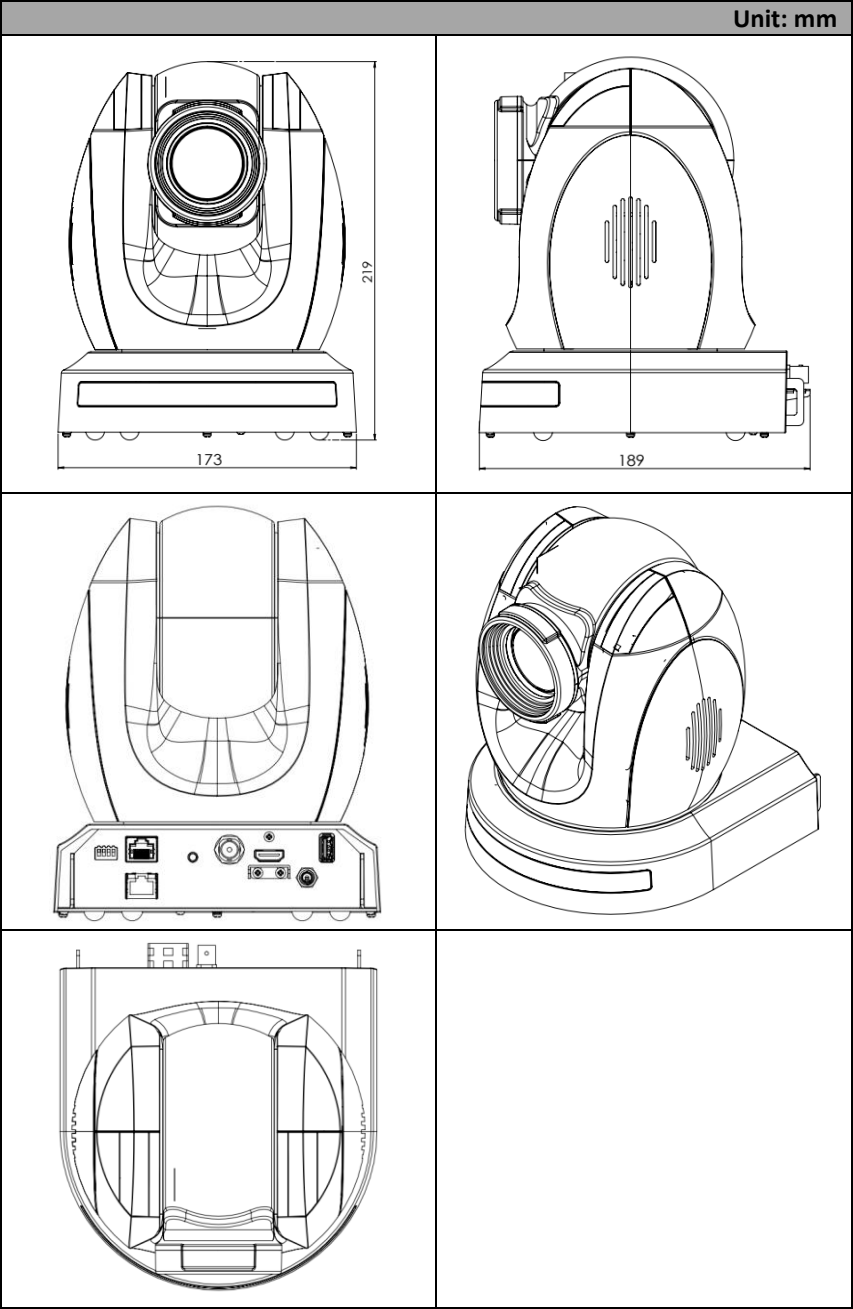

## 13. Specifications

Camera Parameters	
<b>Product Name</b>	4K 30X Tracking PTZ Camera
<b>Video Format</b>	HDMI: 2160p60/59.94/50/30/29.97/25 1080p60/59.94/50/30/29.97/25 1080i60/59.94/50 720p60/59.94/50 *2160p60/59.94/50 YUV 4:2:2  SDI: 1080p60/59.94/50/30/29.97/25 1080i60/59.94/50 720p60/59.94/50
<b>Image Sensor</b>	1/2.8" CMOS
<b>Effective Pixels (approx.)</b>	8.46 Mega Pixels
<b>S/N Ratio</b>	≥55dB
<b>Min. Illumination</b>	0.5 Lux @ (F1.8, AGC ON)
<b>Electronic Shutter</b>	1/30s ~ 1/10000s
<b>Zoom Ratio</b>	30x Optical Zoom 16x Digital Zoom
<b>Effective Zoom Ratio</b>	30X
<b>Gamma</b>	N/A
<b>Iris Control</b>	Auto / Manual
<b>Digital Noise Reductions</b>	3D
<b>On-Screen Display (OSD)</b>	English Simplified Chinese Traditional Chinese
<b>White Balance</b>	Auto Indoor Outdoor OnePush Manual VAR
<b>AGC / Gain Control</b>	Yes

<b>Mirror / Flip Image</b>	Yes
<b>Focus Mode</b>	Auto / Manual
<b>Panning / Tilting Range</b>	Pan: 300 degrees Tilt: +130 to -15 degrees
<b>Panning / Tilting Speed</b>	Pan: 0.876°/s ~ 43°/s Tilt: 0.693°/s ~ 21.32°/s
<b>Preset</b>	255 Positions
<b>Focal Length</b>	30x, f = 4.5 to 135 mm F1.8 to F4.7
<b>Field of View (Horizontal, Wide)</b>	62.3°
<b>Image Compensation</b>	Backlight compensation
<b>Input /Output Interfaces</b>	
<b>Video Output</b>	HDMI 2.0 x1 3G-SDI x1 10/100/1000M RJ45 (PoE) x1
<b>Audio Input</b>	3.5 mm x 1 (Switch between MIC in/Line in on web UI)
<b>Tally LED</b>	Yes
<b>Control Protocol</b>	Pelco-D/Pelco-P VISCA/VISCA over IP DVIP/ONVIF/NDI
<b>Remote Control Interface</b>	IR Web GUI RS-422/RS-232 DVIP NDI
<b>Video Compression Format</b>	H.264/H.265/MJPEG
<b>Audio Compression Format</b>	AAC G711
<b>Audio Bitrate</b>	96Kbps 128Kbps 256Kbps
<b>Streaming Protocols</b>	RTSP, RTMP(S), ONVIF, Multicast, SRT, NDI Hx3 (1080p)
<b>First Stream Supported Resolution</b>	3840x2160 1920x1080 1280x720



	1024x576 960x540 640x480 640x360
<b>Second Stream Supported Resolution</b>	720x480 640x360 480x270 320x240
<b>Video Bitrate</b>	32Kbps ~ 50Mbps (Single Stream)
<b>Video Bitrate Mode</b>	VBR CBR
<b>Encoding Frame rate</b>	50Hz: 1-50fps 60Hz: 1-60fps
<b>POE</b>	IEEE 802.3at
<b>F/W Update</b>	Via Web UI or USB 2.0
<b>IR Control</b>	Yes
<b>Camera Control Unit</b>	RMC-2P RMC-180 series RMC-300 series PTZ View Assist APP
<b>Tripod Mount</b>	1/4-20 UNC
<b>Optional Accessories</b>	WM-1 WM-10 WM-11
<b>Color</b>	Dark Blue/White
<b>Dimensions (LxWxH)</b>	173 (W) x 219 (H) x 189.08 (D) mm
<b>Weight</b>	2.6 kg
<b>Operating Temp. Range</b>	0~40 °C
<b>Power</b>	DC 12V 21W
<b>What's in the Box</b>	1 x PTC-325 product 1 x RMC-1AT IR remote controller 1 x Ceiling mount bracket-A 1 x Ceiling mount bracket -B 6 x Ceiling mount bracket screw M3*4mm

	1 x DC 12V Power Adaptor 1 x Safety cable
--	--

## Note

## Service & Support

It is our goal to make your products ownership a satisfying experience. Our supporting staff is available to assist you in setting up and operating your system. Please refer to our web site [www.datavideo.com](http://www.datavideo.com) for answers to common questions, support requests or contact your local office below.

Please visit our website for latest manual update.

[www.datavideo.com/product/PTC-325](http://www.datavideo.com/product/PTC-325)



@DatavideoUSA @DatavideoIndia2016  
@DatavideoEMEA @Datavideojapan  
@DatavideoTaiwan @DatavideoLatam  
@DatavideoAsia @DatavideoBrasil



@Datavideo  
@Datavideo\_EMEA  
@Datavideo\_Taiwan



@DatavideoUSA  
@DVTWDVCN



@DatavideoUSA  
@DatavideoEurope

All the trademarks are the properties of their respective owners.