




**-LED PAR -  
7 x 10W 5in1**



MODE D'EMPLOI – USER MANUAL

## 1- Instructions de sécurité



**WARNING**

Avant d'utiliser votre matériel, nous vous recommandons de lire l'ensemble des instructions de ce manuel.

- Conservez ce manuel pour une future consultation. Si vous revendez cet appareil, veillez à transmettre également ce manuel d'utilisation au nouvel acquéreur.
- Déballez entièrement l'appareil ainsi que tous ses accessoires. Vérifiez qu'il n'y a aucun dommage et que l'appareil se trouve en parfait état.
- Il est important d'utiliser le câble d'alimentation secteur fourni (câble avec terre).
- Toujours débrancher l'appareil avant une intervention technique ou avant son entretien.
- Température ambiante maximum pour un fonctionnement optimal de l'appareil : 40°C. Ne pas utiliser l'appareil si la température ambiante dépasse cette valeur.
- En cas de problème de fonctionnement, arrêtez immédiatement l'appareil. Ne pas essayer de le réparer soi-même. Contactez votre revendeur ou faites appel à un réparateur spécialisé et agréé. Il n'y a aucune pièce remplaçable par l'utilisateur.
- Ne pas brancher cet appareil sur un bloc de puissance variable type " Dimmer pack"
- Afin de réduire et d'éviter tout risque d'électrocution ou d'incendie, ne pas utiliser cet appareil dans un milieu humide ou sous la pluie.
- Ne pas regarder directement le faisceau lumineux.
- Cet appareil doit être installé avec un crochet solide et de dimension adéquate au poids supporté. L'appareil doit être vissé au crochet et serré convenablement afin d'éviter toute chute due aux vibrations produites par la machine en fonctionnement. L'accroche de l'appareil doit être sécurisée par une élingue de sécurité. Assurez-vous également que la structure (ou point d'accroche) peut supporter au moins 10X le poids de l'appareil accroché.
- L'appareil doit être installé par une personne qualifiée et doit être placé hors de portée du public.

## **2-Présentation :**

**Projecteur à LED idéal en déco ou en éclairage d'ambiance. LEDs 5 en 1 rouges, vertes, bleues, blanches et ambres, avec mélange de couleurs pour obtenir la teinte que vous souhaitez.**

### **Boutons :**

1. MENU : Pour accéder aux fonctions. Permet également de revenir en arrière dans la navigation.
2. UP : Navigation dans les menus vers le haut
3. DOWN : Navigation dans les menus vers le bas
4. ENTER Pour la validation et accès au menu
5. DMX input & output : Pour la connexion du câble DMX d'arrivée et de sortie (type XLR 3 broches).
6. Connecteur d'alimentation IN
7. Connecteur d'alimentation OUT pour le repiquage d'un autre appareil.

## **3- Caractéristiques techniques**

- Alimentation : AC100-240V 50/60Hz
- Fusible: F3A/250V
- Sources lumineuses : 7 x LED 10W RGBWA 5in1
- Angle du faisceau lumineux : 45 degrés
- Boitier en ABS
- Canaux DMX: 9 canaux
- Programmes automatiques intégré avec défilement des couleurs
- Consommation max : 100W
- Mode Pulsation
- Mode Fade
- Mode Jump
- Dimensions du carton: L 205 × l 205 × H150mm
- Poids brut: 2 kg

Ce projecteur intelligent respecte les normes européennes en vigueur : EN 2014/30/EU, EN 2011/65/EU, EN 2014/35/EU.

## **4-Modes de Fonctionnement :**

### **Sélection du Mode de fonctionnement :**

<b>Menu</b>	<b>Menu</b>	<b>Description</b>
<b>Addr</b>	A001~A512	Adresse DMX
<b>Au</b>	Au1-31	Choix couleur de 1 à 31
<b>FF</b>	FF1-99	Jump couleurs avec réglage de vitesse de 1 à 99
<b>CC</b>	CC1-99	Fade couleurs avec réglage de vitesse de 1 à 99
<b>EE</b>	EE1-99	Pulse couleurs avec réglage de vitesse de 1 à 99
<b>F</b>	F1-255	Strob blanc réglage de vitesse de 1 à 255
<b>Auto</b>	/	Mode show automatique
<b>Soud</b>	Vol 1-9	Mode son avec réglage de la sensibilité

## **Mode DMX**


Ce mode permet de contrôler votre appareil avec un contrôleur DMX. Il faut « adresser » chaque appareil de 1 à 512.

Appuyez sur **MENU** jusqu'à visualiser « **Addr** » puis **A001** , appuyez sur **ENTER** , puis avec les touches **DOWN** et **UP** , sélectionnez l'adresse DMX désirée . Appuyez sur **ENTER** pour valider cette valeur

### **Protocole DMX 9 canaux :**

<b>Canal</b>	<b>Valeur</b>	<b>Fonction</b>
<b>CH1</b>	0-255	Intensité lumineuse générale
<b>CH2</b>	0-255	Intensité du Rouge
<b>CH3</b>	0-255	Intensité du Vert
<b>CH4</b>	0-255	Intensité du Bleu
<b>CH5</b>	0-255	Intensité du Blanc
<b>CH6</b>	0-255	Intensité de l'Ambre
<b>CH7</b>	0-255	Vitesse du Strob
<b>CH8</b>	0-255	Programmes auto
<b>CH9</b>	0-255	Vitesse de défilement des programmes

## 5. Mode DMX (Connexion DMX)

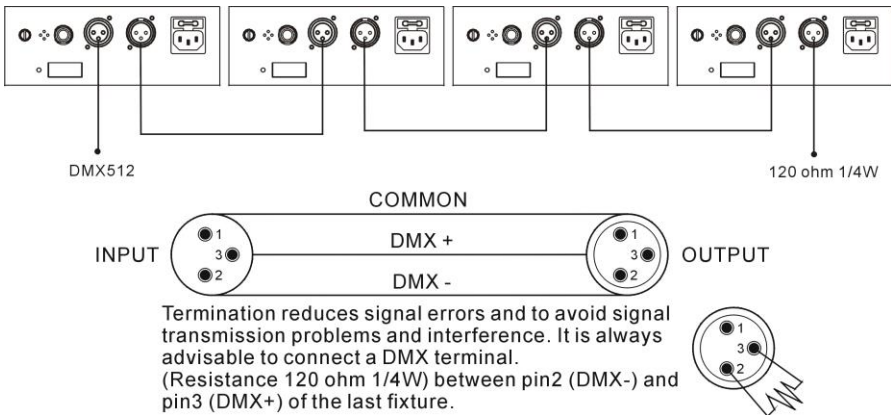

- Si vous utilisez un contrôleur équipé d'une sortie DMX en XLR 5 points, vous devez vous procurer un adaptateur XLR 5 points/3 points.
- Sur le dernier appareil de la chaîne DMX, il est conseillé d'utiliser un « bouchon DMX ». (Une résistance de 120 Ohms 1/4W entre le pin 2(DMX-) et le pin 3(DMX+) placée dans un connecteur DMX mâle).
- Connectez "à la chaîne" les appareils les uns après les autres : Sortie DMX vers Entrée DMX de l'appareil suivant. Le câble DMX ne doit JAMAIS être un câble en "Y". La liaison DMX-512 transporte un signal à haute vitesse. Les câbles utilisés pour cette liaison doivent être de bonne qualité et en bon état.
- Chaque appareil doit avoir une adresse DMX bien précise pour qu'il puisse être contrôlé par le contrôleur DMX. (voir tableau ci-dessus).

## 6- Dépannage

Voici quelques suggestions si vous rencontrez des problèmes avec votre appareil.

- **L'appareil ne fonctionne pas du tout.**
  - Vérifiez le cordon d'alimentation et le fusible.
  - Assurez-vous que votre prise soit bien alimentée.
- **L'appareil ne répond pas ou pas correctement aux commandes DMX.**
  - Vérifiez vos câbles DMX
  - Vérifiez votre adressage DMX
  - Essayez un autre contrôleur DMX
  - Vérifiez que vos câbles DMX ne passent pas à proximité de câbles haute tension, ce qui pourrait créer des interférences.
- **Ne réagit pas au son**
  - Vérifiez le mode de fonctionnement choisi
  - Vérifiez qu'il n'y a pas de câble DMX branché sur DMX IN
  - Tapotez directement sur le microphone pour tester sa réactivité.

## 7- Entretien

Un nettoyage extérieur de l'appareil doit être fait régulièrement. Les lentilles doivent être nettoyées pour une luminosité optimum. Si l'appareil est installé dans un environnement poussiéreux ou avec de la fumée cet entretien régulier est très important. Il est possible qu'un nettoyage des optiques par l'intérieur soit également nécessaire. Débranchez l'appareil avant toute intervention !

- Utilisez un chiffon propre avec très peu de liquide vitre. Toujours bien sécher les parties nettoyées.

## 1- Safety Instructions



**WARNING**

Please read the instructions carefully which includes important information about the installation, operation and maintenance.

- Please keep this User Manual for future consultation. If you sell the fixture to another user, be sure that they also receive this instruction booklet.
- Unpack and check carefully there is no transportation damage before using the fixture.
- It's important to ground the yellow/green conductor to earth in order to avoid electric shock.
- Disconnect main power before servicing and maintenance.
- Maximum ambient temperature is  $T_a : 40^{\circ}$ . Don't operate it where the temperature is higher than this.
- In the event of serious operating problem, stop using the fixture immediately. Never try to repair the fixture by yourself. Repairs carried out by unskilled people can lead to damage or malfunction. Please contact the nearest authorized technical assistance center. There are no user serviceable parts inside the fixture.
- Do not connect the device to any dimmer pack.
- To prevent or reduce the risk of electrical shock or fire, do not expose the fixture to rain or moisture.
- Do not look directly at the LED light beam while the fixture is on.
- Do not touch any wire during operation.
- The unit should be mounted via its screw holes on the bracket. Always ensure that the unit is firmly fixed to avoid vibration and slipping while operating. Always ensure that the structure to which you are attaching the unit is secure and is able to support a weight of 10 times of the unit's weight. Also always use a safety cable that can hold 12 times of the weight of the unit when installing the fixture.
- The equipment must be fixed by professionals. And it must be fixed at a place where is out of the touch of people and has no one pass by or under it.



## **2- Unit Description**

### **Buttons:**

- 1: MENU: Select functions
- 2: UP: Increase parameter
- 3: DOWN: Decrease parameter
- 4: ENTER: Enter submenu
- 5: DMX In & Out
- 6: Output Power connector
- 7: Input Power connector

## **3- Technical Specifications**

- Power supply: AC100-240V 50/60Hz
- Fuse: F3A/250V
- Power Supply: IEC Input/output block
- Light source: 7 X 10 Watts 5 in one LEDS, RGBWA
- Integrated auto programs and shows
- Auto mode with pulse and fade effects
- Great for decoration and ambiance light
- Beam Angle: 45 degrees
- ABS housing for light weight
- DMX Channels: 9 DMX channels
- Packing Dimensions : L 205 × I 205 × H150mm
- Gross Weight: 2 kg

This BoomToneDJ fixture is complying with European standards: EN 2014/30/EU, EN 2011/65/EU, EN 2014/35/EU.

## 4- Menu

Menu	Menu	Description
<b>Addr</b>	A001~A512	DMX Address
<b>Au</b>	Au1-31	Macro Color 1 to 31
<b>FF</b>	FF1-99	Jump with speed from 1 to 99
<b>CC</b>	CC1-99	Fade with speed from 1 to 99
<b>EE</b>	EE1-99	Pulse with speed from 1 to 99
<b>F</b>	F1-255	White Strob with speed from 1 to 255
<b>Auto</b>	/	Auto Show
<b>Soud</b>	Vol 1-9	Sound mode with sensitivity adjustment from 1 to 9

### Control by universal DMX controller

Using universal DMX controller to control the units, you have to set DMX address from 1 to 512 channel so that the units can receive DMX signal.


Press the MENU, then find Addr, press ENTER, when the 1 is showing on the display. Pressing ENTER. Use DOWN and UP button change the DMX512 address.

### DMX Protocole :

Channel	Value	Function
<b>CH1</b>	0-255	Master dimmer
<b>CH2</b>	0-255	Red
<b>CH3</b>	0-255	Green
<b>CH4</b>	0-255	Blue
<b>CH5</b>	0-255	White
<b>CH6</b>	0-255	Amber
<b>CH7</b>	0-255	Strob
<b>CH8</b>	0-255	Auto Show
<b>CH9</b>	0-255	Speed Auto Show

## 5. DMX 512 Connection

The DMX 512 is widely used in intelligent lightings and with a maximum of 512 channels.

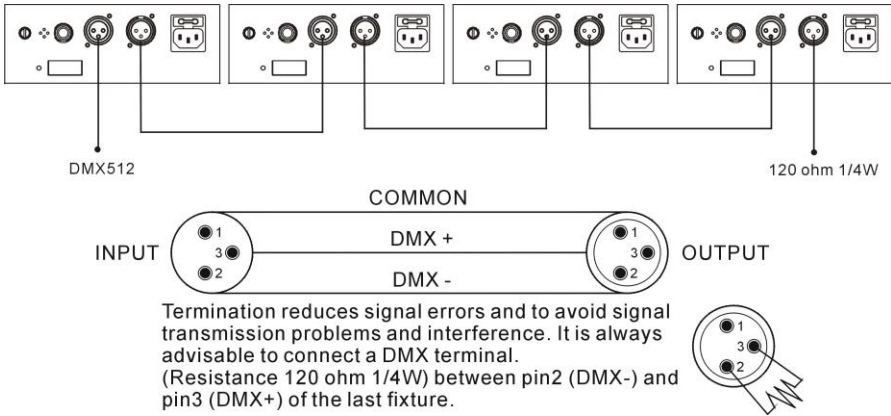

1. If you using a controller with 5 pins DMX output, you need to use a 5 to 3 pin adapter-cable.
2. At last unit, the DMX cable has to be terminated with a terminator. Solder a 120 ohm 1/4W resistor between pin 2(DMX-) and pin 3(DMX+) into a 3-pin XLR-plug and plug it in the DMX-output of the last unit.
3. Connect the unit together in a 'daisy chain' by XLR plug from the output of the unit to the input of the next unit. The cable cannot be branched or split to a 'Y' cable. DMX512 is a very high-speed signal. Inadequate or damaged cables, solder joints or corroded connectors can easily distort the signal and shut down the system.
4. Each lighting unit needs to have an address set to receive the data sent by the controller. The address number is between 0-511 (usually 0 & 1 are equal to 1).

## 6. Troubleshooting

Following are a few common problems that may occur during operation. Here are some suggestions for easy troubleshooting:

- **The fixture does not work, no light**
  - Check the connection of power and main fuse.
  - Measure the mains voltage on the main connector.
- **Not responding to DMX controller**
  - DMX LED should be on. If not, check DMX connectors, cables to see if link properly.
  - If the DMX LED is on and no response to the channel, check the address settings and DMX polarity.
  - If you have intermittent DMX signal problems, check the pins on connectors or on PCB of the fixture or the previous one.
  - Try to use another DMX controller.
  - Check if the DMX cables run near or run alongside to high voltage cables that may cause damage or interference to DMX interface circuit.
- **Some fixtures don't respond to the easy controller**
  - You may have a break in the DMX cabling.
  - Check the LED for the response of the master/ slave mode signal.
- **No response to the sound**
  - Make sure the fixture does not receive DMX signal.
  - Check microphone to see if it is good by tapping the microphone.

## 6. Fixture Cleaning

The cleaning of internal must be carried out periodically to optimize light output. Cleaning frequency depends on the environment in which the fixture operates: damp, smoky or particularly dirty surrounding can cause greater accumulation of dirt on the fixture's optics.

- Clean with soft cloth using normal glass cleaning fluid.
- Always dry the parts carefully.
- Clean the external optics at least every 20 days. Clean the internal optics at least every 30/60 days

 **BoomtoneDJ.com**

⋮ [www.boomtonedj.com](http://www.boomtonedj.com)

Importé par / Imported by  
BoomtoneDJ – MSC  
7 avenue du 1er Mai  
91120 Palaiseau / FRANCE  
[infos@msc-distribution.com](mailto:infos@msc-distribution.com)  
Tel : +33 1 69 34 80 62