

INSTALLATION MANUAL

Thank you for buying this Briteq® product. To take full advantage of all possibilities and for your own safety, please read these operating instructions very carefully before you start using this unit.

FEATURES

- This kit adapts the “BT-THEATRE YOKE” perfectly to the “BT-THEATRE HD1” theatre Fresnel.
- The kit consists of 4 extra parts:
 - Custom-made aluminum cylinder
 - 1pc M10 “hex socket head” bolt L=50mm
 - 1pc M10 “hex socket head” bolt L=30mm
 - 1pc M10 “spring washer”
- All installation accessories for easy installation are included

MECHANICAL ASSEMBLY:

IMPORTANT: To save time, follow the steps below very carefully!
Please also check the user/assembly manual of the “BT-THEATRE YOKE”

You can also check the **INSTRUCTION VIDEO: [CLICK HERE](#)** to better understand some steps in the assembly process.


DIFFERENT PARTS

You will not need all parts: here is a selection of the parts that you will need / not need anymore.

PARTS NOT NEEDED ANYMORE




PARTS NEEDED FOR THE ASSEMBLY

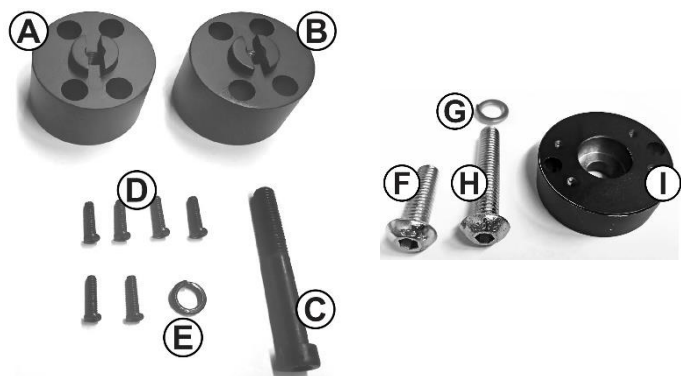

PREPARE SOME OF THE PARTS

1. Take the aluminum cylinder named "I" and insert 2 of the M4 screws "D" → see picture
2. Cylinders "A" and "B" are identical: take one of them and make the central hole bigger using a metal drill \varnothing 10mm. From now on we call this cylinder "B"

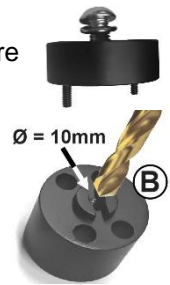**REMOVE THE ORIGINAL BRACKET**

3. Unscrew and remove the L-handle on the left side of the projector: not needed anymore!
4. Unscrew and remove the M10 Hex bolt on the right side of the projector: not needed anymore, except for the biggest washer.
5. Remove the complete bracket: not needed anymore.
6. Keep the 2 big, thin copper colored washers: both are still needed.

INSTALL THE NEW CYLINDERS


7. Fix the cylinder "I" firmly using parts "F" and "G" on the **left side** where you removed the L-handle
8. Now fix cylinder "A" on top of cylinder "I", using four "D" screws.



9. Put the 2 copper washers on the **right side** of the projector and squeeze the 2 copper washers with cylinder "B" (with 10mm hole).
10. Fix the Yoke on cylinder "B" using the M10 bolt "H" and a big black washer from the original bracket.



11. Turn the projector so the **left side** is facing you.
12. Open the Yoke a little so it can be put over the cylinder "A"
13. Fix the Yoke firmly using the long M10 bolt named "C" + spring washer "E"
14. Done

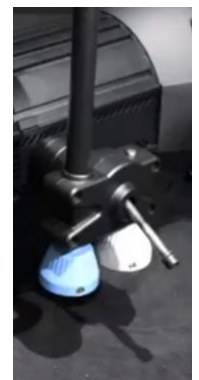

All information is subject to change without prior notice

You can download the latest version of this user manual on our website: www.briteq-lighting.com

Copyright © 2019 by BEGLEC NV - 't Hofveld 2C ~ B1702 Groot-Bijgaarden ~ Belgium
Reproduction or publication of the content in any manner, without express permission of the publisher, is prohibited.