

datavideo



4K AR 3D TRACKING

VIRTUAL STUDIO SYSTEM

TVS-3000

Instruction Manual

www.datavideo.com

Table of Contents

TABLE OF CONTENTS.....	2
FCC COMPLIANCE STATEMENT	4
WARNINGS AND PRECAUTIONS	4
WARRANTY.....	5
STANDARD WARRANTY	5
THREE YEAR WARRANTY	5
DISPOSAL.....	5
CHAPTER 1 INTRODUCTION.....	7
1.1 FEATURES	7
1.2 SYSTEM REQUIREMENTS	7
CHAPTER 2 SYSTEM DIAGRAM	8
CHAPTER 3. LAYOUT OF THE MAIN INTERFACE	9
3.1 CONTROL AND STATUS BAR	9
3.2 FUNCTION BAR.....	9
3.3 PREVIEW WINDOWS FOR SWITCHING CHANNEL	10
3.4 PREVIEW & PROGRAM WINDOWS.....	11
3.5 SWITCHING BUTTONS.....	11
3.6 SPECIAL EFFECTS FOR TRANSITION	12
3.7 THE DSK OVERLAY LAYER FOR PGM/KEY OVERLAY LAYER FOR A SPECIFIC CHANNEL	12
3.8 VIRTUAL CAMERA LENS AREA	13
3.9 OFFSET ADJUSTMENT BOARD	13
3.10 LIST OF DIFFERENT MATERIALS AND AUDIO MIXER	14
CHAPTER 4 OPERATING PROCEDURES	15
4.1 GENERAL CONFIGURATION	15
4.2 ADD SIGNALS	16
4.2.1 Material Categories	16
4.2.2 Switching Channels.....	23
4.3 SPECIAL EFFECT TRANSITION AND NORMAL TRANSITION	24
4.3.1 Special Effects Transition.....	25
4.3.2 Normal Transition.....	26
4.4 GRAPHIC & TEXT EDITOR FOR MAKING GRAPHIC & TEXT COMBINATION	26
4.4.1 Main Interface of the Graphic & Text Combination Editor.....	27
4.4.2 Editing for Multiple Layers Graphic and Text Combinations	31
4.4.3 Apply the CG Package Content from Channel to the BCD Windows.....	35
4.4.4 Create a PIP with more than 4 Live-Scenes by the the Category Layer.....	38
4.5 DSK LAYER AND KEY LAYER	38
4.5.1 Add material to the DSK Layer/KEY Layer	39
4.5.2 Showing/Hiding of the Contents for the DSK Layer/KEY Layer.....	40
4.5.3 Location and Size Adjustment for DSK Layer/KEY Layer	40
4.5.4 Use DSK Layer/KEY Layer to add the PREVIEW/PROGRAM Keyer Signals.....	41
4.6 CHROMAKEY AND VIRTUAL SCENES.....	42
4.6.1 Chromakey Settings.....	42
4.6.2 Load Content into the Virtual Scenes	46
4.6.3 The Adjustment for Virtual Objects and Position of Virtual Camera Lens.....	47
4.7 AUDIO MIXER	49
4.8 STREAMING/RECORDING	51
4.8.1 Streaming	51
4.8.2 Video Recording to Local Hard Disk	51
4.9 CAPTURE CARD SETTINGS AND FILE RELATED SETTINGS	52
4.9.1 Safe Frame.....	52
4.9.2 Capture Card Settings.....	52
4.9.3 Project Files for the TVS-3000	52
4.10 MULTIVIEW	53

4.11 PTZ CONTROL	54
4.12 AMF FORMAT.....	56
CHAPTER 5 FREQUENTLY-ASKED QUESTIONS.....	57
CHAPTER 6 PRODUCT SPECIFICATIONS.....	60
SERVICE AND SUPPORT.....	64

Disclaimer of Product and Services

The information offered in this instruction manual is intended as a guide only. At all times, Datavideo Technologies will try to give correct, complete and suitable information. However, Datavideo Technologies cannot exclude that some information in this manual, from time to time, may not be correct or may be incomplete. This manual may contain typing errors, omissions or incorrect information. Datavideo Technologies always recommend that you double check the information in this document for accuracy before making any purchase decision or using the product. Datavideo Technologies is not responsible for any omissions or errors, or for any subsequent loss or damage caused by using the information contained within this manual. Further advice on the content of this manual or on the product can be obtained by contacting your local Datavideo Office or dealer.

FCC Compliance Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference, and
- 2) This device must accept any interference received, including interference that may cause undesired operation.

Warnings and Precautions

1. Read all of these warnings and save them for later reference.
2. Follow all warnings and instructions marked on this unit.
3. Unplug this unit from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
4. Do not use this unit in or near water.
5. Do not place this unit on an unstable cart, stand, or table. The unit may fall, causing serious damage.
6. Slots and openings on the cabinet top, back, and bottom are provided for ventilation. To ensure safe and reliable operation of this unit, and to protect it from overheating, do not block or cover these openings. Do not place this unit on a bed, sofa, rug, or similar surface, as the ventilation openings on the bottom of the cabinet will be blocked. This unit should never be placed near or over a heat register or radiator. This unit should not be placed in a built-in installation unless proper ventilation is provided.
7. This product should only be operated from the type of power source indicated on the marking label of the AC adapter. If you are not sure of the type of power available, consult your Datavideo dealer or your local power company.
8. Do not allow anything to rest on the power cord. Do not locate this unit where the power cord will be walked on, rolled over, or otherwise stressed.
9. If an extension cord must be used with this unit, make sure that the total of the ampere ratings on the products plugged into the extension cord do not exceed the extension cord rating.
10. Make sure that the total amperes of all the units that are plugged into a single wall outlet do not exceed 15 amperes.
11. Never push objects of any kind into this unit through the cabinet ventilation slots, as they may touch dangerous voltage points or short out parts that could result in risk of fire or electric shock. Never spill liquid of any kind onto or into this unit.
12. Except as specifically explained elsewhere in this manual, do not attempt to service this product yourself. Opening or removing covers that are marked "Do Not Remove" may expose you to dangerous voltage points or other risks, and will void your warranty. Refer all service issues to qualified service personnel.
13. Unplug this product from the wall outlet and refer to qualified service personnel under the following conditions:
 - a. When the power cord is damaged or frayed;
 - b. When liquid has spilled into the unit;
 - c. When the product has been exposed to rain or water;
 - d. When the product does not operate normally under normal operating conditions.

Adjust only those controls that are covered by the operating instructions in this manual; improper adjustment of other controls may result in damage to the unit and may often require extensive work by a qualified technician to restore the unit to normal operation;
 - e. When the product has been dropped or the cabinet has been damaged;
 - f. When the product exhibits a distinct change in performance, indicating a need for service.



Warranty

Standard Warranty


- Datavideo equipment is guaranteed against any manufacturing defects for one year from the date of purchase.
- The original purchase invoice or other documentary evidence should be supplied at the time of any request for repair under warranty.
- The product warranty period begins on the purchase date. If the purchase date is unknown, the product warranty period begins on the thirtieth day after shipment from a Datavideo office.
- All non-Datavideo manufactured products (product without Datavideo logo) have only one year warranty from the date of purchase.
- Damage caused by accident, misuse, unauthorized repairs, sand, grit or water is not covered under warranty.
- Viruses and malware infections on the computer systems are not covered under warranty.
- Any errors that are caused by unauthorized third-party software installations, which are not required by our computer systems, are not covered under warranty.
- All mail or transportation costs including insurance are at the expense of the owner.
- All other claims of any nature are not covered.
- All accessories including headphones, cables, batteries, metal parts, housing, cable reel and consumable parts are not covered under warranty.
- Warranty only valid in the country or region of purchase.
- Your statutory rights are not affected.

Three Year Warranty

- All Datavideo products purchased after July 1st, 2017 qualify for a free two years extension to the standard warranty, providing the product is registered with Datavideo **within 30** days of purchase.
- Certain parts with limited lifetime expectancy such as LCD panels, DVD drives, Hard Drive, Solid State Drive, SD Card, USB Thumb Drive, Lighting, Non-PCIe Card and third party provided PC components are covered for 1 year.
- The three-year warranty must be registered on Datavideo's official website or with your local Datavideo office or one of its authorized distributors within 30 days of purchase.



Disposal

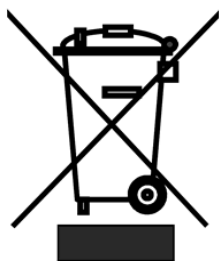

For EU Customers only - WEEE Marking

This symbol on the product or on its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, your household waste disposal service or the shop where you purchased the product.



CE Marking is the symbol as shown on the left of this page. The letters "CE" are the abbreviation of French phrase "Conformité Européene" which literally means "European Conformity". The term initially used was "EC Mark" and it was officially replaced by "CE Marking" in the Directive 93/68/EEC in 1993. "CE Marking" is now used in all EU official documents.

Chapter 1 Introduction

The TVS-3000 is a real-time production solution which is based on switcher functions. TVS-3000 provides users the powerful computing power for achieving real-time transition effects, image & text combination, professional live character generator system, virtual scenes, fast motion and slow motion replay, streaming and recording simultaneously for production needs in different environments.

1.1 Features

- Supports up to 2 4K25/30P Video Signal Inputs
- Supports 3D Rocker Arm Tracking
- 3D Virtual Studio
- Supports 4 high resolution switching signals for standard setting and can be expanded for supporting up to 8 switching signals for optional.
- Supports up to 8 signals for high resolution ISO recording
- Supports H.264 Encoding for Live-Streaming
- Supports Broadcasting Grade Image & Text Editing
- Supports Built-in software-based Audio Mixer with fast motion and slow motion replay
- Supports NDI Format


1.2 System Requirements

If you purchase Datavideo's TVS-3000 3D Tracking VR/AR 4K Virtual Studio System, its hardware settings can assure the normal operation of the TVS-3000 software. For other situations, please purchase the system with the settings that are equal or above following table for normal operation of the TVS-3000 software.


CPU	Intel Core i7 3.5GHz
GPU	Nvidia GTX1060 6GB
Memory	16GB DDR4 2133MHz
SSD for system	240GB
HDD for material	500GB 7200rpm
OS	Windows 10 64bit

Chapter 2 System Diagram

1. 4K Mode

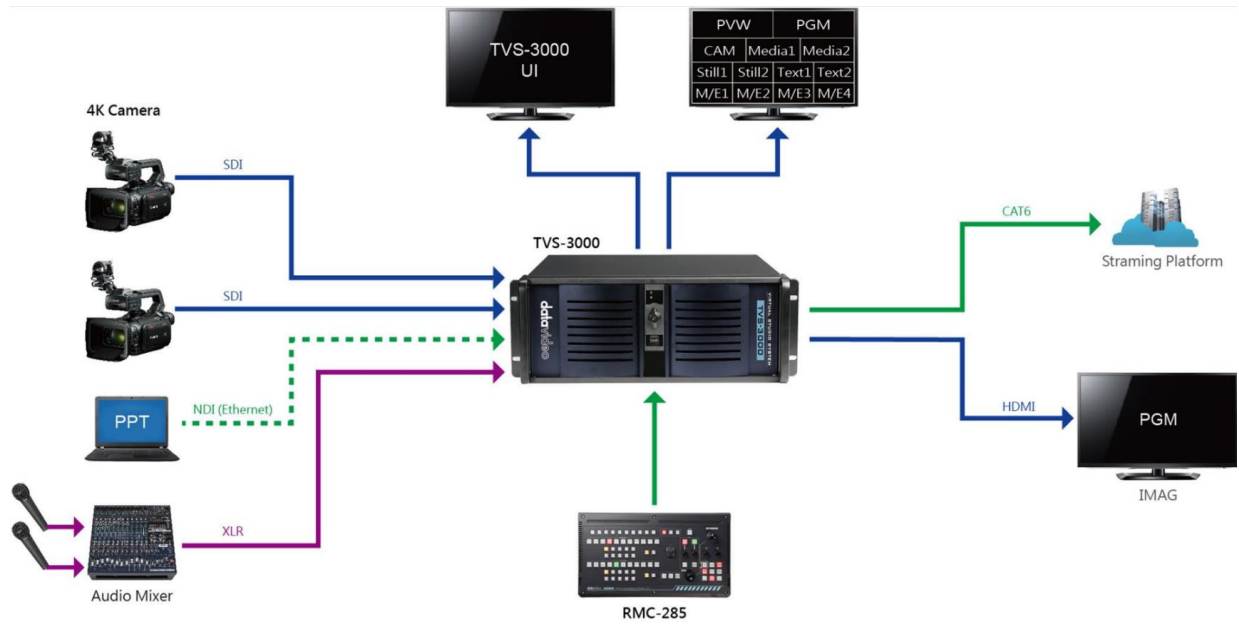


2. HD Mode

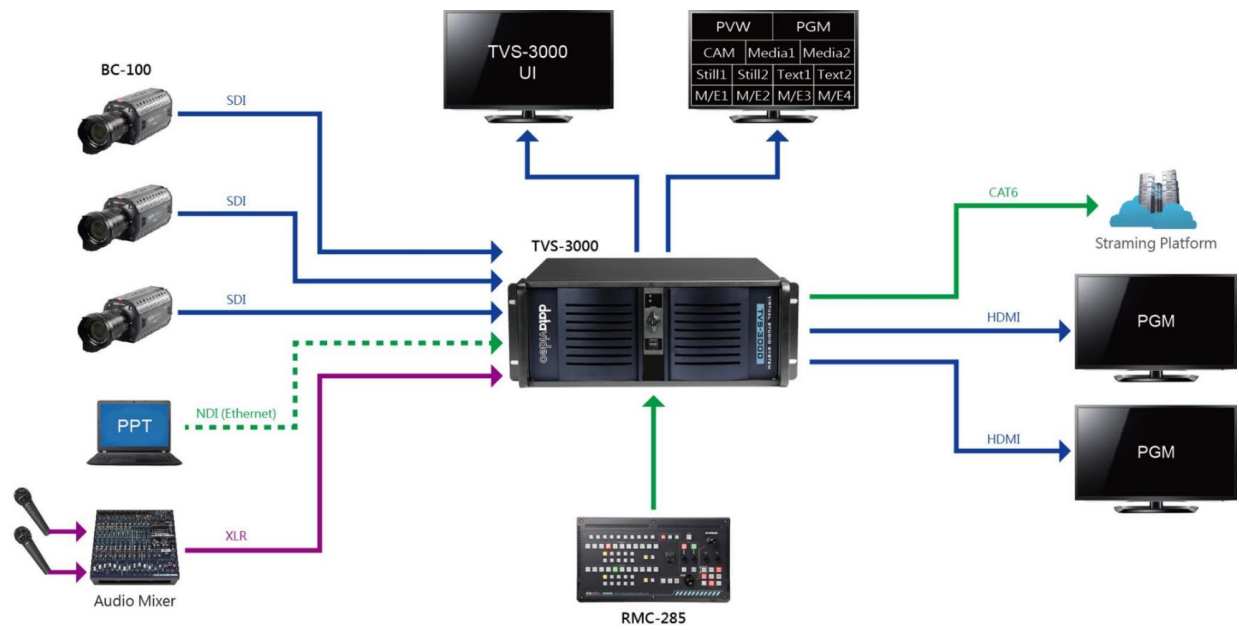

Chapter 3. Layout of the Main Interface

The main interface of the Datavideo TVS-3000 software is shown as following diagram. The main interface provides users many functions including “Control and Status Bar”, “Function Bar”, “Preview Windows for Switching Channel”, “PREVIEW/PROGRAM Windows”, “Switching Buttons”, “Transition Effect”, “Overlay Sources for PGM Channel/Overlay Sources for Specific Channel”, “Virtual Camera Center”, “Location Changing Adjustment Panel”, “Lists of Different Types of Materials” and “Audio Mixer” for users. Please see following paragraphs for detailed introduction of the main interface of the TVS-3000.

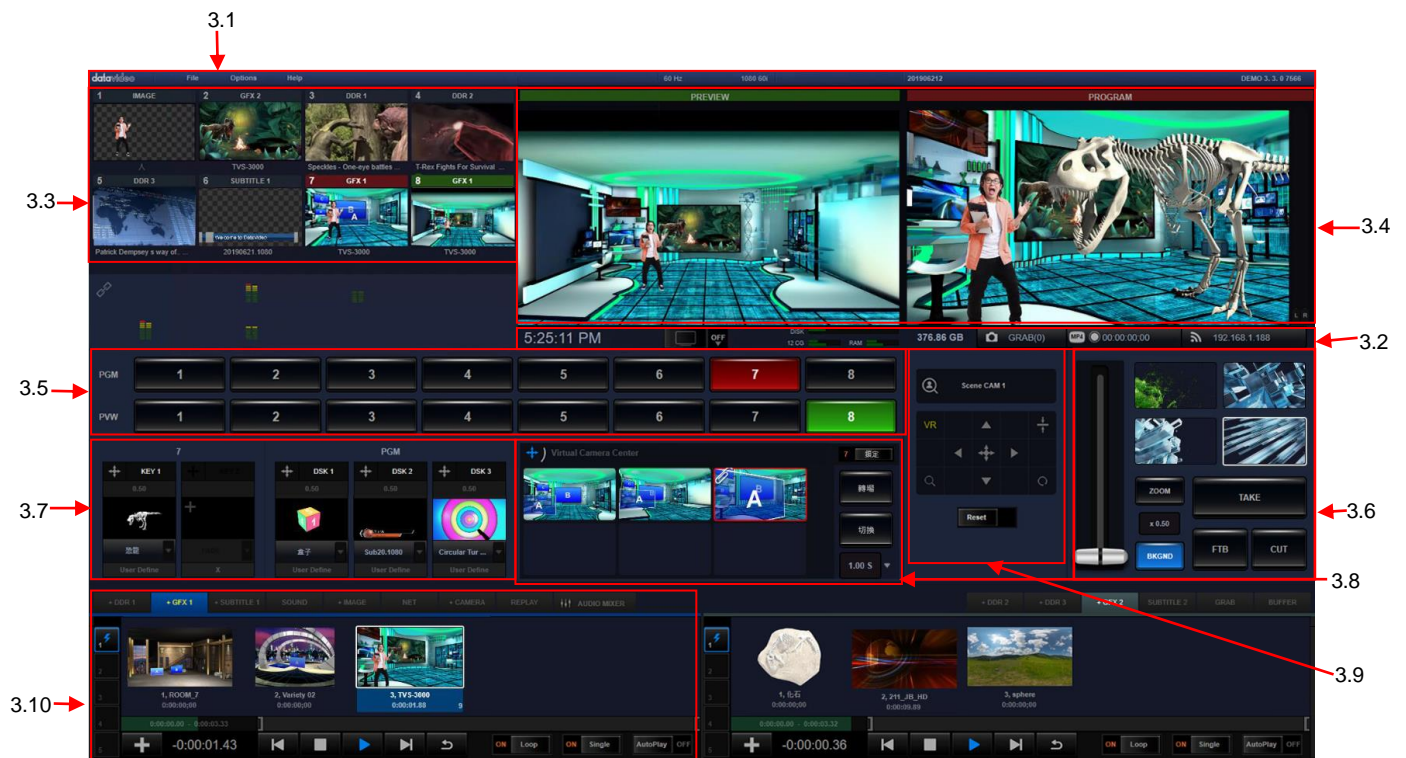

3.1 Control and Status Bar

Control and Status bar provides users the basic setting option. Users can save or open the engineering document from the “File” option. Moreover, users can set the basic PGM channel of the software, modify the streaming parameters, set the Multiview output format, set the PTZ control parameters and open the Image & Text Editor from the “Options” drop-down menu. The options in the drop-down menu will be updated according to the software version update. The “Control and Status Bar” is shown as following diagram.



3.2 Function Bar


The System Clock is located at the left side of the Function Bar and the Output Switch is located at the right side of the System Clock. When the Output Switch is pulled to the right side, the PGM channel will be activated and the PGM output will be started. The three bars which are located at the right side of the Output Switch are used for monitoring the hard disk


space, CPU/GPU workload and the status of the Internal RAM respectively. The three buttons which are located at the rightmost of the Function Bar are used to control screenshot, video recording and video streaming. After those buttons are clicked, the corresponding operations will be activated and those buttons will be shown in blue, red and green respectively to show their operation status. The Function Bar is shown as following diagram.



3.3 Preview Windows for Switching Channel


This area provides 8 preview windows for switching channels for users. Each switching channel can select a material/source list for the corresponding source of the channel. Each channel has its own “Channel”, “Matting” and “Adjust” menu. After clicking the thumbnail of the desired channel that users want to adjust, the thumbnail of the selected channel will be surrounded

by a white rectangular. After that, users can click the link icon  which is located at the bottom left side of the switching channel area to open the drop-down menu to adjust the content of the selected channel. The preview window of the switching channel is shown as following diagram.

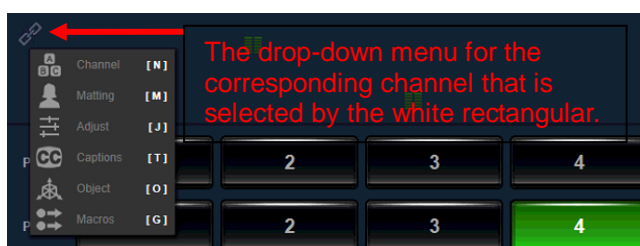


3.4 PREVIEW & PROGRAM WINDOWS

The content which is shown in the PREVIEW window is the content which is prepared to output to the PROGRAM window. The PROGRAM window will show the final content of the program that is capturing by the capture card or is streaming to stream platforms. The PREVIEW/PROGRAM windows are shown as following diagrams.

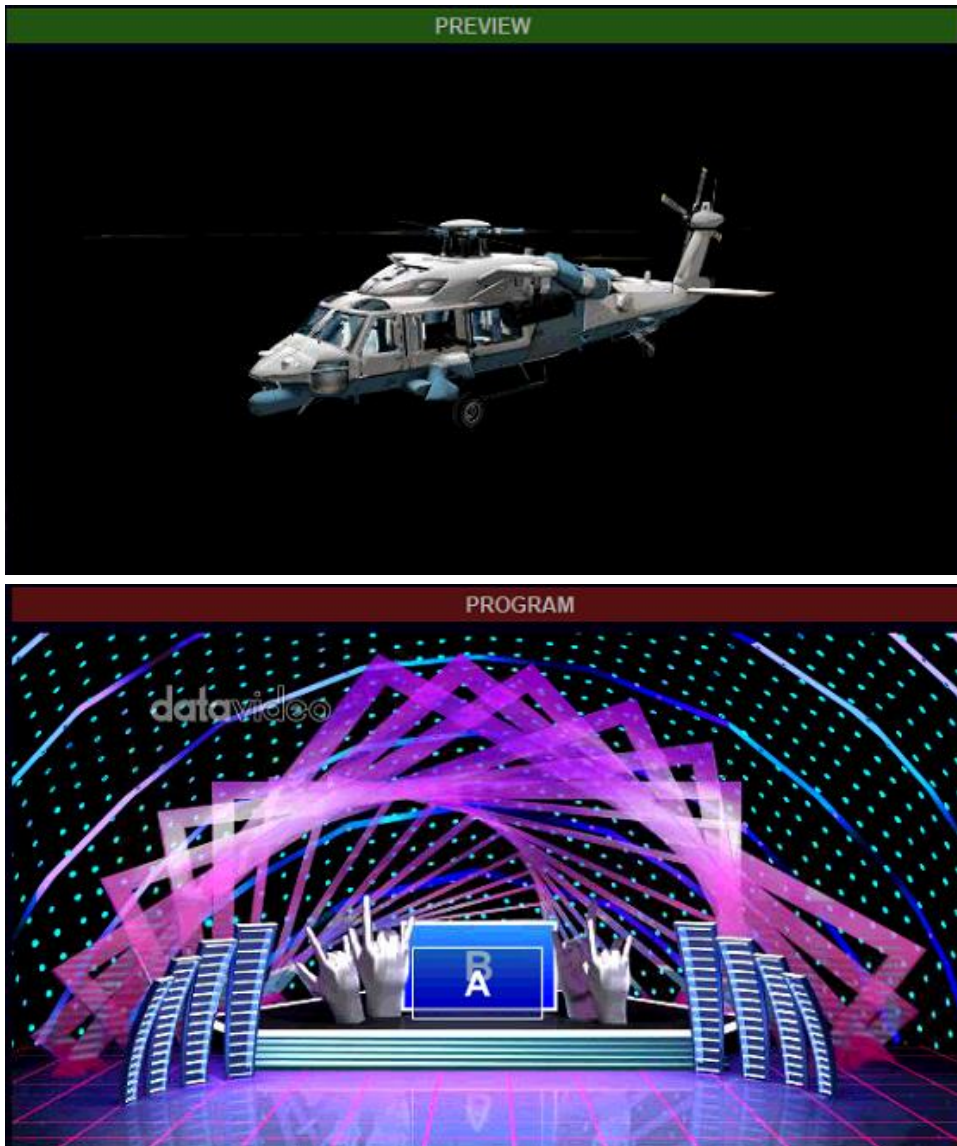


3.5 Switching Buttons

There are two rows of the buttons including PGM and PWM. Please press the activated PGM channel button which is shown in red and then users can select any switching channel to transfer it to the PGM channel for output. If users click the PWM channel button which is shown in green, users can select any switching channel to transfer to the PWM channel for preview. The switching buttons are shown as following diagram.

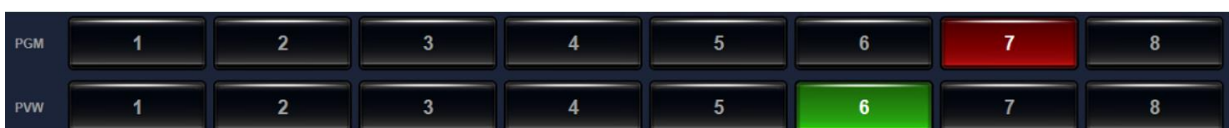

3.6 Special Effects for Transition

The area which is below the PROGRAM window is the special effects area for switching. There are four special effects switching buttons for loading up to 4 different special effects for switching. "Take", "CUT" and "FTB" buttons and the virtual T-bar are also in this area. The virtual T-bar can control the moving of the virtual camera lens. The special effects switching area is shown as following diagram.

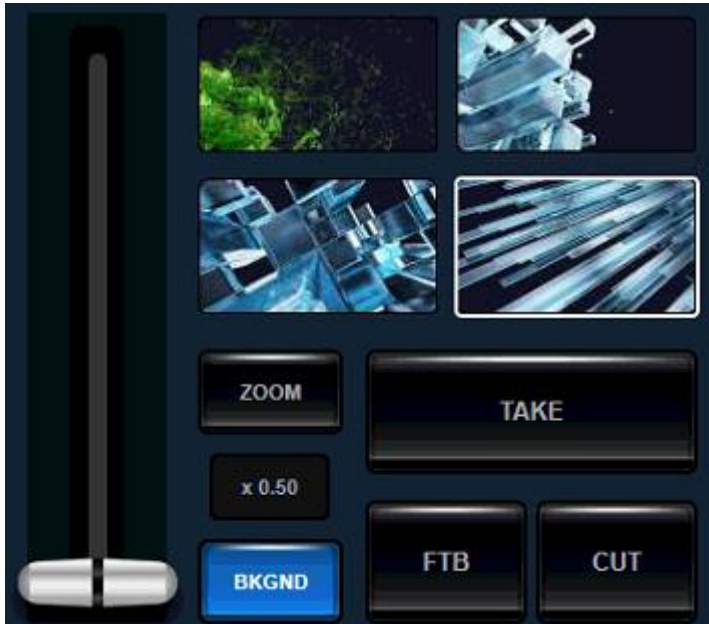

3.7 The DSK Overlay layer for PGM/Key Overlay Layer for a Specific Channel


DSK Overlay Layer for PGM

The Datavideo TVS-3000 provides three DSK Overlay layer for overlaying the characters or other layers on the surface of the output of the PGM channel. The contents which are added in these three DSK layers will be overlaid on the surface of the PGM signal. After loading the special effects for transition, the DSK layer will be shown and disappeared with the special effect. There is a red bar that will be shown to remind users that the content of this channel is activated and shown. The DSK Overlay layer is shown as following diagram.




Key Overlay Layer for a Specific Channel

For each switching channel, users can assign two overlay layers for this specific channel only. This layer is different from the DSK Overlay layer for PGM, the content of the Key Overlay Layer will not be overlaid on the surface of the PGM permanently. When the content of this specific channel is switched out or is used to other Multiview pictures or virtual scenes, the key overlay layer will be kept on the content of this specific channel. The window for key overlay layer for a specific channel is shown as following diagram.

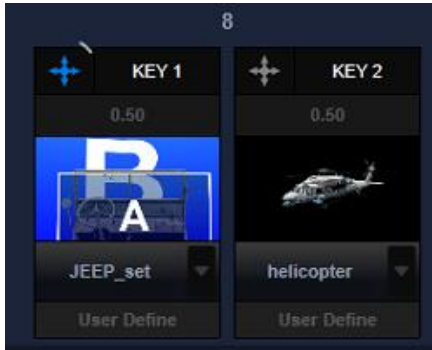

3.8 Virtual Camera Lens Area

Users can set up to 6 different 3D or 2D Zoom In/Zoom Out scenes for each virtual scene or signal channel. Part of the thumbnail of each camera position or virtual scene will be kept in this virtual camera lens area. Users can double-click the camera position or click the “Take” button for smooth transition. Users can also right-click the camera position or click the CUT button for direct transition. The virtual camera lens area is shown as following diagram.

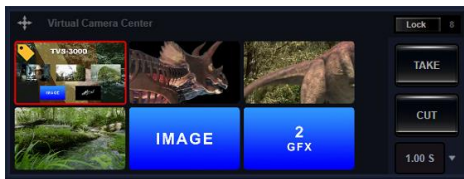


3.9 Offset Adjustment Board

The Offset Adjustment Board is used for virtual camera lens adjustment, object adjustment of the virtual scene, location adjustment of the DSK/KEY layers. The characters which are shown above the arrow of the offset adjustment board will show the current selected item for adjustment. There is a “Reset” button which is located below the adjustment board. After the offset is adjusted, the button will be shown in white. Pull the “Reset” button to the right side will restore the adjusted item to its initial location. Users can not only click the up, down, left and right arrows but also can click the corresponding button and then drag the cursor of the mouse to adjust the location of the selected item. The Offset Adjustment Board is shown as following diagram.




3.10 List of Different Materials and Audio Mixer

The Datavideo TVS-3000 can divide many local materials and signal sources into several categories. The tags for the lists of different materials are located on the top of the material lists for different material categories. Click the tag allows users to enter the list for each category. There are five material lists from No.1 to No.5 for the DDR/IMAGE/SUBTITLE categories. For other categories, they have one material list only. The way to add content into the material list is to click the Plus button on the bottom left side. The material list can be browsed by using the mouse wheel. For some material lists for saving the playable materials, there are playback progress bar and mark-in/mark-out progress bar which are located on the bottom left side of the material list window for users to jump to specific point for playing by a slider or to set the mark-in and mark-out points. There are some buttons including “Loop”, “Single” and “AutoPlay” which are located on the bottom right side for users to set the regulation for the playback. For the material lists which can be played in a specific order, there are five sub-playlists which are located on the left side of the material lists for users to edit five sub-playlists within one material category. The example for the material list for the “SUBTITLE” category is shown as following diagram.

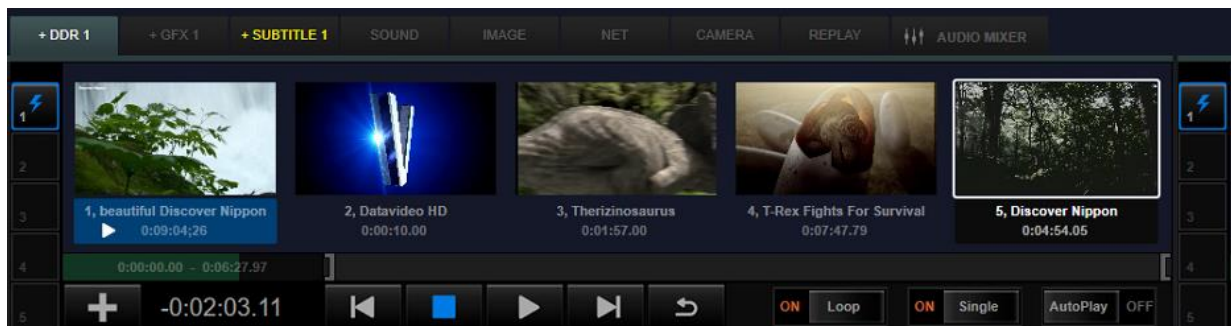


Users can open the audio mixer interface by pressing the AUDIO MIXER tag, the audio situation for each corresponding switching channel will be shown on its corresponded audio mixer channel. Users can adjust the volume for each channel by the slider or can press the “MUTE”, “SOLO” and “FOLLOW” buttons to turn on/turn off the playback regulation of the audio source for each corresponding channel. The slider which is located below the headphone icon on the left side of the first audio channel is used to control the volume of the monitoring output. The “AUX INPUT VOLUME” knob which is located on the right side is used to control the audio volume of the independent audio input source. The “OUTPUT VOLUME” knob is used to control the audio volume of the final program output. Users can press the “AUX” tag which is next to the “OUT” tag to open the audio mixer of independent audio input source. All of the activated independent audio input facilities which are connected to the TVS-3000 will be shown in this section. Users can adjust the volume of the audio input source and the regulation for the audio output in this section. The audio mixer is shown as following diagram.

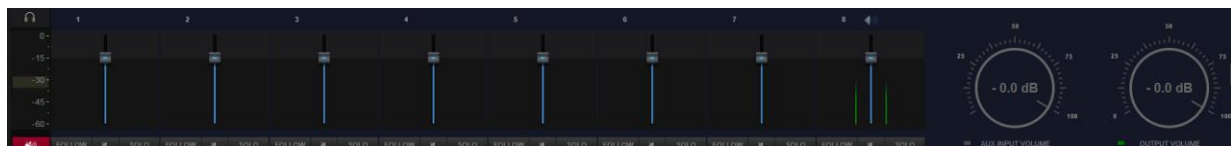


Chapter 4 Operating Procedures

4.1 General Configuration

After entering the software interface, users can click the “General Configuration” from the “Option” drop-down menu for basic setting of the program production.

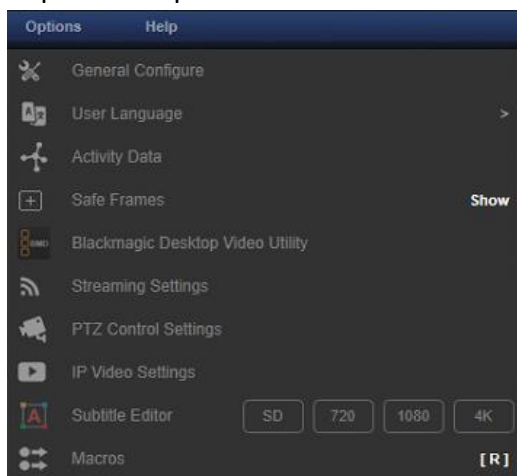

Please open the “General Configuration” menu and then the window for the General Configuration settings will be show as following diagram.

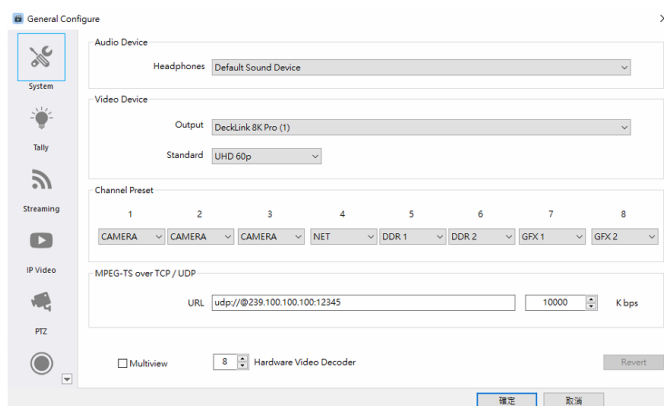

For the “Audio Device” and “Video Device”, users can click the “Headphones” and “Output” drop-down menus to show all of the audio and video output facilities that are connected to the TVS-3000. If users select the “Default Sound Device” option from the drop-down menu, the device which is set by the system control panel will be selected to be the audio output device.

The “Standard” drop-down menu allows users to determine the video output format of the program through the output card or the NDI output. If the setting of this option is changed, the TVS-3000 system will remind users to reboot the TVS-3000 to apply the new setting.

The “Channel Preset” option allows users to preset the corresponding material/source categories for 8 channels in advance for creating the TVS-3000 file for the first time. Those presets can be changed directly from the software interface for future program production. The URL, port number and bit rate of the TS over TCP/UDP streaming can be set in MPEG-TS over TCP/UDP section. The URL for general RTMP streaming can be set from the “Streaming” option.


When there is a second display which is connected to the graphic card, users can open the multi-view signal from the second display by checking the “Multiview” checkbox.

The number of the “Hardware Video Decoder” determines the maximum number allowed of the videos for using the hardware encoding function of the graphic card simultaneously. If there are too many 4K videos are loaded for playing simultaneously, it will cause heavy loading for the video engine of the graphic card. Users can enter a lower number to solve this issue.


4.2 Add Signals

4.2.1 Material Categories

For the TVS-3000 software, users need to put different local materials and input signals that are needed for the program production into different material categories for management and allocation. Before production, users can add those materials into the lists of corresponding material categories. The material list is located on the bottom side of the whole TVS-3000 user interface. Users can show the corresponding material list by clicking the tag of each material list for further operation.

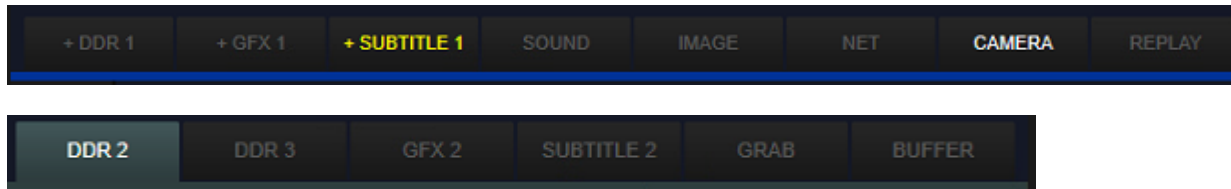


CAMERA: Users can add different camera signals, Input signals for NDI agreement and capturing signal for the second display panel into the material list of the “CAMERA” option. Please press the “CAMERA” tag and then click the “Plus” button which is located on the bottom left side of the material list window to open the drop-up menu. The drop-up menu will list all of the camera signals, input signals for NDI agreement and capturing signal for the second display panel automatically.

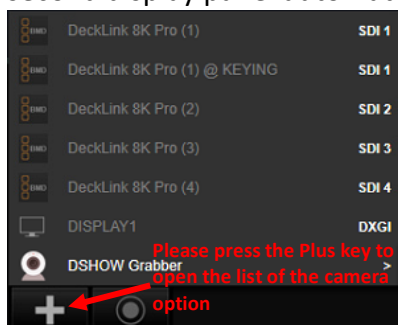


Each time when the plus button is pressed by users, the latest signal sources that can be used by users will be updated immediately. So, for the NDI signal and the signals for the newly-installed capturing card, users can press the “Plus” button to update the latest signals that can be used. The signals which are already added into the “CAMERA” category will not be shown again.

Users can press the needed item in the signal list and then the corresponding signals will be added into the list of the “CAMERA” category. The video format and the resolution of the input signal will be recognized automatically by the system and the input signal will be shown in thumbnail in a small window. The sequence number and the model name of the device for the input source will be shown below the window of the corresponding signal source.


Moreover, the the time code of the input source device, resolution and the video format will be shown below the model name of the device.

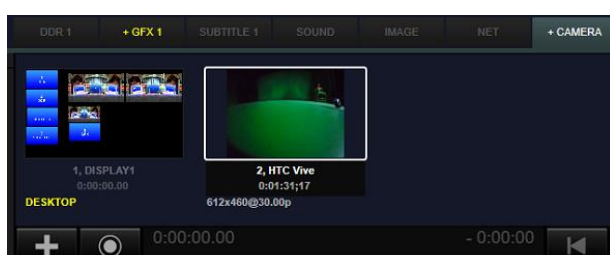

Users can right-click on the content of the thumbnail to show the menu for the single item operation in the category. For the items which are placed into the list of the “CAMERA” category, users can change their sequence, remove a specific signal source, send the signal to “DSK”, send the signal to “KEY” and bind this signal to the operating interface of a specific PTZ camera. For the source signal which is captured by the BMD capture card, users can click the “Recording” button to record the source signal to a local file for further application.

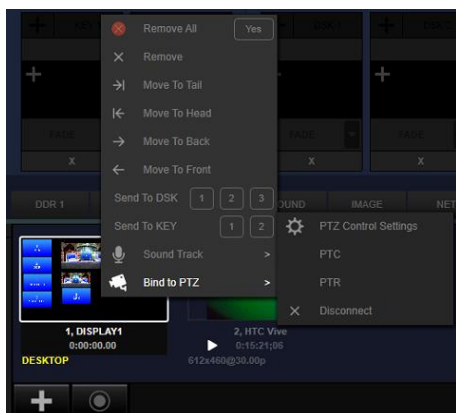


DDR 1/2/3: The local video files which need to be played can be added into the lists of the DDR 1/2/3 categories. Please press the “Plus” button on the bottom left side of the window of the list to select multiple video files and to load them into the list of one DDR category for one time.

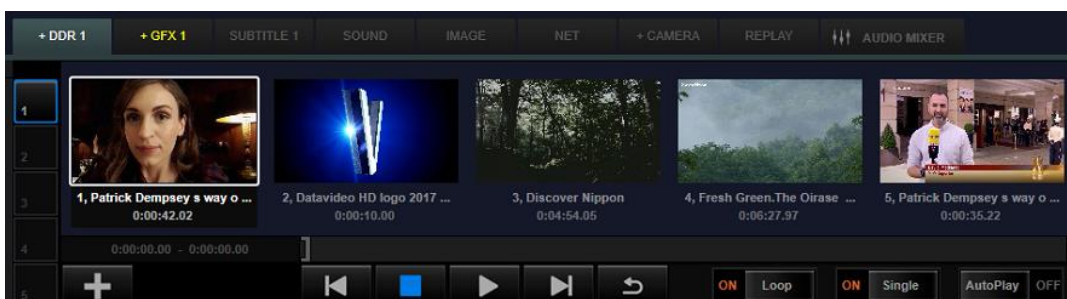






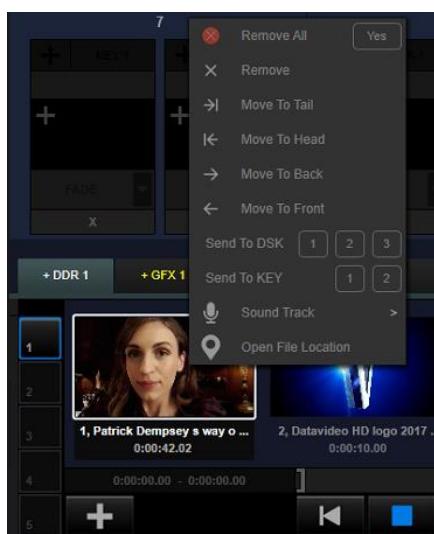




Users can scroll the wheel of the mouse to browse all of the items in the lists of the DDR1/2/3 categories. Users can start the video playback by double-clicking a specific video which is added into the list or clicking the video once and then pressing the play button. The selected video will be activated to be the current playback item of the DDR category and this video will be shown on the preview window of the switching channel which is assigned to be DDR1/2/3. Moreover, this selected DDR file will also be shown on the channel which that switching channel is quoted.

Users can right-click a specific added material to open the drop-up menu for many operations including “Remove All”, “Remove”, “Move to Tail”, “Move to Head”, “Move to Back” “Move to Front”, “Send to DSK” and “Send to KEY”.



For the section which is below the preview window of the list, the green bar which is located on the left side is the playback progress bar. For the right side, it is the mark-in and mark-out progress bar. Users can pull the green part of the progress bar or click a specific point for moving the video to your desired point for playing. Users can pull the parentheses on both sides of the mark-in/mark-out progress bar to set the start point and end point for the video playback. After the start point and the end point of the video playback are set, only the section between the start point and the end point will be played when the video playback is activated.




The buttons which are located on the bottom side are “Plus” button , playback control button  and sliders for playback regulations   . Users can press the “plus” button to add the capture card signal or the NDI signal. Moreover, users can press the “Play” button  which is located at the center to control the start/stop of the video playback. The Previous/Next buttons   allow users to play previous or next video. The  button allows users to return back to the start point of the video for playing. The “Loop” slider allows users to control whether they want to loop video or not. The “Single” slider allows users to control whether they want to loop videos in the whole list or just to loop the current video.

When the “AutoPlay” function is turned on, the video playback will be resumed from the paused situation when the video is switched to the PROGRAM window. Moreover, the video playback will be paused automatically when the video is switched out from the PROGRAM window. This function is useful when the news broadcasting is finished and the news film must be appeared and played automatically.




There are five numbers for the lists on the right side of the category window. Users can prepare five different lists for rapidly switching between different lists within the same category. Users can press the tag to switch to different list directly.




GFX 1/2: The virtual scene of the virtual studio and the graphic and text combination effect can be placed in this category.

The operation for adding the graphic and text combination into the GFX category is the same as the DDR category. Users can click the “Plus” button **+** directly to add the needed materials into the GFX1/2 categories. After that, users can double-click the material for using it. Users can also right-click a specific item for material management. The details of the operation for the graphic and text combination and the virtual studio will be introduced in chapter 4.4 Graphic and Text Editor and chapter 4.6 Virtual Studio.

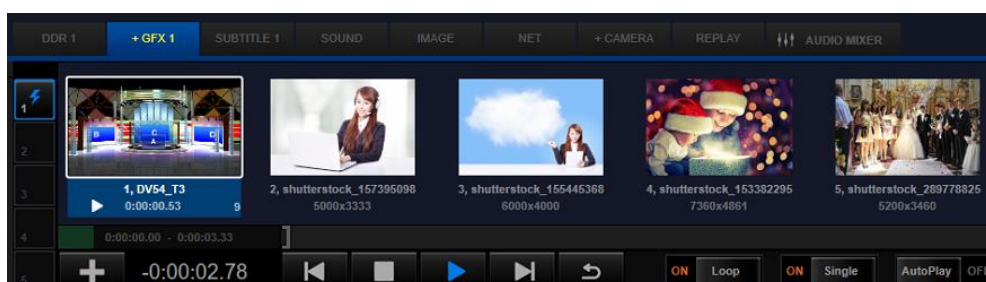


SUBTITLE 1/2: The subtitle files that must be used frequently can be placed in this category. The operation for adding subtitles is the same as the GFX and video categories. The subtitle can be assigned to the switching channel which is assigned as the “SUBTITLE” category. For most of the time, the materials for the “SUBTITLE” category will be used as DSK or KEY overlay layers. For the details of the “SUBTITLE 1/2” operation, please see chapter 4.5, DSK and Key overlay layers.

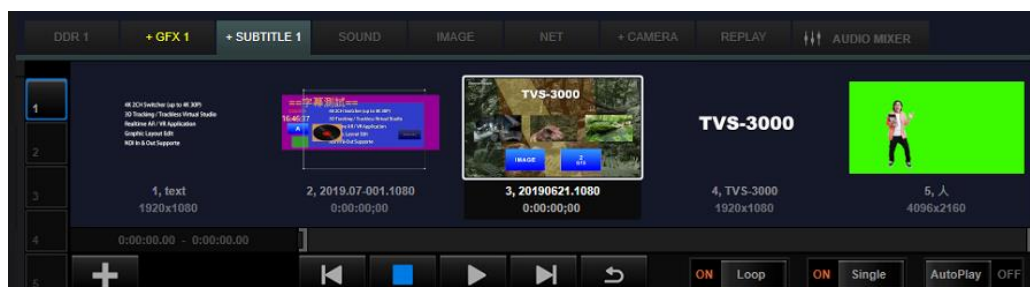


SOUND and IMAGE: The audio and image files which will be used frequently can be placed in these two categories.

The operation for adding and managing materials in this two categories is the same as the DDR category. The sound of the audio file can be heard and adjusted only when those audio files are quoted to switching channels.

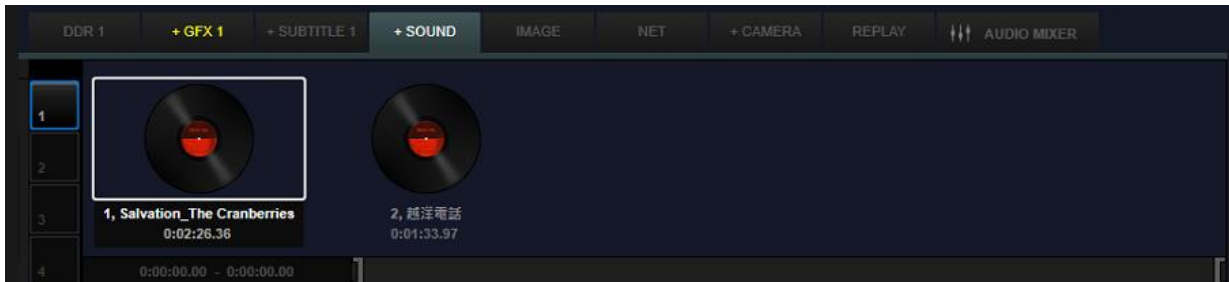


GRAB: The GRAB button is located on the top-right side of the whole interface. When the "GRAB" button is pressed, the PROGRAM picture will be captured and added into this category automatically.




The operation for this option is the same as the DDR. The screenshots will be saved in the route which is shown as follows.

This PC-→Pictures→TVS


Users can right-click a specific screenshot item and then press the "Open File Location" option from the drop-up menu to open the default folder for saving the screenshot.

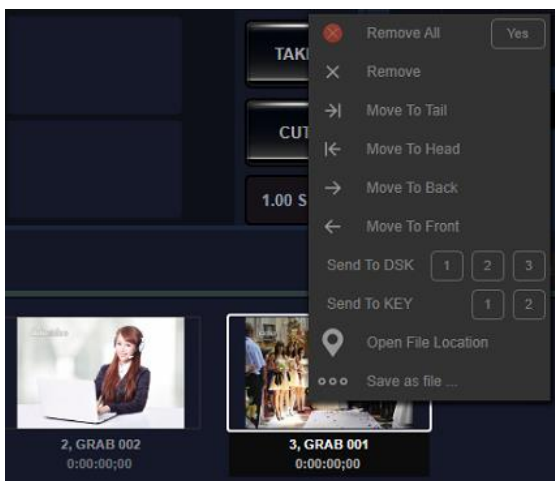

BUFFER: This is a material list for saving all kinds of materials. Users can save videos, images, 3D virtual scenes and graphic and text combination materials into this category. Moreover, users can assign many switching channels to show the materials of the “BUFFER” category.

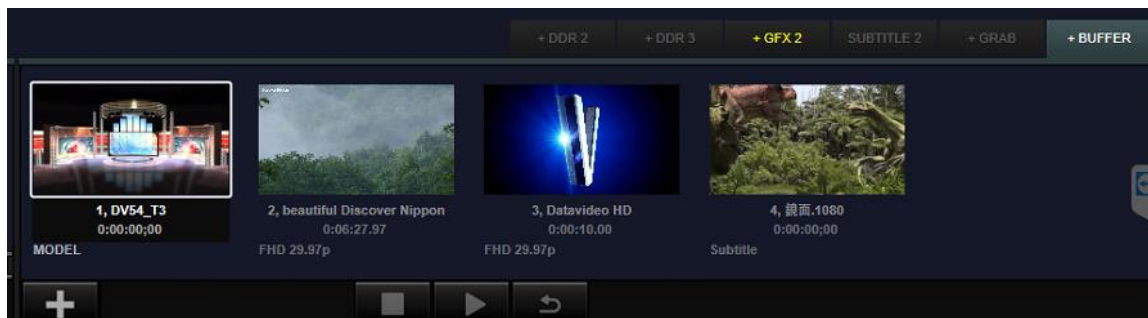


Because the number of the list for the DDR, GFX and IMAGE categories is limited, users can use the “BUFFER” category to save more video and image materials simultaneously in the switching channels for channel switching at any time.


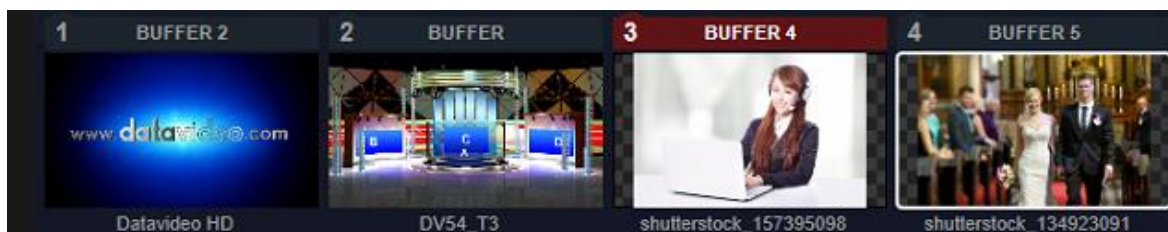


For the “BUFFER” category, the operation procedure for applying a specific material to the switching channel is the same as the “CAMERA” category. At first, users need to click a specific switching channel which is assigned to be “BUFFER”. After that, please double-click your desired material which is saved in the “BUFFER” category and then this material will be activated to be used or played in the corresponding switching channel.


NET: The RTMP, RTSP and m3u8 signals that are input by the pull-stream can be added into this category.

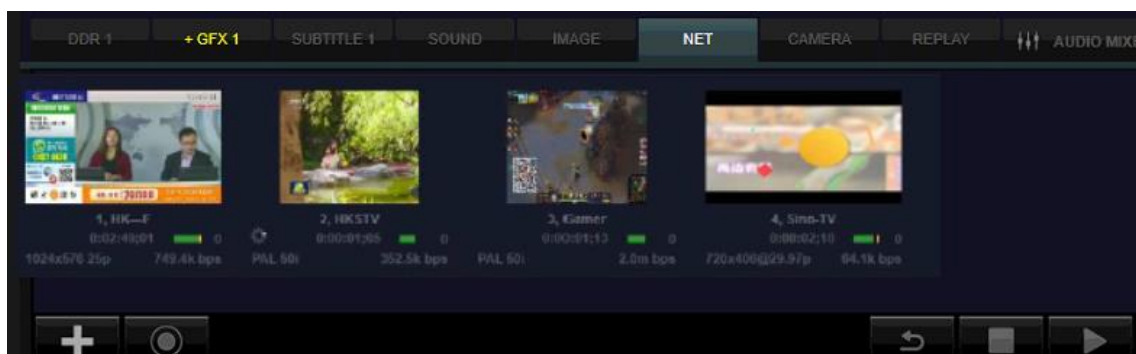

Before adding the pull-stream signals into the NET category, users need to add the URL of the signal source that is needed to be pull-streamed into the “IP Video” section in the “General Configure” option. If users want to open the IP Video settings page, users can press the “plus” button which is located on the bottom left side of the “NET” category. After that, users can press the “IP Video Settings” button from the drop-up menu. Moreover, users can also press the “IP Video Settings” option from the “Options” drop-down menu from the main interface.

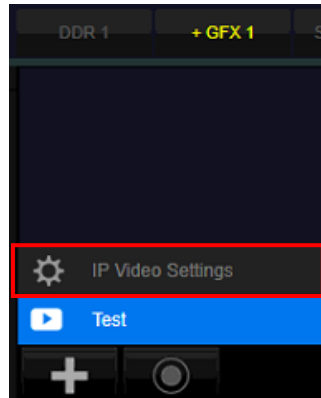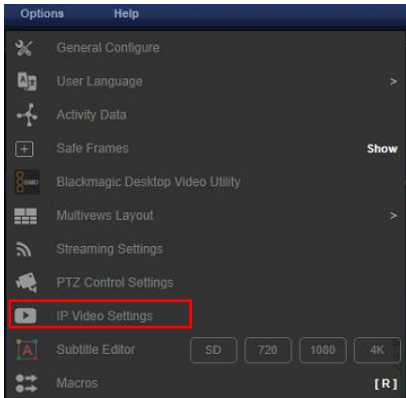

After opening the “IP Video Settings” window, users can add an RTMP/RTSP pull-stream URL and then enter the corresponding User Name/Password. Moreover, users can select the corresponding PTZ control protocol for the streaming URL which is transferred together with the PTZ control protocol.

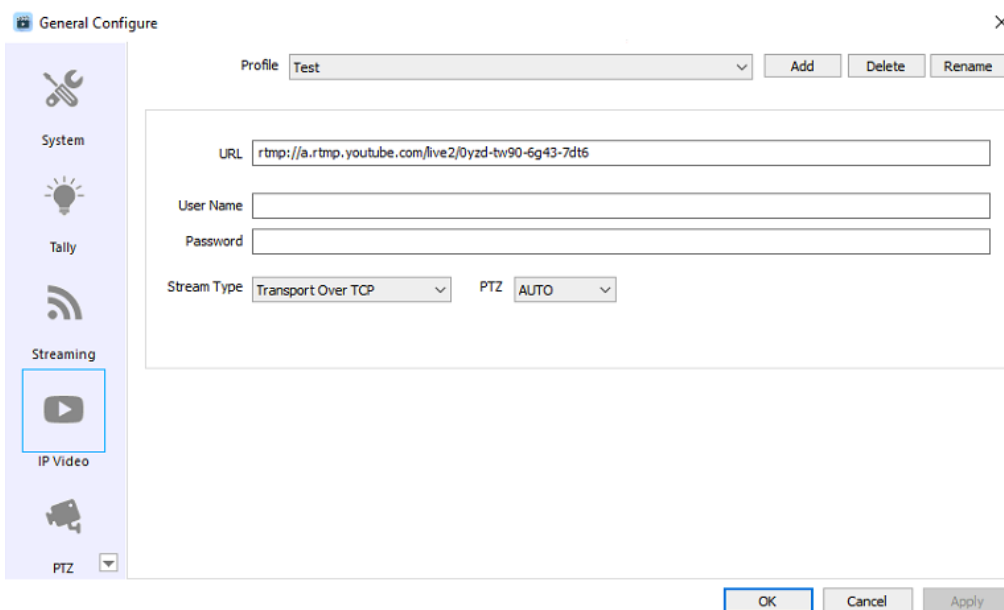

After the needed pull-stream URL is added into the IP Video Settings, users can see the added pull stream URL from the pop-up drop-up menu after clicking the plus button on the bottom left side of the list for the “NET” category. Users can add this source signal into the list of the “NET” category for future application after clicking the corresponding pull-stream URL. The pull-stream source which is not added into the list will be shown in gray. The pull-stream source which is added into the list will be shown in dark black.




The “NET” category’s operation procedure for applying a specific material to the switching channel is the same as the “CAMERA” category. After adding the pull-stream signal into this list, users need to click the switching channel which is assigned to “NET” and then double-click a specific material in the “NET” category to activate the material for using in the switching channel.

4.2.2 Switching Channels

After assigning the materials to the list of each category, users can assign 8 channels to be the switching channels for a specific category/signal for switching to the PROGRAM channel at any time or for quoting to other switching channels for signal combination.


After creating a new engineering file, the TVS-3000 system will assign default corresponding lists and categories for the 8 switching channels. If users need to change the corresponding lists and categories, users can click the tag from the top of the switching channels to select corresponding material list from the drop-down menu.

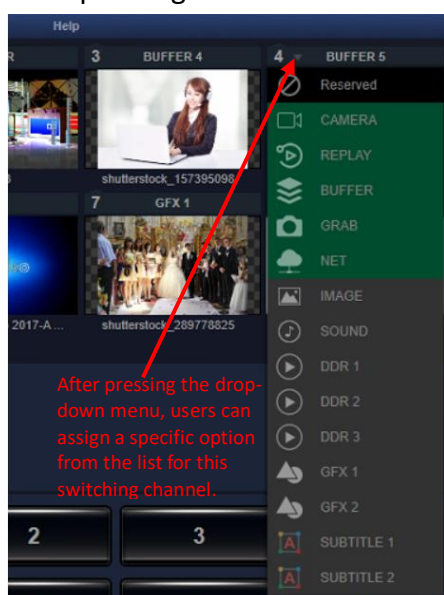

For the lists in the CAMERA/REPLAY/BUFFER/GRAB/NET categories, after a specific switching channel is assigned to a corresponding category, users need to double-click a specific material in that category to confirm that the material in the specific category is used by the switching channel.

For the lists in the IMAGE/SOUND/DDR/GFX/SUBTITLE categories, after the switching channel is assigned to a corresponding category, this switching channel will be paired to the list of this specific category. Once one of the material in the list is clicked for playing or all of the materials in the whole list are clicked for playing in sequence, they will be shown in the paired switching channels.

If users want to assign the camera signal to a specific switching channel, users need to confirm that this switching channel is assigned as “CAMERA”. After that, users need to click the preview window of this switching channel (The selected preview window will be surrounded by a white rectangular). After that, please double-click your desired camera signal in the “CAMERA” category for assigning this signal to the switching channel which is surrounded by the white rectangular. After the signal is successfully assigned, the numbering of this camera signal in the “CAMERA” category will be shown after the text “CAMERA” on the tag of the switching channel for users to confirm which the camera signal is.

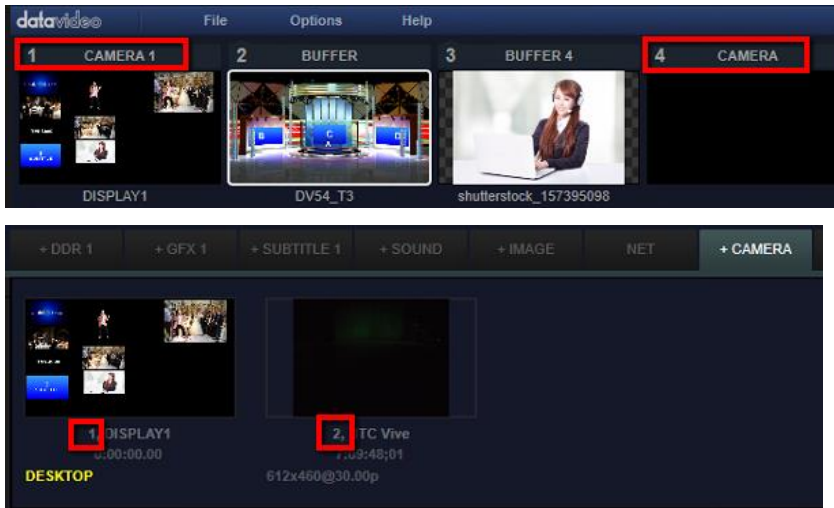

When preparing your program, users can do similar operations for other switching channels to make sure that all of the materials in all categories are loading to switching channels for your rapid switching at any time.


Note 1. If users need to use many “CAMERA”/”Pull-Stream” signals which the number is more than 8 channels, users can keep the white rectangular at a specific channel which is assigned to “CAMERA” or “NET” and then double-click the signals in the CAMERA/NET categories to apply those signals to this flexible channel to achieve “CUT” operation.

Note 2. After the preview window of the switching channel is clicked, the white rectangular will be moved to this switching channel and the drop-down menu and the switching channel layer will be corresponded to this switching channel. The above-mentioned operation rule can also be used in the following sections of this user manual.

Note 3. The content which is added in the switching channel can be switched to the PROGRAM rapidly. So, in most of the cases, the content in the “SUBTITLE” category will not be assigned to the switching channel.


4.3 Special Effect Transition and Normal Transition

Users can apply a variety of special effects for switching between PROGRAM and PREVIEW windows. The special effect transition control area which is located on the middle of the right side of the main interface. There are many buttons for selecting and applying the special effect transition.

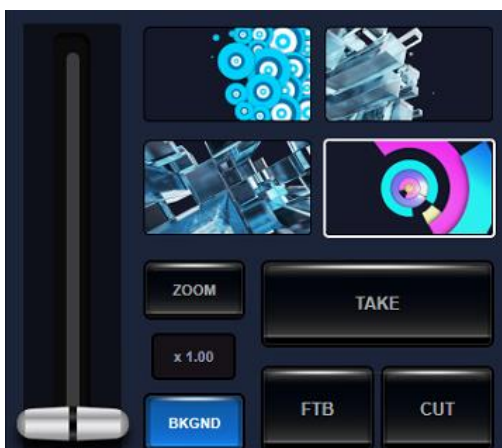

4.3.1 Special Effects Transition


There are four preview windows for special effects transition on the top right section of the switching operation area. Users can load the special effect file for transition in these four preview windows. When the cursor of the mouse is moved to the top left corner of the special effect preview window, the icon of the file folder will be shown for users to select their desired files.

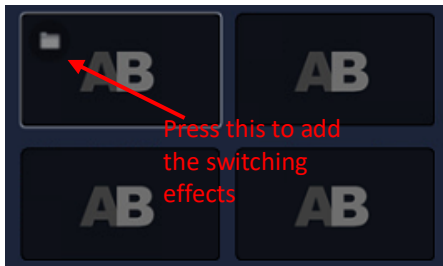

Users can press the file folder icon to add the special effects for transition into corresponding windows for special effect transition. The preview of the special effect will be shown. After the window for the special effect for transition is clicked, it will be surrounded by a white rectangular border. Users can click the "Take" button which is located below the preview window for switching between the PROGRAM channel and PREVIEW channel with special effects.



The default operation speed of the special effect for transition is determined by the total Frame Rate setting for making this special effect and the current setting for the standard frame rate. If the transition speed is needed to be adjusted, users can use the button which is located on the bottom left side of the preview window and is on the middle of the ZOOM and BKGND buttons for adjusting. The larger the figures, the faster the transition speed is. Users

can press the left arrow and the right arrow on the  button for 0.5 times step adjustment. Users can also press the figure on the middle of the button and then pull up and pull down for adjusting the figure slightly.


The following material types can be used for special effect transition.

3D Animation: The 3D animation that is created by the 3ds max software can be used to be the special effect for transition. There are some templates that are provided by the TVS-3000 system for users to create their own special effect for transition in the 3ds max. Moreover, there are more upgrading packages for template that will be provided in the future.

Image Sequence: Users can use the Image Sequence with Alpha or the video to be the special effect for transition. The files with the .amf file extension in our material package can be loaded directly to be the special effect for transition. Users can use the built-in animation generator "Animation Maker" to repackage some large files with the .mov file extension which are output from the AE/AR softwares to be the .amf files for saving the system resources. The details for making the .amf file will be described in the chapter 4.12 "AFM Animation Coverting Tool".

4.3.2 Normal Transition

Please see following diagram for some buttons and T-bar which are located at the transition control area.

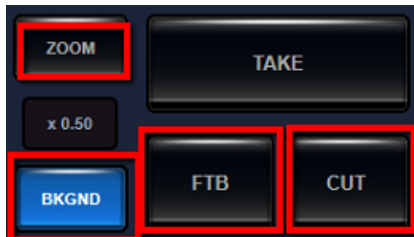

ZOOM and BKGND Buttons: These two buttons determine different functions of the T-bar which is located at the control area. Those two buttons are the only way for activating the T-bar for different functions. If the “BKGND” button is pressed, users can pull the T-bar which is located at the control area for controlling the switching between the PROGRAM and PREVIEW. When the “ZOOM” button is pressed, users can use the T-bar to control the pan and tilt of the current virtual camera lens and the target virtual camera lens.


CUT: Users can click the “CUT” button for switching the content of the PREVIEW channel to the PROGRAM channel for PROGRAM output immediately.

FTB: Users can click this button for replacing the PROGRAM channel by the black field gradually. This FTB button can be used in PROGRAM Fade-Out application.


4.4 Graphic & Text Editor for making Graphic & Text Combination

The TVS-3000 provides a built-in full-function graphic and text editor for users for creating subtitle template and graphic & text combination such as the multi-window animation for a variety of purposes. Each graphic & text combination can include up to 12 layers of the graphic and text combinations for users to combine with different materials for creating complicated subtitle and graphic & Text combination effects.


Users can open the graphic & Text editor by clicking the “Subtitle” Editor” from the “Options” drop-down menu. Users can also click the “Plus” button from the bottom-right side of the lists for the “GFX” and “SUBTITLE” categories. After that, users can click the “Insert New” option from the drop-up menu to select your desired resolution for the graphic & text combination layer.

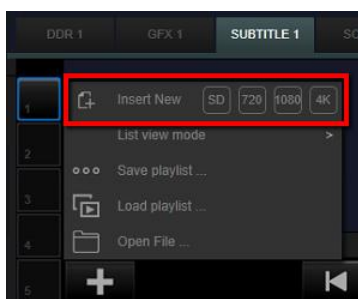

4.4.1 Main Interface of the Graphic & Text Combination Editor

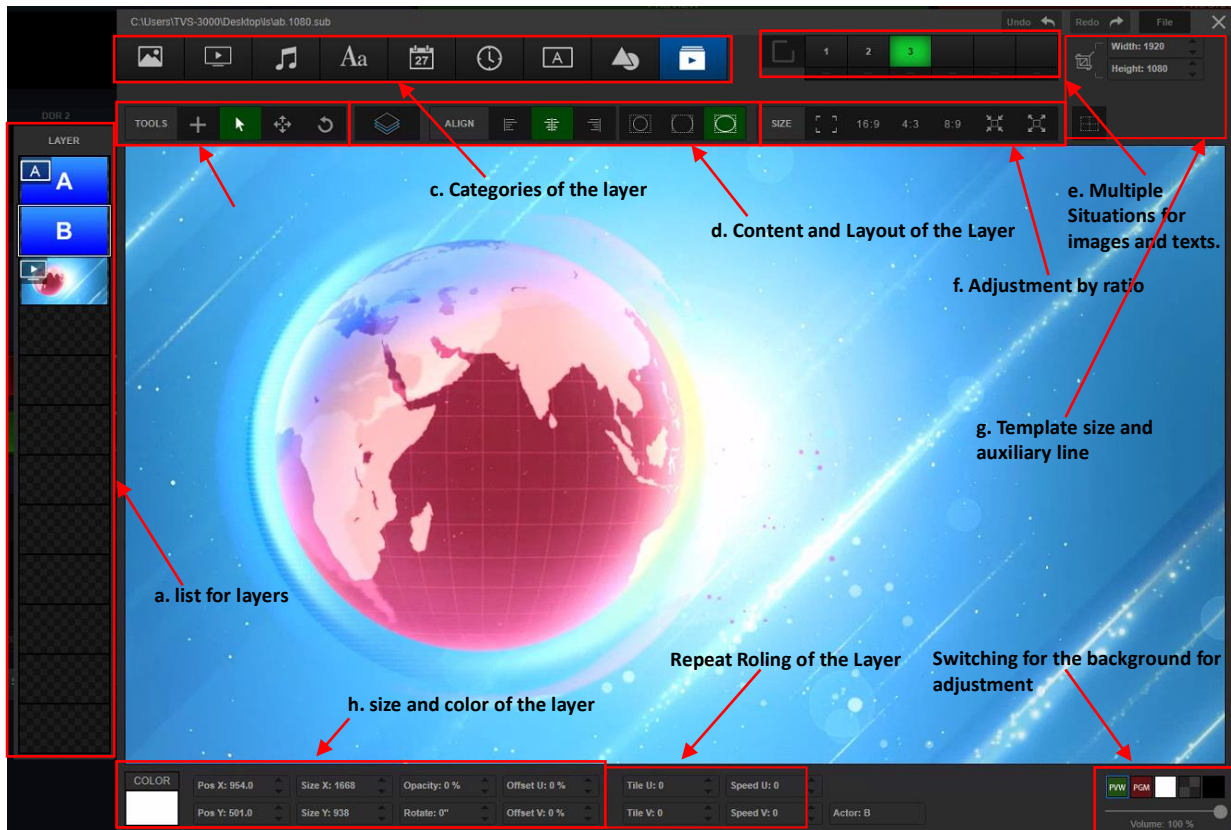


a. List for Layers: Users can add up to 12 layers into the list, the thumbnail of those layers will be shown in the list for layers. The layers which are located on the upper side of the list will overlay the layers which are located on the lower side of the list when they are shown as graphic.

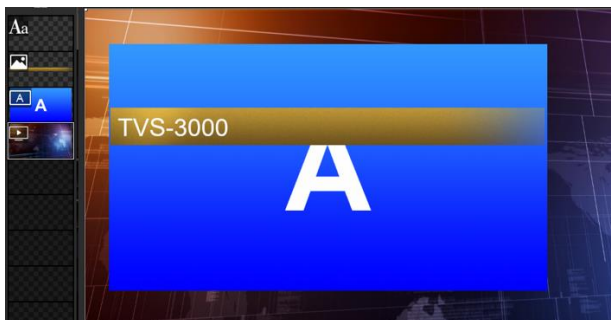


Users can assign current layer for control by clicking the thumbnail of a specific layer. Moreover, users can control the overlay sequence, showing and hiding of the layers by the pop-up menu after right-clicking a specific layer. Users can also press and hold the shift button to click multiple layers to select many layers at the same time for adjusting the location and angle simultaneously.

b. Mouse Cursor Mode: Users can active different buttons in this area by clicking. Moreover, users can change the operation mode for the layers by the mouse cursor. There are four modes which are shown as following for users to select.





c. Categories for Layers: When the mouse cursor mode is active to be “Create”, users can click the buttons in this area for selecting their desired layer category for creating. After the desired layer category is selected, users can drag a rectangular for creating a graphic and text combination for the corresponding layer. The icons for different corresponding layers are show as following diagrams.

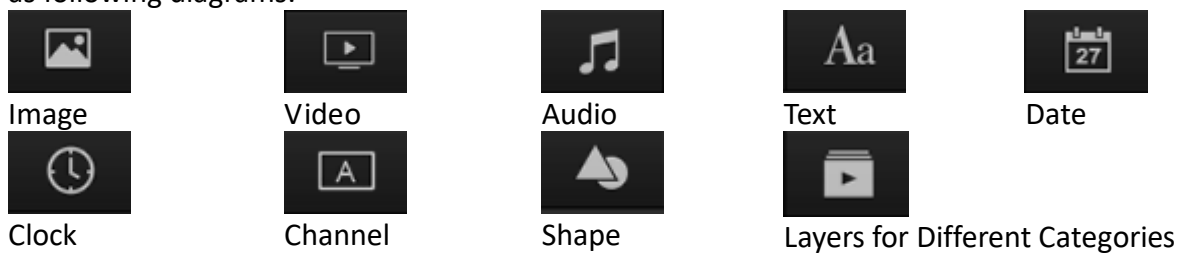

d. Content of the Layer:


After the **Image/Video/Audio** layers are created, users can click the content add

button  on the layer content area to select the file with corresponding file format to be the content of the layer.


After the **Text** layer is created, users can click the “Select” button  and then the editing window for Text will be pop-up for users to set the text font, to enter text directly or to import the txt/rtf text file. If the graphic and text combination templete with text will not be redefined after the template is imported, the content of the entered text will be displayed as the default text.

After the **Date/Clock** layers are created, the real-time date and time will be shown in that specific graphic and text combination layer. If that graphic and text combination layer is selected, users can adjust the format for displaying the date/time at the bottom right corner. The **Channel/Different Categories** layers are special. Users can quote contents of other switching channels or signal sources to this kind of layer to achieve the graphic and text combination which is made by multiple signal sources.

After the **Channel** layer is created, it will use the channel layer of A as its default layer for selecting the content of the switching channel in the switching channel menu. If users need other channel layers including B/C/D, users can click the “Actor:A” to show the drop-up menu from the bottom right corner to select their desired channel layer.

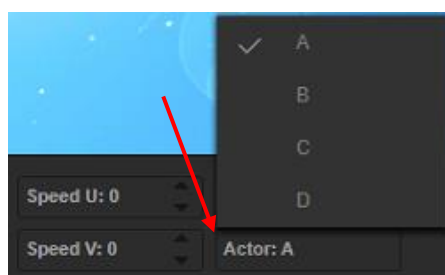

After the **Category** layer is created, the characters “Playlist” will be displayed as default on the layer. At this time, users can click the “Playlist:NONE” which is located on the bottom right corner to select the desired source/material categories for this layer from the drop-up menu. If there is a content for the corresponding category which is played, this corresponding content will be shown in this layer.

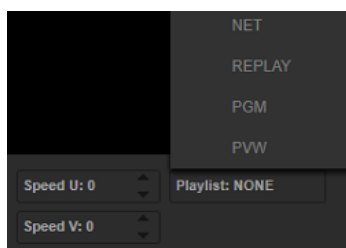

There are two set of buttons for Character Define and Image Alignment which are located on the right side of the Image Content and Layout areas.




The Character Alignment buttons allow users to select the settings for Left Alignment/Center Alignment/Right Alignment for the characters in the character layer.



The Image Alignment buttons allow users to select the layer with image-only content for setting the corresponding alignment/cropping ways. The buttons which is shown in the sequence of left to right is Maintain proportionality to height, Maintain proportion to fit width, The scaled layer area is completely filled.

e. Multi-Situation Graphic and Text Combination

Users can save up to 6 situations into one graphic and text combination. This allows users to record different situations including location of the layer in the combination, size, transparency and hiding. Moreover, it allows for animation transition in different situations.



After pressing the short horizontal line which is below the corresponding number allows users to duplicate one set of situation for each layer from other numbers for further editing.

f. Adjusting the layer according to the aspect ratio

When adjusting a specific layer, users can use buttons which are located at the Proportional adjustment zone to adjust the aspect ratio of the layer rapidly.




Those three buttons are shown in left to right sequence for “Keep the Width ratio of the layer”, “Change to height of the layer”, “Change the layer to the corresponding ratio directly”.



This button allows users to keep the width ratio and to change the height for changing the layer to the self-defined ratio which is the same as the content which is loaded to the layer.



This button allows users to change the width and height of the layer to be the same as the original size of the content which is added to the layer.



This button allows users to change the width and height of the layer to be the full size which is the same as the whole range of the graphic and text combination template.

g. Template Size Adjustment and Auxiliary Line

Users can change the size of the graphic and text combination template at any time during the editing process except the selected standard size when creating the graphic and text combination. This can fit the special demand for placing the template to the non-standard surface or non-standard overlay location.



Users can click the figure and then pull it up and pull it down to change the figure. Moreover, users can click the up triangle/down triangle buttons for adjusting the template size of the graphic and text combination directly.



In order for convenient setting and adjustment, users can click the auxiliary line button which is located below the template size to turn on/turn off the auxiliary line.


h. Adjustment for Layer Size and Colors

For the contents in the Text/Date/Clock Layers, users can click the color button from this area directly for adjusting the colors for the content of the layer.




The two color blocks which are located at the right side of the palette represent current selected color and the selected color for previous time.

For all contents in the category layer, users can adjust the coordinate, size and direction of the layer by adjusting the figures which are located on the right side of the palette area.




The figures in the Size/Location adjustment area list the locations of the X/Y coordinates and pixel size of the horizontal/vertical directions. The corresponding figures can be adjusted by clicking the up and down arrows on the right side of the figures. Moreover, users can click the figures and then pull-up/pull-down the mouse cursor for adjustment.




The parameters which are located on the right side of the location area include transparency of the layer and the figures for rotation angles. The clicking for adding/reducing and pulling up and down adjustment are also supported.

i. Offset/Scrolling of the Layer Contents



This area allows users to adjust the location offset in the layer for the material or signal which is loaded to the layer for showing the needed sections within the layer range. Users can adjust the offset of the horizontal and vertical contents by pulling/adding or reducing the values of Tile U and Tile V. Moreover, users can also achieve the scrolling effect of loading material or signal along the horizontal and vertical directions by pulling/adding or reducing the values of Speed U and Speed V.

j. Switching and Adjusting of the Background

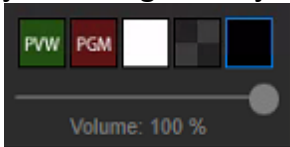


This allows users for previewing the effects which the graphic and text combination/special effects are applying for the pictures.

4.4.2 Editing for Multiple Layers Graphic and Text Combinations

Take the way for making a multi-window and multiple dynamic graphic and text combinations for example, users can show a typical operation for adding various factors including GFX, DDR, Text and the contents from other switching channels in the CG editor. The CG packages which are edited and saved in the GFX and SUBTITLE categories will be added into the content list. Users can open the CG editor by clicking the “plus” button and then pressing the “Insert New” option.



Add video to be the background of the CG: Users can click the “+” icon from the tool bar and then to select the Video icon to be the element of the layer for creating a new layer by dragging a rectangular.

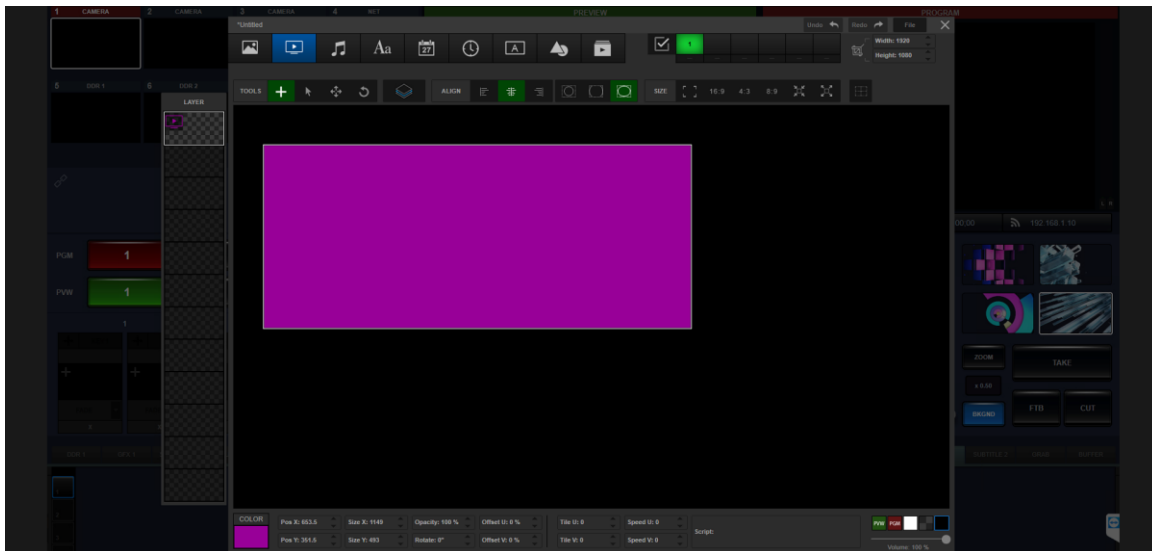

If users want to select Video to be the background of this CG, please choose the layer for loading a video file at first. After that, please click the “Full Screen” button for adjusting the layer to be full-screen size.




If users want to set a window which provides the main system signal in the virtual studio and to set another window for showing the news broadcasting, users can click “A” at first and then try to drag another window for quoting the signal of other channel. After that, please do the same operations for creating a “B” window.




Users can use the same operation for creating a shape and then change its name to be “B”. After that, we can use the “RESET” button to set its width and height ratio to be standard size and then use the mouse cursor or the arrow on the keyboard to move the shape to another side.




There is a subtitle template which is added for a banner for introducing the content which is playing. Please click the “Image” button  and then please load the tag file for the template. After that, please drag it to adjust the size for suiting the buttons for A window and B window.



After that, users can add text into the subtitle board. Please click the “Text” button for adding text. After that, please drag another layer on the subtitle board. After the creating of the text layer is finished, please click the “Select” button  and then please double-click on the text layer for entering your desired texts.



Please click the “File” button which is located on the top-right side for saving the CG and then please select the file name and folder for saving it. The saved CG file will be kept in SUBTITLE format file and then will be added into the list of the GFX2.

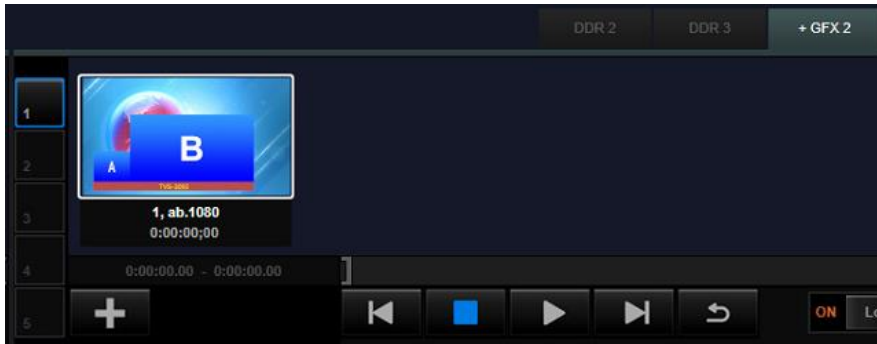

4.4.3 Apply the CG Package Content from Channel to the BCD Windows


The CG package that is added to the A, B, C and D windows can be used for the loading contents for other switching channels for creating fascinating CG effect. We will use the CG package which is created in advance and the B window to show how to apply those contents. Please assign one switching channel to GFX2 and then double-click the CG package for loading.




Please select the 8th switching channel (If the channel is surrounded by the white rectangular, it means that this channel is selected). After that, please click the “Link” icon which is located on the left side of the switching channel and then please select “Channel” from the drop-down menu. The channel setting row is located below the switching channels. All of the channels will be shown in the channel setting row.




Users can load signals for A and B windows. Because the A and B windows are created by users, there are A and B buttons in the row for users to select. Moreover, there is a channel selecting line which is located after each corresponding icon (A/B). Users can select any switching channel from channel 1 to channel 8 to add signal to a corresponding channel. In this example, we will transmit the signal in the 5th channel to the Window A and then transmit the signal in the 3th channel to the Window B.

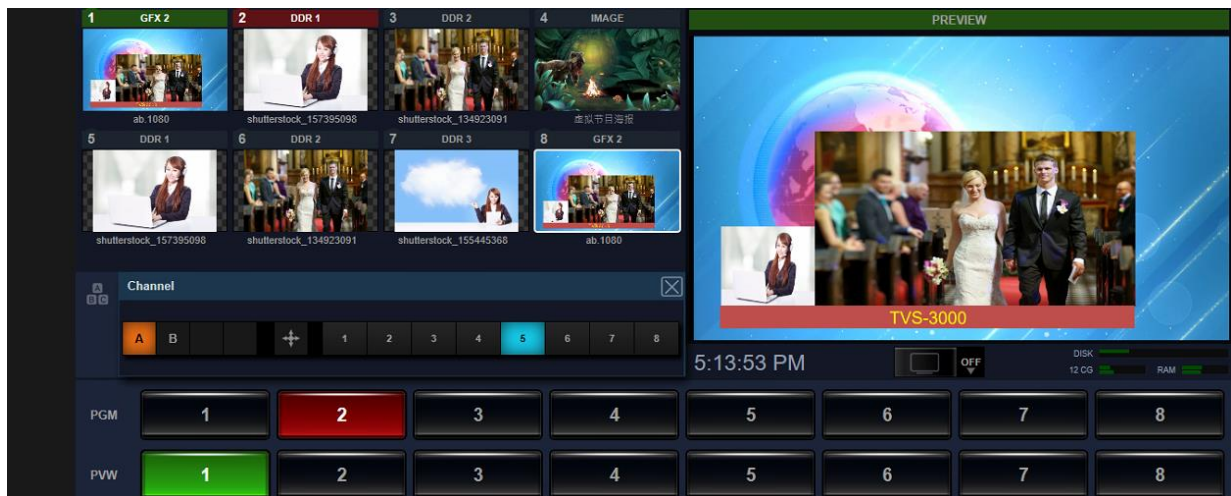

Users can see that the signals for the 5th channel and the 3th channel are shown in the A window and B window respectively. However, we can see that the signal for the 5th channel is shown to be out of shape. Because the original picture is shown in the ratio of 16:9. So, users can right click the list in the GFX2 to modify this issue.

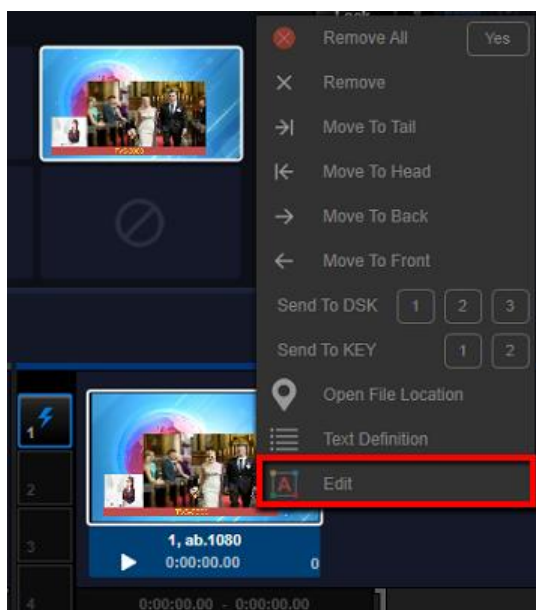

Please select the “A Channel” button for using the adjustment tool for adjusting the signal of the 5th channel.

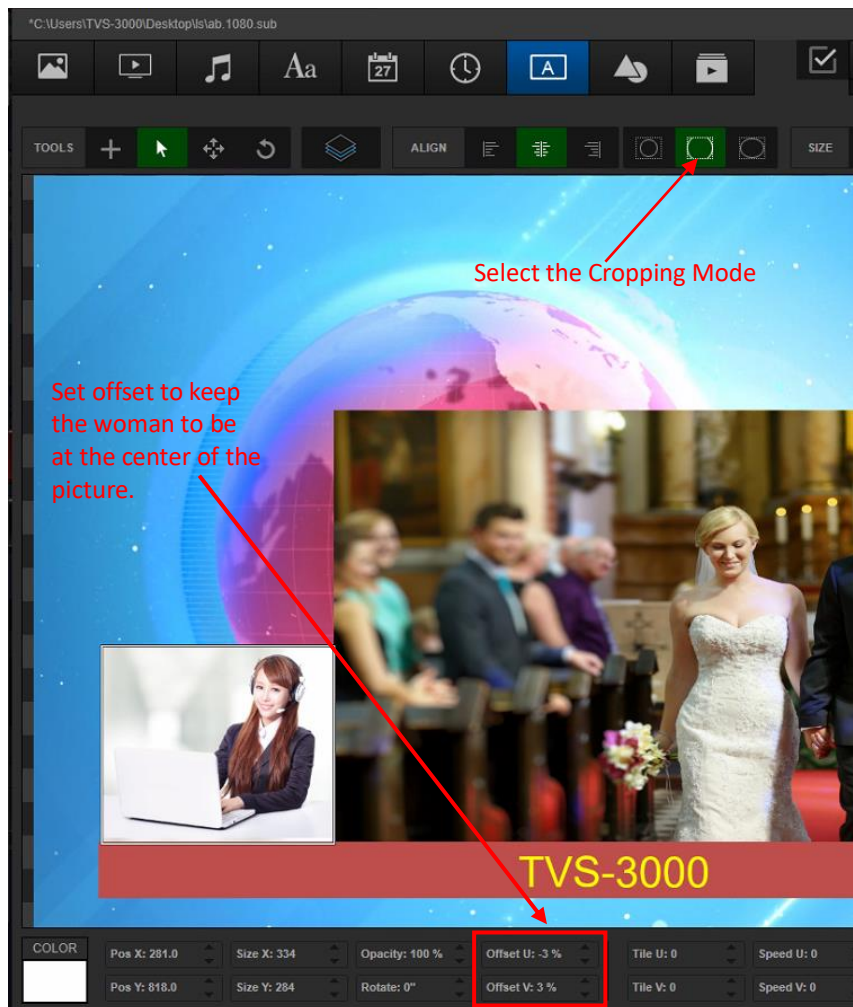


After that, a CG package is completed and it can be used as a new virtual camera scene. Moreover, users can create up to 12 layers of the graphic and text combinations for giving many messages within a CG package for your audience.




4.4.4 Create a PIP with more than 4 Live-Scenes by the the Category Layer

The category layer allows users to select a category or source from the CMAERA/NET categories to be its content. So, users can add up to 4 real-time picture channel layers. Please select the last icon from the layer category tool bar and then drag it to become a rectangular. Finally, the category layer will be shown as following diagram.

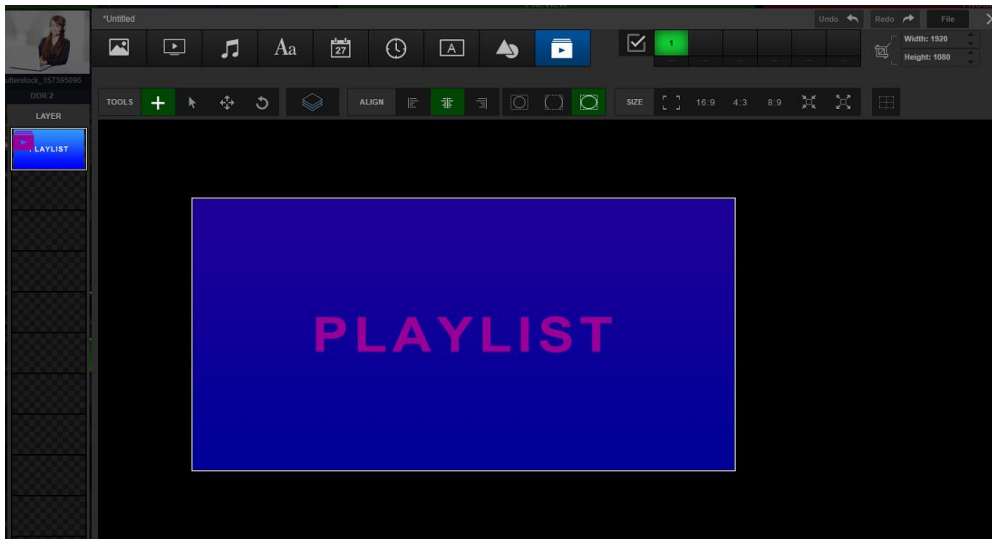

Please select this category layer and then users can find the playlist options in the adjustment area.




After that, users can select a category or select CAMERA/NET. After that, users can select the ID code from the bottom side to select the CAMERA/NET playing source which the ID code is in this layer.

Users can also duplicate or create more category layers for assigning other real-time contents for those layers.

4.5 DSK Layer and KEY Layer


There are two kinds of overlay layer locations for placing coner mark, subtitle and text for applying them rapidly for the TVS-3000. The names for those layers are “DSK Layer” and “KEY Layer” respectively. Those layers are located at different areas in the main interface.

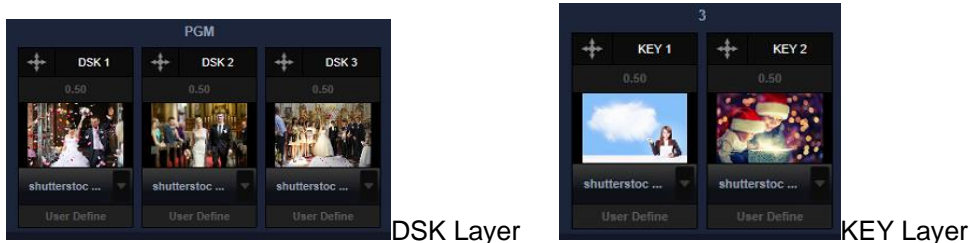

The content in the “DSK Layer” window will be used for PGM output signal. The “KEY Layer” window will be used for current selected channel. This means for the selected channel which is surrounded by the white rectangular, the content in the layer window will be changed to the corresponding layer when switching channels. However, for the “DSK Layer”, there is no affect.

4.5.1 Add material to the DSK Layer/KEY Layer


Please right click the material in the list of the category. When users right-click one of the content in the category, users will find the options for transmitting the content to the DSK Layer and KEY Layer.

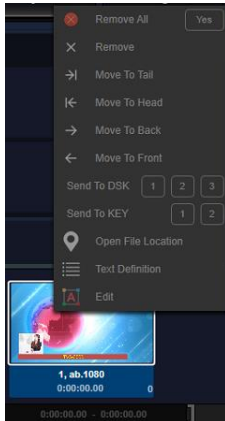


This is the simplest and direct way for transmitting some materials to the DSK Layer/KEY Layer. It is easy for adding but it is hard for switching because the operation is based on single content. So, we can use other way to achieve this operation.

How to choose the categories for Overlay Layer for DSK Layer/ KEY Layer.

If users move the mouse cursor to the top-left corner of the DSK Layer/KEY Layer, there is a “plus” icon for users to click to selected the category of this window from the drop-down menu.

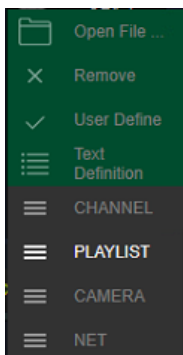


For the DSK Layer, the way for operation is easier. If users need to use KEY Layer, users need to select the corresponding channel. The corresponding channel number will also be shown on the top of the layer window. After that, users can add corresponding content into the layer window.

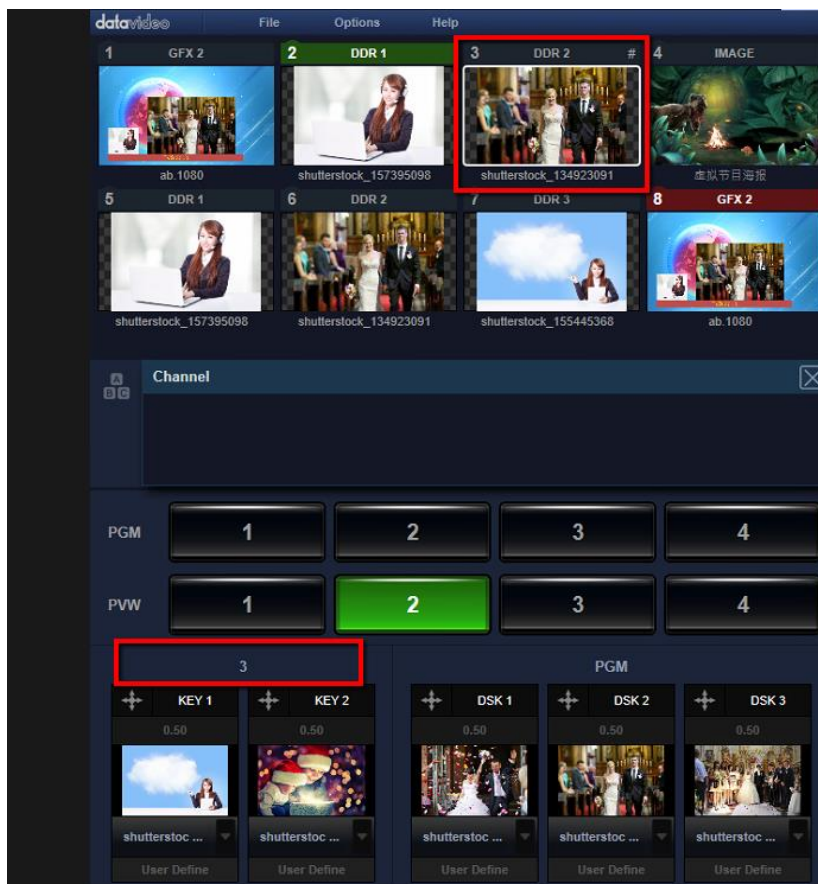





4.5.2 Showing/Hiding of the Contents for the DSK Layer/KEY Layer


The content for the DSK Layer and KEY Layer can be shown by fading-out simply to achieve transition effect. There is a button which is located below the content window shows the transition effect which is applied for this DSK Layer/KEY Layer. The default setting for all of the five windows is “Fade”. Moreover, there is a drop-down menu for users. If users click the down arrow, users can create their own transition effects for the DSK Layer/ KEY Layer.

4.5.3 Location and Size Adjustment for DSK Layer/KEY Layer

The TVS-3000 allows users to adjust the location and size of the DSK Layer/KEY Layer from their windows on the screen. Please click the direction arrow  which is located on the top-left side of the DSK Layer/KEY Layer windows. After that, this icon will become a blue icon for reminder. The name of the window will be shown on the top of the location panel for pointing out the current adjustment window.




Please click “Fade” to show the “DSK Layer” on the PGM channel and then users can see the adjustment clearly. The basic way for the operation for that area is that users can click the center for dragging it freely or to click the four direction buttons  for adjusting slightly. Please click the magnifier icon  for dragging, zooming in and zooming out the content. Users can also drag the rotation icon  for rotating the content. Moreover, users can click the pad icon  for adjusting the aspect ratio.

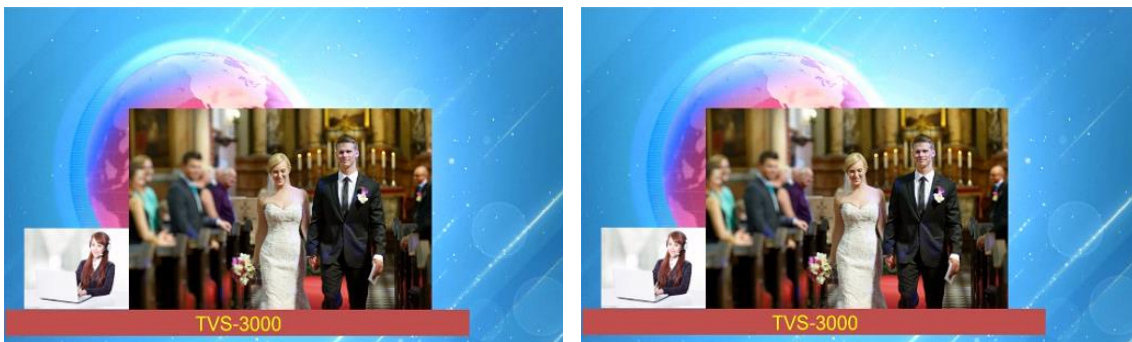

4.5.4 Use DSK Layer/KEY Layer to add the PREVIEW/PROGRAM Keyer Signals

For the TVS-3000, users can add the material into the “CAMERA” category and then use the CG with alpha channel for the Keyer signal for the PREVIEW channel. For the Keyer signal of the PROGRAM channel, users can select one DSK/KEY layer and then select the desired Keyer signal from the drop-down menu.

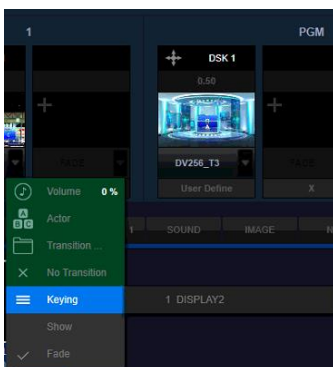


4.6 Chromakey and Virtual Scenes

The Datavideo TVS-3000 provides powerful built-in Chromakey and real 3D virtual Studio 360 degree virtual tracking shooting functions. The TVS-3000 allows you to create your own story in a colorful virtual space by simply using a blue/green plastic mat.

4.6.1 Chromakey Settings

At first, users need to select the switching channel for applying the Chromakey. Please click the “Link” icon which is located below the switching channel and then please select the “Matting” option which is shown as following diagram.

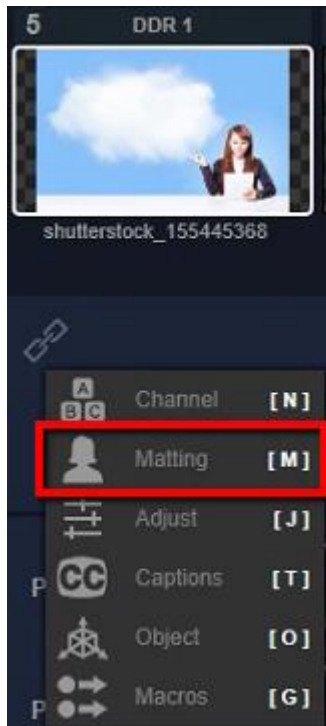


This area will list related parameters for Chromakey, please set the Chromakey function by following steps.

Select Color:



When the background color is selected by users, the Chromakey function will be turned on automatically. What users need to do is to click the K1 mark for one time and then the mouse cursor will become the eyedropper tool for users to select the color that is needed for removing(Blue or Green). Click the color again to set that color as the K1 mark.

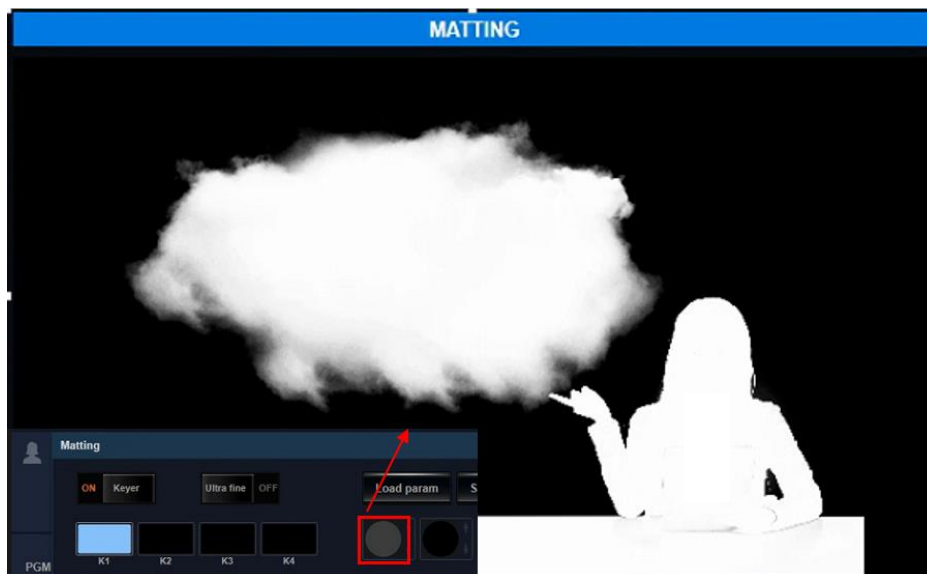

After that, the blue background will become black. If the alpha channel is shown, users can click the gray eraser for one time. If the gray eraser is clicked again, the picture will be shown in normal mode for displaying. If there is some white spots which is shown on the black background, users can repeat the above-mentioned steps by using the K2, K3 and K4 marks.

Erasing:




Users can use a virtual eraser for adjusting the alpha channel on some trivial sopts. Please click the white eraser and then the chromakey signal will become white and black for showing the situation of the alpha channel. Users can use the white eraser for cancelling the chromakeyer on the area which is erased previously. Moreover, users can use the black eraser for adding the forced chromakeyer on the previously erased area.




Users can select the size of the eraser. If users delete something mistakenly, users can go back to the last step by the undo button.

Adjust the Alpha Channel Slightly

Users can add the chromakeyed picture to another channel or use the white and black picture to check the picture after it is chromakeyed for further adjustment of the Alpha channel.

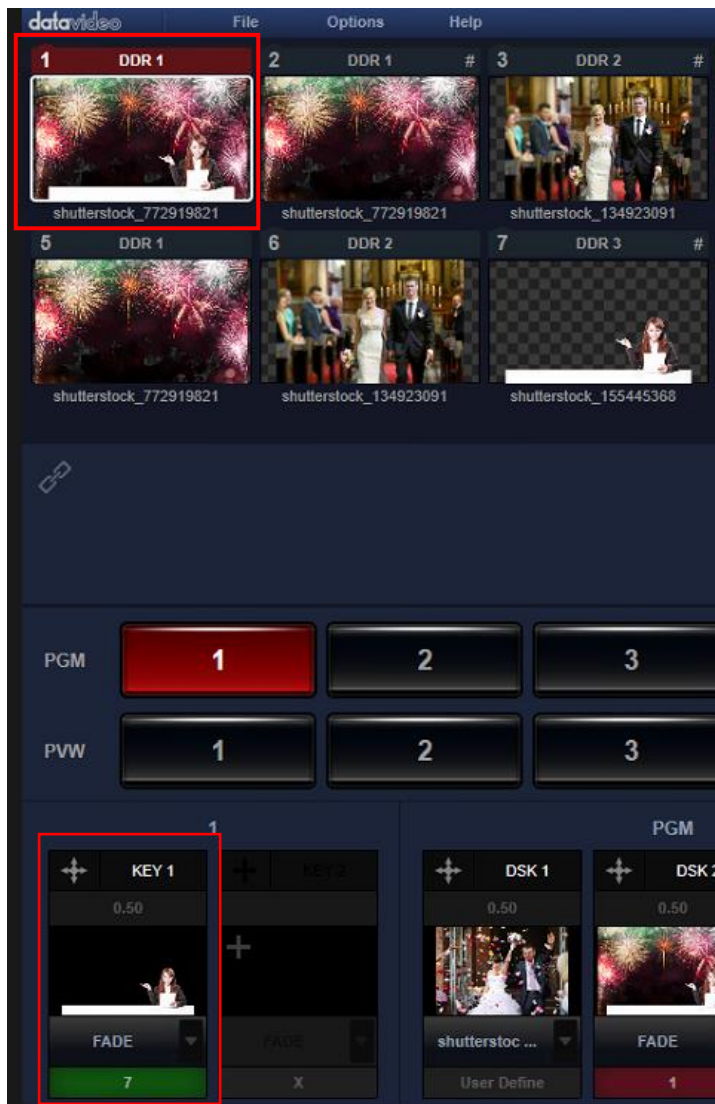


The “opaqueness” can be adjusted by users. Please slide the slider to the right side for slight adjustment until the Alpha channel becomes white totally.

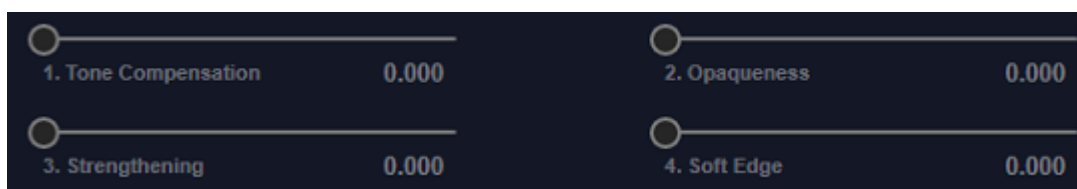




After that, please adjust the “Tone Compensation” setting, please slide the slider to the right side until the color picture that is seen by users has similar color with its original signal.

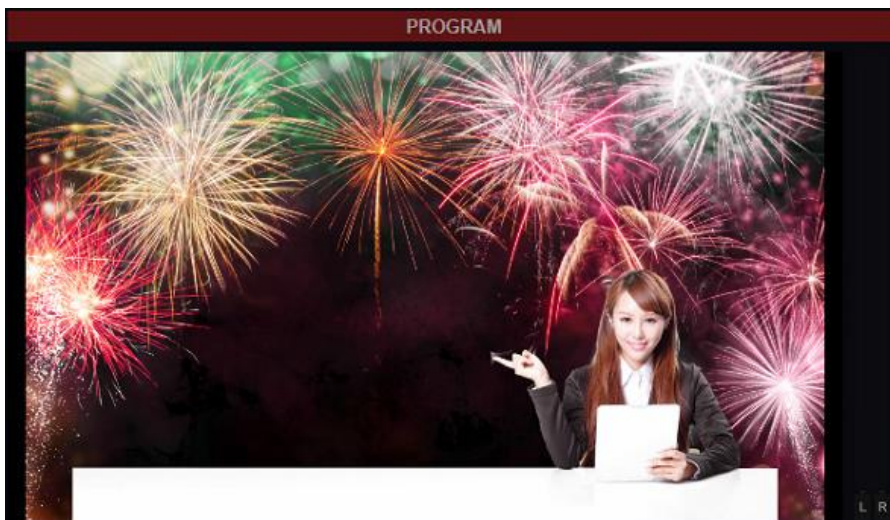


Finally, if there are some extra colors that are found on the edge of the person, users can slide the “Soft Edge” slider to the right side for adjusting the softness of the edge.

4.6.2 Load Content into the Virtual Scenes

Load Virtual Scenes: Please package the virtual scenes as a .zip file for loading to the GFX category and then users can double click the file in the GRAB category list for loading a virtual scene for the switching channel.

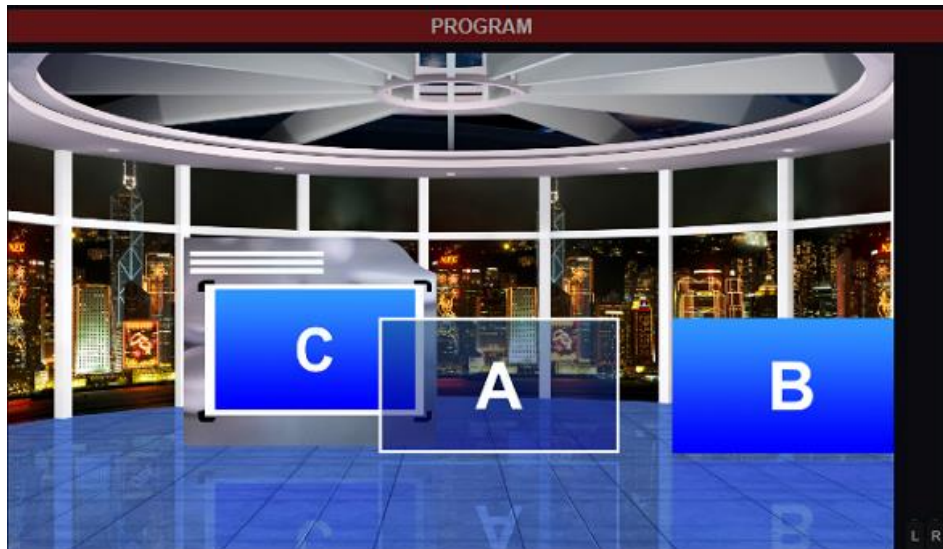

Load Content into the Virtual Scene: Users can open the Channel function bar from the “Link” icon which is located on the left side. Users can distribute the content for displaying in the A, B, and C channels by using the “Channel Setting”.



The Adjustment of the Input Signal: There is a different lighting status which is existed between the Chromakey signal and the virtual studio. So, users need to adjust the signal of the person frequently for incorporating it into the virtual scene. Please select the channel which is needed to be chromakeyed. After that, please open the “Adjust” tool from the “Link” icon.





In this “Adjust” tool, users can adjust the aspect ratio, contrast, brightness and saturation of the picture for current signal source. After the adjustment is finished, it will achieve better incorporation with the virtual scene. The way for moving the object in the virtual scene will be mentioned in following paragraphs.




4.6.3 The Adjustment for Virtual Objects and Position of Virtual Camera Lens

Moving and Adjusting the Virtual Object: Please click the direction icon which is located before each virtual object for adjusting it. When the direction icon becomes blue, the name of the object will be shown on the top of the location panel.

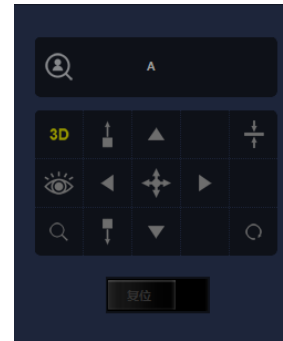

The way for operation is almost the same as the adjustment of the DSK Layer/KEY Layer. Please click and drag for adjusting the size, direction and the aspect ratio of the virtual object. What is different is that it allows users to adjust the location of the virtual object within the real 3D space. When the center is clicked and dragged, the object will be moved forward, backward, to the left side and to the right side. When the four direction arrow buttons are clicked and pressed, the virtual object will be moved to the up side/down side/left side/right side respectively.

Creating and Moving of the Virtual Camera: Users can create 6 virtual camera positions by the TVS-3000 software. Moreover, users can also achieve 360 degree virtual tracking shooting.

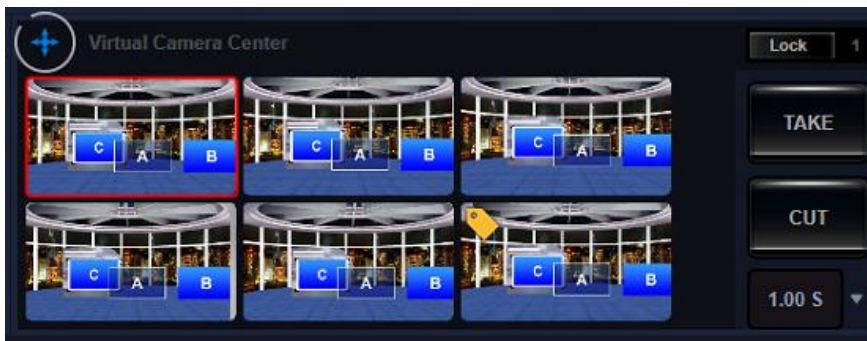

Users can click one of the six virtual camera and then the position adjustment function will be activated. After that, the virtual camera which is surrounded by the white rectangular can be controlled by users. Please try to adjust the virtual camera position by clicking and dragging and then users can see that the virtual camera is moved in the 3D virtual space. Once another camera is selected for adjustment, the current status for the virtual camera will be saved. Because the virtual camera is adjusted in 3D ways, the rotation icon can be clicked and dragged for panning and tilting of the virtual camera. Users can control the virtual camera to achieve the virtual rocker arm and close-up shooting effects

Use the Virtual Camera for 2D Focusing: For the 2D object such as .ppt file or some videos which the details must be shown for audiences, users can use the virtual camera for achieving a Close-up shooting effect.




4.7 Audio Mixer


The TVS-3000 provides a built-in audio mixer for users to manage the regulation for the audio mixer for each channel. Moreover, it allows users to adjust the output volume, monitoring volume and balanced analog audio input volume.



Please click the “Audio Mixer” tag on the top the material list for switching to audio control panel. The audio channels are designed to be one on one for the 8 swching channels. Users can monitor the audio volume for each channel and then set the regulation for it.

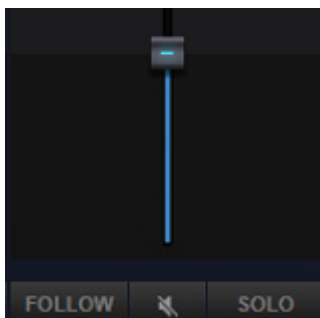


Users can adjust the volume level of a specific channel by dragging the slider. Press the "FOLLOW" button will keep transmitting the audio of the audio for a specific channel to the PROGRAM channel. If the "MUTE" button is pressed, the audio of this channel will not be output to the PROGRAM channel. If the "SOLO" button is pressed, only the audio for the specific channel will be output and the audio output for all other channels will be turned off.

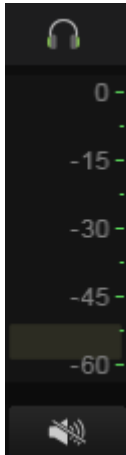

The volume control slider which is located on the left side of the control panel can control the audio volume of the audio card in the TVS-3000 system. Generally speaking, this audio source is used for monitoring for the output audio. The "output volume" is the main volume control of the audio output signal.


The AUX Input Volume is the balanced/unbalanced audio card input volume control for the analog audio input.

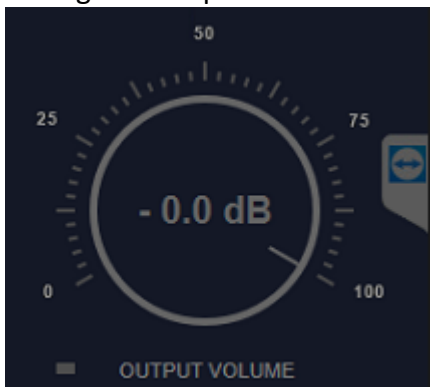

4.8 Streaming/Recording

4.8.1 Streaming

The TVS-3000 is a IP-based product with built-in streaming function and local RTMP server. It allows users to open the streaming settings from the drop-down menu from the control bar. Users can select the existed server from the drop-down menu or click the “Add” button for entering the URL of the new server.

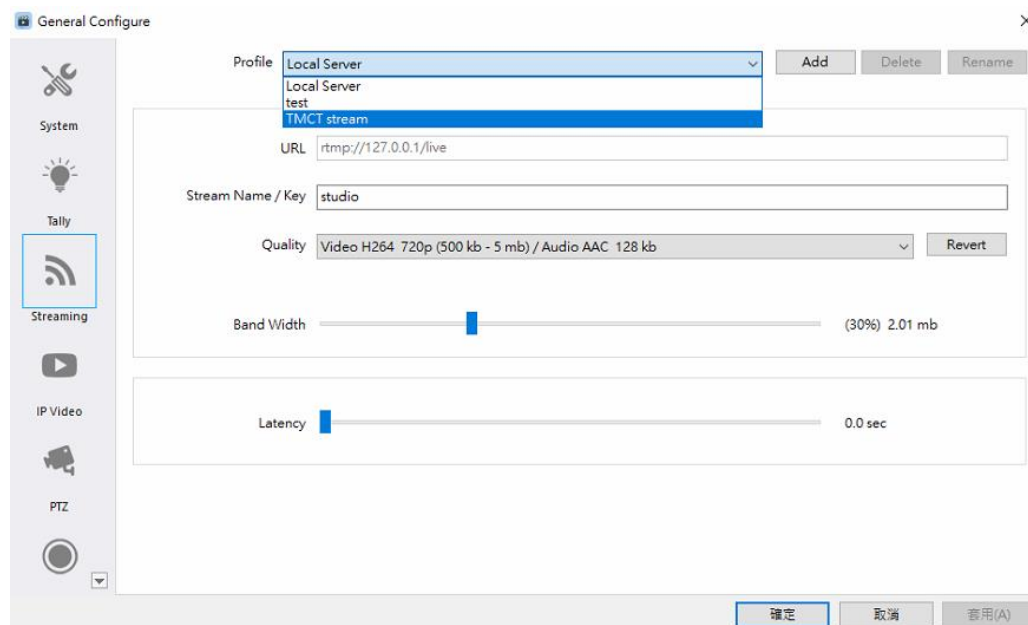

After the adding is finished, users can click the streaming icon and then the bitrates for all of the streaming servers will be listed.


Server Name	Resolution	1.01m	1.51m	2.01m	2.51m	3.01m
Local Streaming Server	720	1.01m	1.51m	2.01m	2.51m	3.01m
test	720	1.47m	1.97m	2.47m	2.97m	3.47m
TMCT stream	720	1.94m	2.44m	2.94m	3.44m	3.94m

Streaming Settings

Please select the streaming server according to your uploading speed, it is recommended that the bandwidth must be at least two times of the bitrate of the streaming media.

4.8.2 Video Recording to Local Hard Disk


Please click the Record button for recording the pictures from the PGM channel to the local hard disk. The current supported file format includes .mov, .mp4, .ts and .MXF. When the recording is in process, the record icon will be shown in red. The recording can be stopped at any time by users.



4.9 Capture Card Settings and File Related Settings


4.9.1 Safe Frame

The TVS-3000 system allows users to open the Safe Frame from the “Options” drop-down menu. Once the Safe Frame function is turned on, the HD and SD Safe Frames will be shown on the PGM and PVW channels for users to confirm the HD and SD outputs on the PGM and PVW windows.

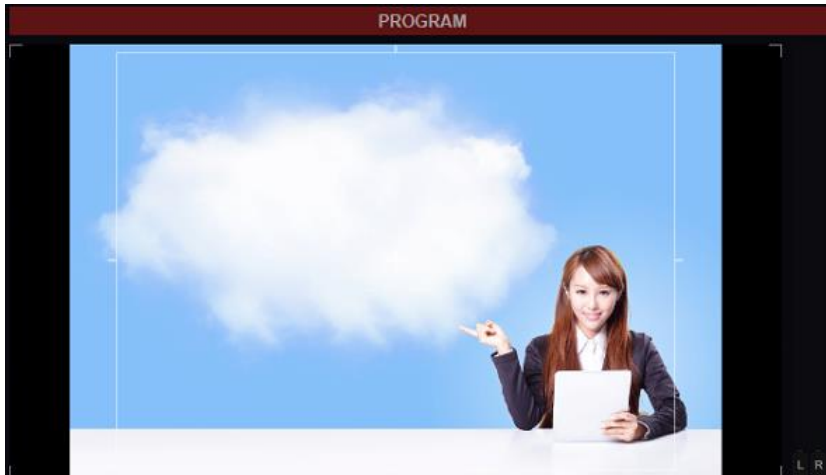

4.9.2 Capture Card Settings

In the TVS-3000 system, users can use the Blackmagic Desktop Video Utility for changing the interface settings.

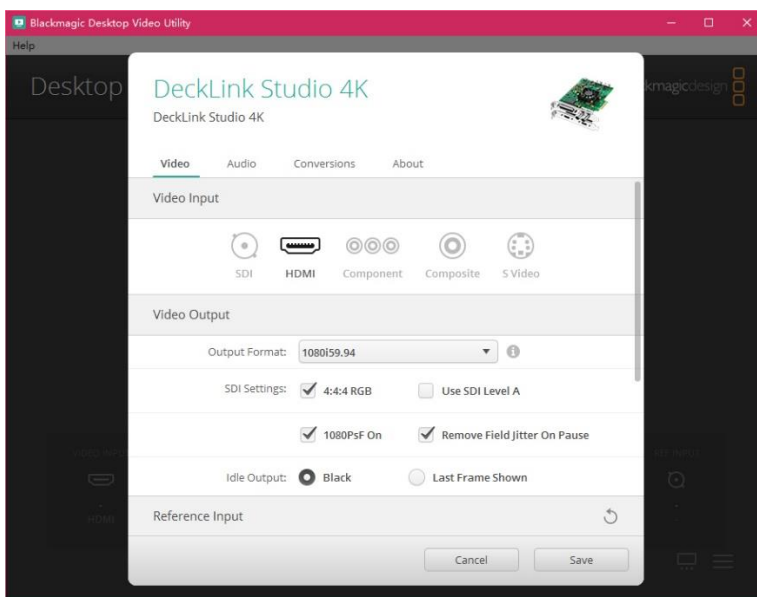

4.9.3 Project Files for the TVS-3000


The TVS-3000 uses “File” button for creating, opening, saving and saving as functions for all of your engineering settings.

4.10 Multiview


Users can check the checkbox in the General Configure settings window and the default Multiview picture will be output to the second monitor which is set to be the extended monitor for the system.



Users can select the “User” from the “Multiview Layout” option from the “Options” drop-down menu.

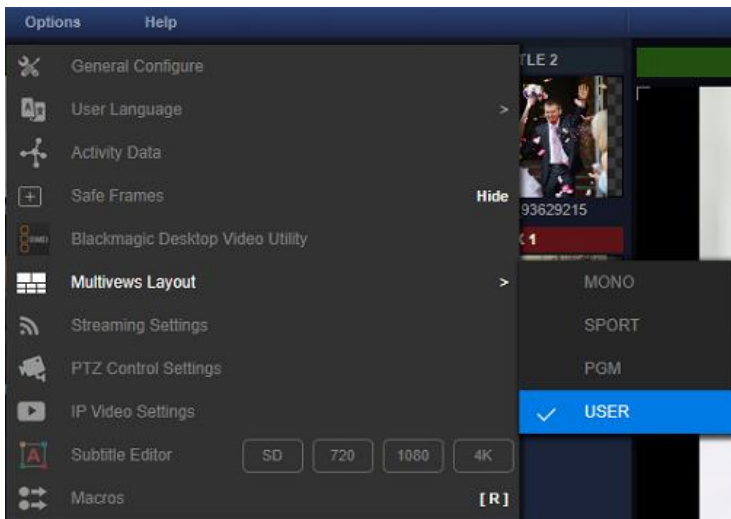


The TVS-3000 system will open a subtitle editor for users to set a multi-window combination to show the channels which users want to monitor in the Multiview monitor. Users can set the size of each window as their desires.

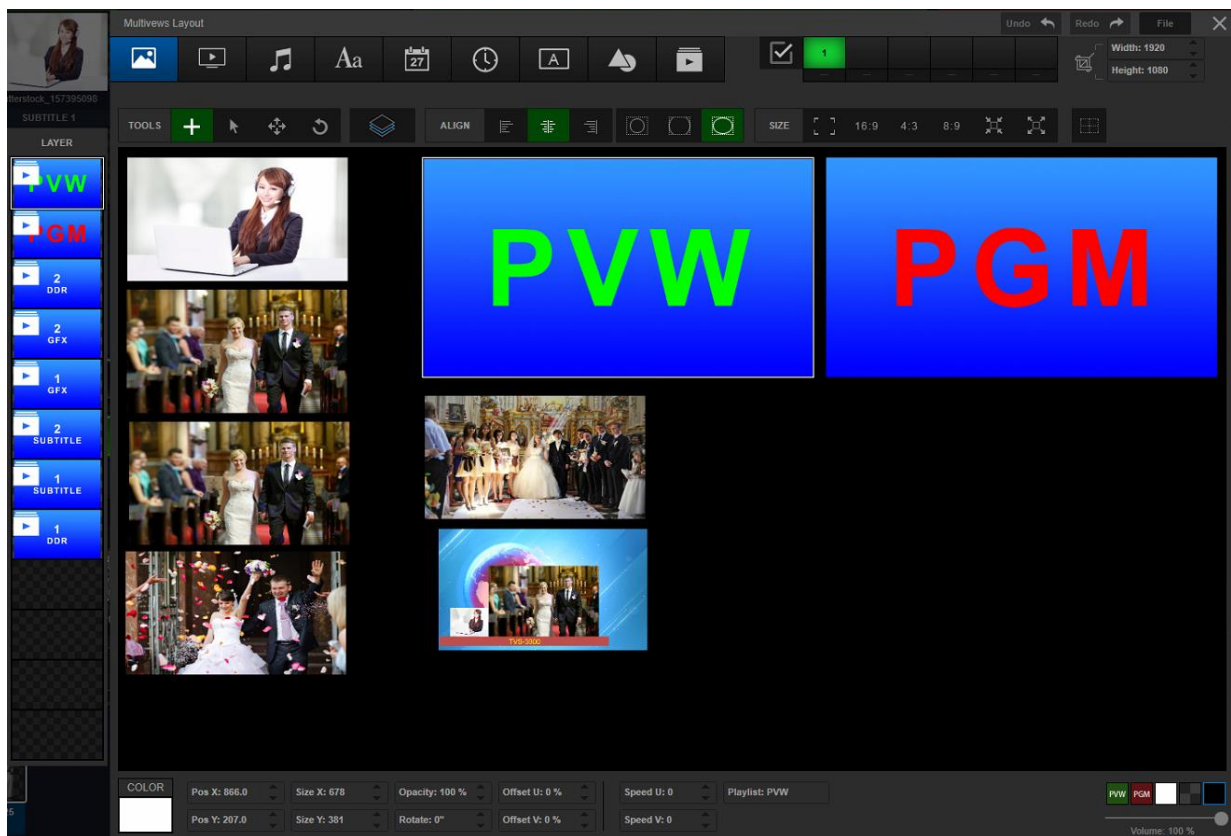

4.11 PTZ Control

For the TVS-3000 system, if there is a PTZ camera which is connected to the same network as the TVS-3000 system or is connected to the TVS-3000 system by the RS interface, users can use the touch pad which is in the TVS-3000 GUI for controlling the PTZ camera.

Please click the “General Configure” from the “Options” drop-down menu to open the “General Configure” window. After that, please click the PTZ button to show the PTZ camera settings window which is shown as following diagram.

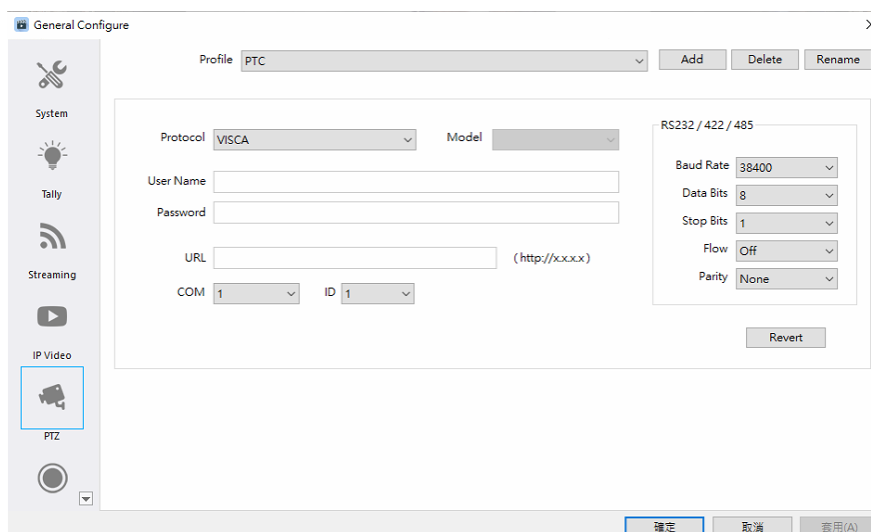


The TVS-3000 supports network connected PTZ camera operation through CGI, VISCA, ONVIF, Pelco D and Pelco P control protocols. Moreover, it also supports PTZ camera operation through RS-232, RS-422 and RS-485 interfaces. Please add a new setting and then please enter the information of your PTZ camera into the list.

The video/audio signals from the PTZ camera can be input from the SDI/NDI interfaces or from the RTMP/RTSP channels. Please make sure that those signals are added to the “CAMERA” or “NET” categories and then please right-click the media tag of the “CAMERA” or “NET” category.




When this camera signal is selected, users can find the word “PTZ” from the touch pad for controlling. This shows that it is ready for users to use the touch pad to control this PTZ camera.

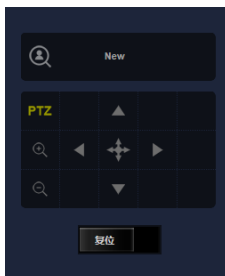


4.12 AMF Format

The transition effect or the image sequence of the CG template can be used by the TVS-3000 system. However, it will occupy too much graphic memory for the graphic card. For those materials, TVS-3000 provides a built-in converter for shrinking their size and the resource consumed.

Please open the Animation tool from the software folder which is shown as following diagram.

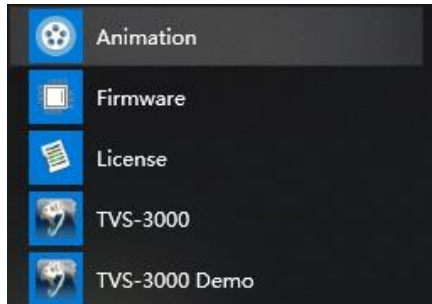

Please click the “Video” button which is located on the top left side of the window of the converter to select the file which is needed to be converted.

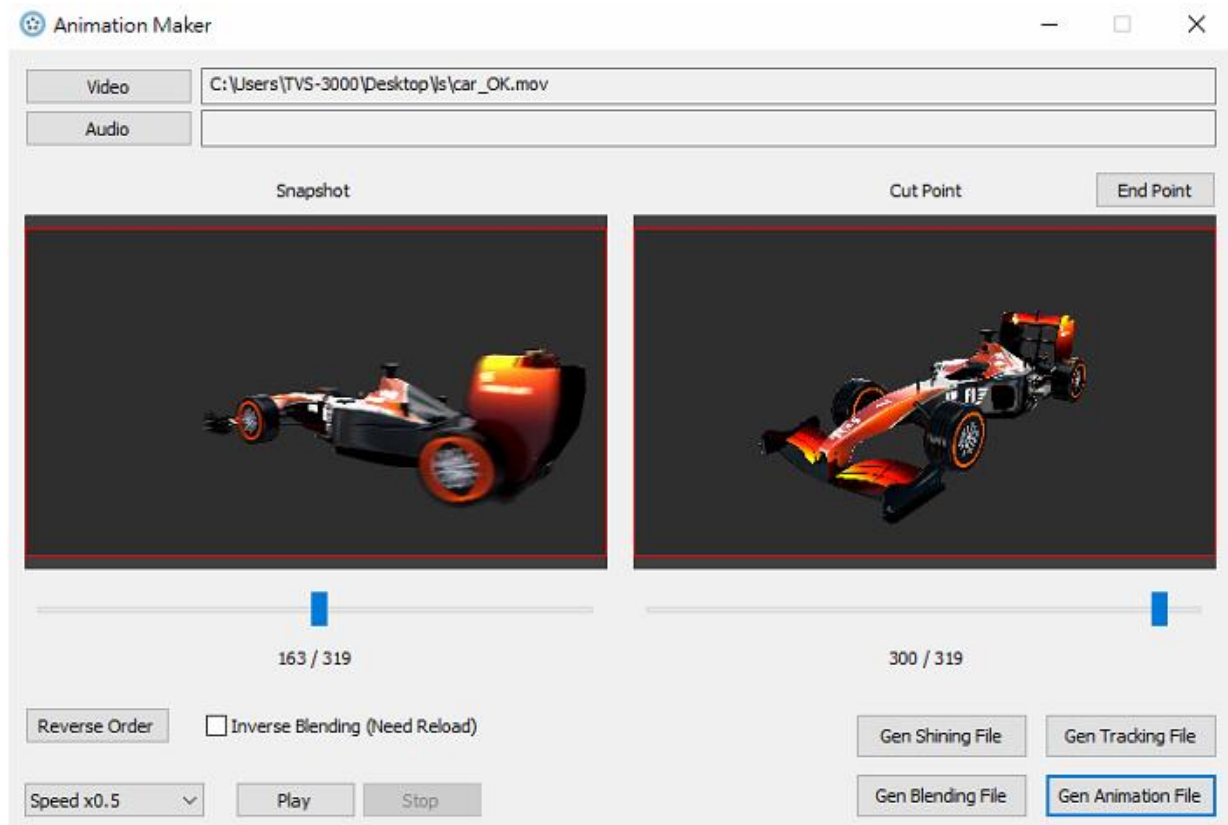

Please adjust the slider which is located below the left window (snapshot) to set the thumbnail of the animation. Please adjust the slider which is located below the right window (point for switching) to set the end point for applying the transition. After that, please click the “End Point” button. After the adjustment is finished, please click the “Generate” button for saving the outcome to your desired location. After that, users can loading this .amf file in the CG editor for the special effect for transition.

Chapter 5 Frequently-Asked Questions

This section describes problems that you may encounter while using the TVS-3000. If you have questions, please refer to related sections and follow all the suggested solutions. If problem still exists, please contact your distributor or the service center.

No.	Problems	Solutions
1.	How to check whether the firmwares of the HTC Vive Base Station and HTC Vive Tracker are needed to be upgraded?	Users need to install the Stream VR software for checking the firmware version in recognizable devices. After that, users can know whether it is needed for upgrading the firmware or not.
2	What type of the graphic card is supported by the TVS-3000 and what version of the graphic card driver should be used?	<ul style="list-style-type: none"> ● Users can use the NVIDIA graphic card. However, the AMD graphic card is not supported. It is recommended to use the graphic card with 6 GB or more graphic memory. ● The NVIDIA related coding is used in the TVS-3000 software. So, it is recommended to use the graphic card driver with the version number of “430.64” or later for smooth operation.
3	What file format can be output for the virtual scenes and virtual objects which are made by the 3D software?	<ul style="list-style-type: none"> ● Those files can be output to be the FBX format files for packaging and guiding in to the virtual software. ● The Autodesk FBX file format is supported by the TVS-3000 system. In real testing, the FBX file which is made and output by MAYA can not be recognized by the TVS-3000 system. However, the file which is made and output by the 3D MAX can be recognized correctly.

4	How to package the object or virtual scene?	<ul style="list-style-type: none"> ➤ Directory Structure: FBX file, texture file folder 、 snapshot.png • FBX: Object or virtual scene files. • Texture File Folder: File folder for saving the texture file of the object or virtual scene. (If there is no texture, users can ignore this file folder). • snapshot.png: Rendering diagram for virtual scenes or objects. ➤ Please package the above-mentioned files in one ZIP file manually.
5	If the “Encoder Error” message is shown when the software is opened, how to solve this issue?	The main reason for this issue is that the driver version for the graphic card is too old. Please upgrade the graphic card driver version to “430.64” or later.
6	Where is the location of the HTC Vive Base Station in the virtual scenes.	The default direction of the HTC Vive Base Station is located at the forefront of the camera. In real application, please follow this rule for installing the HTC Vive Base Station.

7	How many Base Station can be supported by the TVS-3000 system? How to set the operating mode for the Base Station?	<ul style="list-style-type: none"> ● The TVS-3000 can support up to 2 Base Station. ● When using 1 Base Station only, please set the operating mode of the Base Station to “B”. ● When using 2 Base Stations, please set those 2 Base Stations to “B” and “C” operating modes respectively.
8	What is the allowed receiving range and receiving distance of the Base Station? How to install the Base Station?	<ul style="list-style-type: none"> ● The receiving range is a 120 degree cone shape which is centered on the Base Station. ● The maximum receiving range is up to 5m. ● The Base Station should be installed at the place which the distance is 2m or more from the floor. Tilt the Base Station down to form an angle of 30-45 degrees with the wall.
9	What settings must be modified after the graphic card driver is installed successfully.	<ul style="list-style-type: none"> ● In order to prevent the repeat calculation of the graphic card, it is needed to turn off the “De-interlacing” function in the video picture setting from the control panel of the NVIDIA.

Chapter 6 Product Specifications

Model Name	TVS-3000
Product Name	4K AR 3D Tracking Virtual Studio System
Tracking/Trackless	Tracking and Trackless
Video Input	4K Mode: 6G-SDI x 2 or 12G-SDI x 1 HD Mode: 3G-SDI x 3
Video Output	4K Mode: HDMI 2.0 x 1 HD Mode: 3G-SDI x 1 + HDMI x 1
Video Input/Output Format	SDI Input/Output: 2160p 60/50/30/25 (For Input Only) 1080p 30/25 1080i 60/50 720p 60/50/30/25 HDMI Output: 2160p 60/50/30/25 1080p 60/50/30/25 720p 60/50/30/25
Audio Input	Mini Phone Jack x 1 SDI audio embedded
Operation Monitor	DP x2
Tally	Coming soon
Downstream Key	3
Media	3 (DDR)
Virtual Studio	Built-in 10 sets and users can download the virtual scenes unlimitedly from the website datavideovirtualset.com
Still Picture	1
Still Text	2
Keyer	Chroma key upto 8CH
Recording	Lossless 4:2:2 (.avi) H.265 (.mov) H.264 (.mp4;.wmv) MPEG-2 (.ts;.mxf)
Live Streaming Protocols	TS over UDP TS over TCP RTMP RTMPS RTSP
Hard Disk Capacity	4TB HDD + 500G SSD

Note

Note

Note

Service & Support

It is our goal to make owning and using Datavideo products a satisfying experience. Our support staff is available to assist you to set up and operate your system. Contact your local office for specific support requests. Plus, please visit www.datavideo.com to access our FAQ section.



Please visit our website for latest manual update.

<https://www.datavideo.com/product/TVS-3000>

datavideo
www.datavideo.com



@DatavideoUSA @DatavideoIndia2016
@DatavideoEMEA @Datavideojapan
@DatavideoTaiwan @DatavideoLatam
@DatavideoAsia @DatavideoBrasil



@Datavideo
@Datavideo_EMEA
@Datavideo_Taiwan



@DatavideoUSA
@DVTWDCN



@DatavideoUSA
@DatavideoEurope

All the trademarks are the properties of their respective owners.
Datavideo Technologies Co., Ltd. All rights reserved 2020

Sept.-11.2019
Version E1