


datavideo

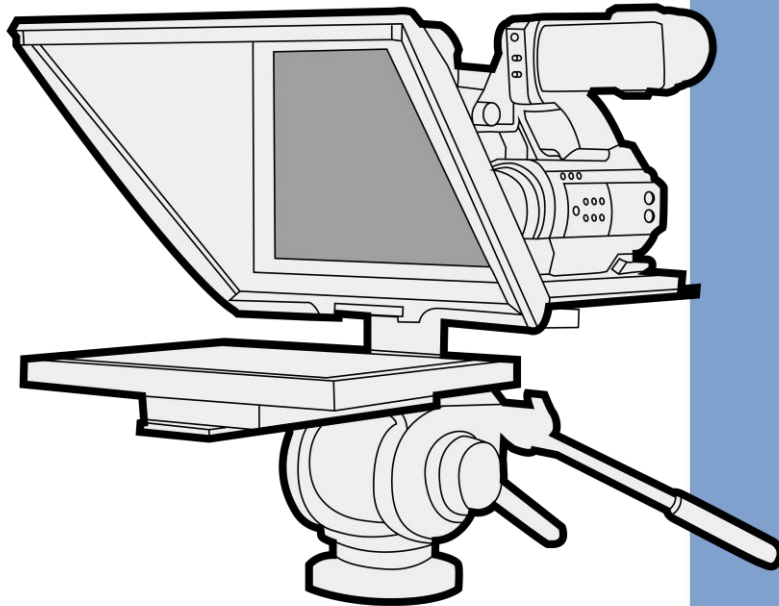

ENG & Freestanding
TELEPROMPTER KIT

TP-700

Instruction manual

www.datavideo.com

Contents

CONTENTS 2

FCC COMPLIANCE STATEMENT 4

WARNINGS AND PRECAUTIONS..... 4

 GLASS – HANDLE WITH CARE 4

WARRANTY 5

 STANDARD WARRANTY 5

 REGISTER FOR 3 YEAR WARRANTY 5

 DISPOSAL 5

 PACKING LIST 6

PRODUCT OVERVIEW 8

 FEATURES..... 8

ASSEMBLY – TP-700 9

 ASSEMBLY –ENG CONFIGURATION 9

 ASSEMBLY – FREESTANDING CONFIGURATION 12

 ASSEMBLY – OPTIONAL TALENT MONITOR 15

CONNECT A PC/LAPTOP FOR CONTROL AND MONITORING OVER IP16

 DIRECT ETHERNET CONNECTION 16

 CONNECTION VIA A ROUTER / DHCP LAN 16

CAMERA EXPOSURE AND THE 70/30 MIRROR GLASS.....18

CLEANING THE 70/30 GLASS18

OPTIONAL TELEPROMPTER REMOTE CONTROLS19

 WR-500 HANDHELD CONTROLLER 19

Control Buttons 20

Remote Accessories 20

Lanyard Necklace..... 20

CR2032 Battery 21

 FS-30 FOOT SWITCH..... 22

Control Buttons 22

 GENERIC PRESENTATION CLICKERS 23

Control Buttons 23

DVPROMPTER PLUS APP.....24

 DOCUMENTS SCREEN 24

 CREATING AND EDITING TEXT SCRIPTS AND SLIDES 25

Text Scripts..... 25

Slides 25

 Exporting Slides from PowerPoint 25

 Exporting slides from Keynote 27

 Importing Slides 28

 REAL TIME EDITING..... 29

 PLAYLISTS 30

Adding a script to the playlist 30

Changing the playlist order..... 30

 CONTROL 31

Via the device (USB mouse) 31

Via the web interface 32

 Keyboard Shortcuts 32

<i>Using Optional Hardware Remote Controls</i>	32
MENU BAR.....	33
<i>Settings</i>	34
<i>Network</i>	36
SYNCHRONIZING MULTIPLE DEVICES.....	38
<i>Via HDMI</i>	38
<i>Via Ethernet</i>	38
CONNECTING AN EXTERNAL DISPLAY.....	40
UPDATING THE APP & FIRMWARE.....	41
UPDATING THE MONITOR FIRMWARE.....	41
UPDATING THE APP.....	41
SPECIFICATIONS.....	43
SERVICE AND SUPPORT	44

Disclaimer of Product and Services

The information offered in this instruction manual is intended as a guide only. At all times, Datavideo Technologies will try to give correct, complete and suitable information. However, Datavideo Technologies cannot exclude that some information in this manual, from time to time, may not be correct or may be incomplete. This manual may contain typing errors, omissions or incorrect information. Datavideo Technologies always recommend that you double check the information in this document for accuracy before making any purchase decision or using the product. Datavideo Technologies is not responsible for any omissions or errors, or for any subsequent loss or damage caused by using the information contained within this manual. Further advice on the content of this manual or on the product can be obtained by contacting your local Datavideo Office or dealer.

FCC Compliance Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

Warnings and Precautions



1. Read all of these warnings and save them for later reference.
2. Follow all warnings and instructions marked on this unit.
3. Unplug this unit from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
4. Do not use this unit in or near water.
5. Do not place this unit on an unstable cart, stand, or table. The unit may fall, causing serious damage.
6. Slots and openings on the cabinet top, back, and bottom are provided for ventilation. To ensure safe and reliable operation of this unit, and to protect it from overheating, do not block or cover these openings. Do not place this unit on a bed, sofa, rug, or similar surface, as the ventilation openings on the bottom of the cabinet will be blocked. This unit should never be placed near or over a heat register or radiator. This unit should not be placed in a built-in installation unless proper ventilation is provided.
7. This product should only be operated from the type of power source indicated on the marking label of the AC adapter. If you are not sure of the type of power available, consult your Datavideo dealer or your local power company.
8. Do not allow anything to rest on the power cord. Do not locate this unit where the power cord will be walked on, rolled over, or otherwise stressed.
9. If an extension cord must be used with this unit, make sure that the total of the ampere ratings on the products plugged into the extension cord do not exceed the extension cord rating.
10. Make sure that the total amperes of all the units that are plugged into a single wall outlet do not exceed 15 amperes.
11. Never push objects of any kind into this unit through the cabinet ventilation slots, as they may touch dangerous voltage points or short out parts that could result in risk of fire or electric shock. Never spill liquid of any kind onto or into this unit.
12. Except as specifically explained elsewhere in this manual, do not attempt to service this product yourself. Opening or removing covers that are marked "Do Not Remove" may expose you to dangerous voltage points or other risks, and will void your warranty. Refer all service issues to qualified service personnel.
13. Unplug this product from the wall outlet and refer to qualified service personnel under the following conditions:
 - a. When the power cord is damaged or frayed;
 - b. When liquid has spilled into the unit;
 - c. When the product has been exposed to rain or water;
 - d. When the product does not operate normally under normal operating conditions. Adjust only those controls that are covered by the operating instructions in this manual; improper adjustment of other controls may result in damage to the unit and may often require extensive work by a qualified technician to restore the unit to normal operation;
 - e. When the product has been dropped or the cabinet has been damaged;
 - f. When the product exhibits a distinct change in performance, indicating a need for service.

GLASS – Handle with care



This product contains a sheet of 70/30 mirror glass please handle it with care.

To avoid a risk of damage or injury please follow this instruction manual and use caution when transporting, un-packing, cleaning, assembling or dis-assembling this part of the product.

Warranty



Standard Warranty

- Datavideo equipment are guaranteed against any manufacturing defects for one year from the date of purchase.
- The original purchase invoice or other documentary evidence should be supplied at the time of any request for repair under warranty.
- The product warranty period begins on the purchase date. If the purchase date is unknown, the product warranty period begins on the thirtieth day after shipment from a Datavideo office.
- All non-Datavideo manufactured products (product without Datavideo logo) have only one year warranty from the date of purchase.
- Damage caused by accident, misuse, unauthorized repairs, sand, grit or water is not covered under warranty.
- Viruses and malware infections on the computer systems are not covered under warranty.
- Any errors that are caused by unauthorized third-party software installations, which are not required by

our computer systems, are not covered under warranty.

- All mail or transportation costs including insurance are at the expense of the owner.
- All other claims of any nature are not covered.
- All accessories including headphones, cables, and batteries are not covered under warranty.
- Warranty only valid in the country or region of purchase.
- Your statutory rights are not affected.

Register for 3 year Warranty

- All Datavideo products purchased after July 1st, 2017 are qualified for a free two years extension to the standard warranty, providing the product is registered with Datavideo within 30 days of purchase.
- Certain parts with limited lifetime expectancy such as LCD panels, DVD drives, Hard Drive, Solid State Drive, SD Card, USB Thumb Drive, Lighting, Camera module, PCIe Card are covered for 1 year.
- The three-year warranty must be registered on Datavideo's official website or with your local Datavideo office or one of its authorized distributors within 30 days of purchase.

Disposal

For EU Customers only - WEEE Marking



This symbol on the product or on its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, your household waste disposal service or the shop where you purchased the product.



CE Marking is the symbol as shown on the left of this page. The letters "CE" are the abbreviation of French phrase "Conformité Européene" which literally means "European Conformity". The term initially used was "EC Mark" and it was officially replaced by "CE Marking" in the Directive 93/68/EEC in 1993. "CE Marking" is now used in all EU official documents.

Packing List

Item	Description	Quantity
A	Main TP-700 ENG prompter rail	1
B	Smaller rail with spacer block for mounting item F	1
C	¼" Screws Length 27mm secures item A or AA to B	2
D1	Hex Tool (Silver) for counter sunk Hex head screws	1
D2	Hex Tool (Silver) for Glass Frame Hex screws	1
D3	Hex Tool (Silver) for VESA Hex screws	1
E	16mm ¼ screws with washer to attach item F to item B (With red dot)	2
F	15" LCD control unit	1
G	Glass frame with 4 Velcro straps	1
H	Wing nut screws ¼" Length 19mm secures item A or AA to G	2
I	Cloth Snood/Hood with Velcro straps	1
J	70/30 Glass sheet with Green and Red stickers	1
K	Snood/Hood support wire	1
L	¼" Camera securing screws length 16mm	2
M	¼" Camera securing screws length 31mm	2
N	Camera riser block 15mm thick	1
O	USB Mouse	1
P	Adapter screw to convert 3/8" hole to ¼" hole	1
Q	¼" Counter sunk hex head screw length 16mm	1
R	¼" Counter sunk hex head screw length 31mm	1
S	Talent monitor vertical mounting rail	1
T	Talent monitor VESA adapter plate	1
U	14mm M4 screws for mounting 75MM VESA monitors	4
V	Universal mains PSU	1
W	Ethernet Cable 5M	1
X	3.5mm input adapter for WR-500 remote control	1
Y	12V D-Tap Cable	1
Z	12mm M4 Screws to secure item J	2
AA	Small rail to attached item G to B in a freestanding configuration	1
BB	16MM M4 screw to attach item S to item B	2
CC	8mm M4 screws for mounting item T	4
CCC	12mm M4 screws for mounting item 100MM VESA monitors	4



NOTE: Depending on your order, your TP-700 kit could have been supplied with one of a range of remote controls – for more information on the remote controls please speak with your local Datavideo supplier or check our website www.datavideo.info for details.



Product Overview

Studio teleprompter with extra-large trapezoid glass. TP-700 features a bright 15" LCD screen with dvPrompter Plus app built-in. There is no need to run software on a laptop.

The Datavideo Prompter Kit, TP-700, can be used with ENG style cameras, where the camera is mounted directly to the teleprompter rig, or with any camera in its freestanding configuration.


Prepared scripts or cue sheets can be easily copied and pasted into the dv Prompter Plus app software and scrolled at a set automatic rate or controlled by a user with the optional wired / wireless remote for a more natural result. A number of clear fonts, colours and text sizes are available making reading comfortable from a variety of distances.

Features

- ENG and Freestanding configurations
- dvPrompter Plus software built in
- Can be powered by the mains or a V-Lock battery
- HDMI input and HDMI output can be used to connect multiple TP-700s together
- The HDMI input also allows the built-in tablet to be used as a HDMI monitor with third party software if required
- Fully controllable via Ethernet
- Supports up to 19" talent monitor on the front, VESA 75 and 100 mounts
- An optional wired remote control and foot pedal is available
- Can also be controlled using standard wireless presentation remotes

Assembly – TP-700

Assembly –ENG Configuration



1. Attach/screw the tripod’s own quick release plate to the screw holes on the base of the TP-700 ENG Prompter rail, **item A**.

The long slot will be to the rear of the camera position and the four holes in the rail will be towards the lens of the camera.




2. Now slide and secure the tripod plate, with prompter rail, **item A**, onto the head of the tripod or dolly.



3. Use the hand screws **item C**, to secure the lower part of the ENG Prompter Frame **item B** in place using the counter sunk holes in the main part of the frame **item A**.

Note: There should be two holes left free in front of this mounting position for the Glass frame.

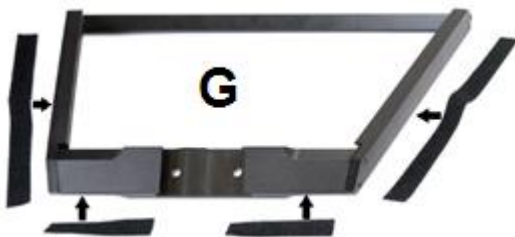

4. There are four adhesive Velcro straps packed inside the Snood/Hood, **item I**. Peel off the white paper backing before applying these straps to the Glass Frame, **item G**.

Apply the two long Velcro strips to the Glass Frame edges on the Left side and Right side. Then apply the two smaller Velcro strips to the Bottom Left and Right sides of the Glass Frame edge.

Be careful not to cover any screws and keep them straight.



- Slide the Glass frame, **item G**, on to the front of the TP-700 ENG prompter rail, **item A**. Ensure the upper part of the Glass Frame, **item G**, is leaning away from the camera position and secure with the two wing nut screws, **item H**.



- There are two slots on the inside left and right of the Glass Frame, **item G**. Guide/slide 70/30 Mirror Glass sheet, **item J**, into these slots from above.

The **Red circle sticker** on the Mirror Glass, item J, should be facing camera position / lens.

The **Green circle sticker** on **item J** should be facing **toward the on screen talent / commentator**.

- Optionally, secure the glass sheet within the frame using the small M4 screws, **item Z**, at the top of each frame slot. The hex tool, **item D2** can be used to tighten the screws.

- Fit the 15" LCD control unit, **item F**, to the lower part of the ENG Prompter Frame **item B** using the ¼ thumb screws, **item E**. Ensure the LCD control unit has the red power button facing the front of the TP-700.



- Decide if you need to use the TP-700 MKII ENG camera riser block or not.

Ideally you want the lens of your camera positioned as close to the centre of the 70/30 mirror glass as possible.

In some cases depending on your camera and its ENG camera plate the camera lens may already be high enough.



Tripod adapter plate shown without riser block

- Secure the ENG tripod adapter plate (not supplied) and riser block **item N** (if required) to the prompter rail **item A** using two of the riser screws provided, **items L or M**. These screws go through the long slot on the riser block and prompter rail and into the base of the tripod adapter plate.

Two screw sets are provided, the long set (**Item M** 31mm long) is for when using the riser block. The short set (**Item L** 16mm long) when just using the camera plate on its own.

Items Q and R are provided in case the tripod adapter plate and riser block need to be positioned over the tripod head.



- You can now mount the ENG camera to the tripod adapter plate. **Take care** to protect the camera lens and the 70/30 mirror glass. If necessary slide everything further along the prompter frame.

The tip of the lens should be about 1 to 2 cm away from the centre of the 70/30 Mirror Glass.

It may be a good idea to remove the lens sun hood if this is possible.



- Fit the Snood / Hood support wire, **item K**. This stops the cloth Snood / Hood from dipping in front of the camera lens. There are two sets of holes in the glass frame for this Snood / Hood support wire.

- Fit the cloth Snood / Hood, **item I**, around the lens and to the Glass Frame edges, **item G**. The Velcro strips marry the Snood/Hood to the Glass Frame.



14. Pull the draw cord to secure the cloth Snood / Hood, **item I**, around the camera lens and to shut out light from the camera side.


15. Turn on the 15" LCD control unit by connecting the mains power supply, **Item V** or connecting V-Lock battery using the D-Tap cable, **Item Y**. The dvPrompter Plus software will automatically load, please see the [appropriate](#) section of this manual for detailed software usage instructions.
16. If required adjust the position of the 15" LCD control unit.
17. Adjust the camera exposure settings as necessary. See the [Camera Exposure](#) section of this manual.

Assembly – Freestanding configuration



1. Use the hand screws **item C**, to secure the lower part of the ENG Prompter Frame **item B** in place using the counter sunk holes in the freestanding rail **item AA**.

Note: There should be two holes left free in front of this mounting position for the Glass frame.

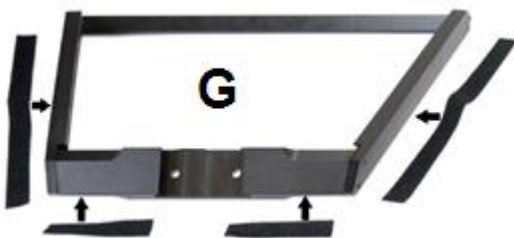

2. There are four adhesive Velcro straps packed inside the Snood/Hood, **item I**. Peel off the white paper backing before applying these straps to the Glass Frame, **item G**.

Apply the two long Velcro strips to the Glass Frame edges on the Left side and Right side. Then apply the two smaller Velcro strips to the Bottom Left and Right sides of the Glass Frame edge.

Be careful not to cover any screws and keep them straight.



- Slide the Glass frame, **item G**, on to the front of the freestanding rail, **item AA**. Ensure the upper part of the Glass Frame, **Item G**, is leaning away from the camera position and secure with the two wing nut screws, **item H**.



- There are two slots on the inside left and right of the Glass Frame, **Item G**. Guide/slide 70/30 Mirror Glass sheet, **item J**, into these slots from above.

The **Red circle sticker** on the Mirror Glass, item J, should be facing camera position / lens.

The **Green circle sticker** on **item J** should be facing **toward the on screen talent / commentator**.

- Optionally, secure the glass sheet within the frame using the small M4 screws, **Item Z**, at the top of each frame slot. The hex tool, **item D2** can be used to tighten the screws.



- Fit the 15" LCD control unit, **Item F**, to the lower part of the ENG Prompter Frame **item B** using the 1/4 thumb screws, **Item E**. Ensure the LCD control unit has the red power button facing the front of the TP-700.



- You can now fit the lower part of the ENG Prompter Frame **item B** to your tripod or light stand using one of the three 3/8 threaded holes, use the 3/8 to 1/4 adapter, **Item P** if required. Typically, the central 3/8 hole provides the correct balance if not using a talent monitor, the front 3/8 hole should be used with a talent monitor.

Note: A light stand should only be used when using the TP-700 without a talent monitor, always use an appropriately rated tripod when using a talent monitor.



8. Fit the Snood / Hood support wire, **item K**.. This stops the cloth Snood / Hood from dipping in front of the camera lens. There are two sets of holes in the glass frame for this Snood / Hood support wire.



9. Fit the cloth Snood / Hood, **item I**, to the Glass Frame edges, **item G**. The Velcro strips marry the Snood/Hood to the Glass Frame.



10. Position the TP-700 in front of the camera lens and pull the draw cord to secure the cloth Snood / Hood, **item I**, around the camera lens and to shut out light from the camera side.

11. Turn on the 15" LCD control unit by connecting the mains power supply, **Item V** or connecting V-Lock battery using the D-Tap cable, **Item Y**. The dvPrompter Plus software will automatically load, please see the [appropriate section](#) of this manual for detailed software usage instructions.
12. If required adjust the position of the 15" LCD control unit.
13. Adjust the camera exposure settings as necessary. See the [Camera Exposure](#) section of this manual.

Assembly – Optional Talent Monitor

1. Attach the talent monitor vertical mounting rail, **item S**, to secure the lower part of the ENG Prompter Frame **item B** using the M4 screws, **item BB**.



2. If your monitor has a 75MM VESA mount, attach the monitor directly to the vertical mounting rail, **item S** using the 14mm M4 screws, **item U**.




3. If your monitor has a 100MM VESA mount, first attach the VESA adapter plate, **item T** to the vertical mounting rail, **item S** using the 8mm M4 screws, **item CC**, then attach the monitor to the VESA adapter plate using the 12MM M4 screws, **item CCC**.

Connect a PC/Laptop for control and monitoring over IP

The TP-700 has the Datavideo dvPrompter Plus app built in. The TP-700 can be monitored and controlled from any Ethernet connected device with a modern web browser.

Direct Ethernet connection

1. Connect an Ethernet cable between the TP-700 and your PC/Laptop
2. Power on the TP-700, the dvPrompter Plus app will open automatically
3. The TP-700 has the static IP address 192.168.10.10 by default, we must also set a static IP address on the PC/Laptop
4. Turn on the Windows computer and set it to static IP set up within the **Windows Network and Sharing Centre**. In our example the computer is given the following IP settings so that the computer matches the same IP range as the TP-700.

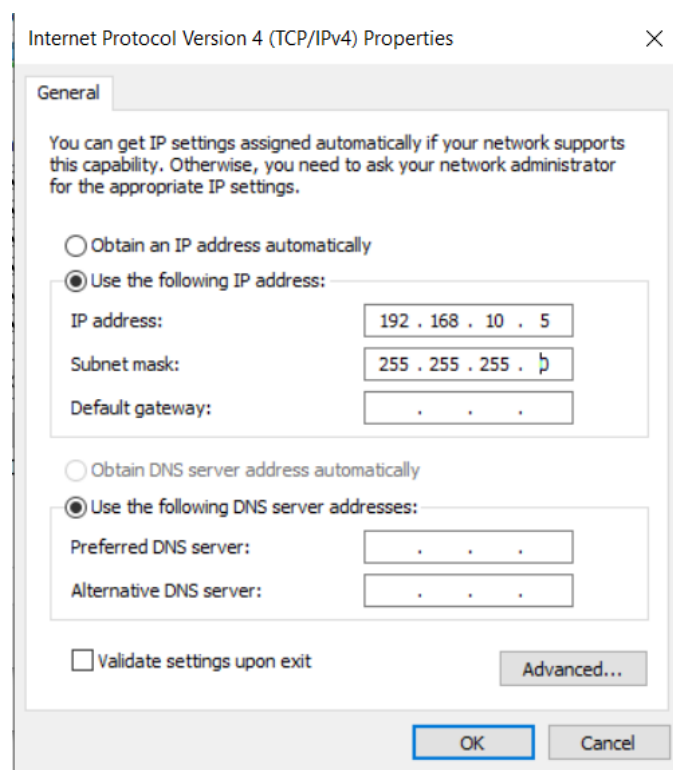


5. Open a web browser and navigate to <http://192.168.10.10:9789>, you will see the main control page shown below
6. Please see the [appropriate](#) section of this manual for software operation instructions

Connection via a router / DHCP LAN

1. Connect the supplied USB mouse to the TP-700 and power it on
2. Once the TP-700 has booted, right click to close the dv Prompter Plus app
3. Navigate to Settings > More > Ethernet
4. Change the 'Ethernet IP mode' from static to DHCP
5. Connect the TP-700 to your existing LAN
6. Open the dv Prompter Plus app
7. Click the menu bar and then 'Network'

8. The network control URL will be shown as below

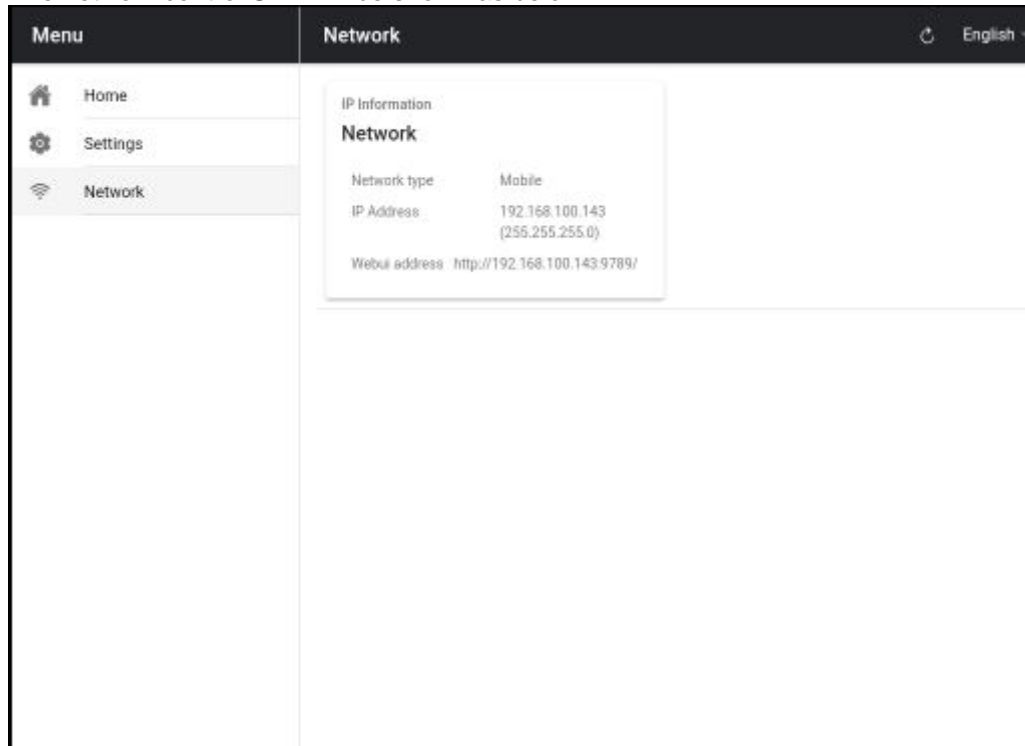


9. Please see the [appropriate](#) section of this manual for software operation instructions

Camera Exposure and the 70/30 Mirror Glass

After setting up the camera with the 70/30 glass in front of the lens adjust the camera set up and white balance. This is because the 70/30 Glass affects the camera exposure by approximately 1 stop almost like the effect of a neutral density filter. Consult your camera manual for further help and advice with its exposure and white balance settings.

Cleaning the 70/30 Glass

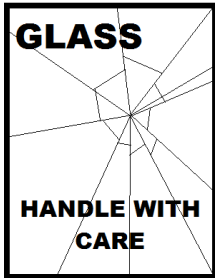

This product contains a sheet of 70/30 glass please handle it with care.

To avoid a risk of damage or injury please follow this instruction manual and use caution when transporting, un-packing, cleaning, assembling or dis-assembling this part of the product.

Datavideo recommend cleaning the glass regularly to remove dust and finger print marks. This will ensure the best image quality is recorded when the camera is looking through the glass.


Never attempt to clean the glass whilst it is mounted in the prompter instead remove it carefully from the prompter, clean the glass and then re-install it into the prompter frame. Handle the glass carefully using the cloth covered edges of the glass at all times.

To retain the required qualities of the glass and to avoid scratching the glass during cleaning.

- **Never use** abrasive cloths, pads or abrasive based cleaning fluids on the glass.
- **Never use** cleaning fluids based on an acid or vinegar solution.

Place the glass on a soft, stable, dirt and lint free work surface such as a table with a clean cloth already laid out on it. Then use a second clean, lint free, soft cloth to clean the glass.

Do not apply cleaning fluids to the glass directly, instead apply or spray a small amount of the cleaning fluid onto the cloth. Proceed to clean the glass and work in a light circular motion with the cloth. Ensure all finger marks and streaks are gone before turning the glass over and repeating with the other side.

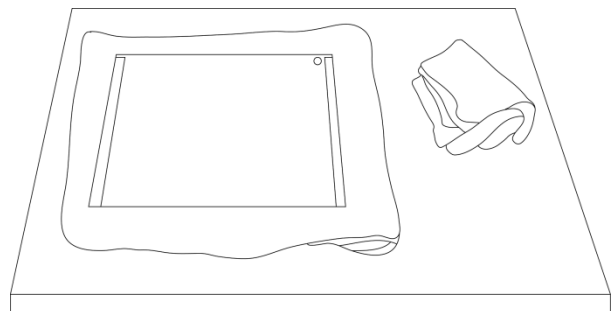

Optional Teleprompter Remote Controls

The TP-700 prompter can be controlled and monitored in real time over IP using a laptop or tablet.

Optionally you use the Datavideo WR-500 handheld controller, the Datavideo FS-30 foot switch controller or generic 2.4 Ghz wireless presentation clickers.

Please see below for more details:

WR-500 Handheld Controller

Optionally you purchase the WR-500 remote control for direct wired control. The **WR-500** remote control supports Bluetooth and Wired operation, only wired operation is supported by TP-700.

The WR-500 supports control of both scrolling text and slides.

When first removed from the retail package the WR-500 remote is already in **wired mode**. When a button is pressed a **RED LED** will flash.

In wired mode, the remote needs to be physically cabled to the TP-700. A four-pole jack to jack plug cable is provided with this remote.

One end of the cable fits into the 3.5mm input adapter (Item I, supplied with the TP-700). The other end plugs into the jack socket on the WR-500 remote.



NOTE: When using this remote in wired mode the **DV Prompter Plus app** should also be set to **Wired – WR-500** in the **Remote menu option**.

Control Buttons

Button	Whilst Scrolling Text	Whilst Paused	Slides
+	Speed up scroll	next break marker	Next slide
-	Slow down scroll	Previous break marker	Previous slide
⏸	Pause	Play	NA
⏪	Reduce font size	Load previous script in playlist	Load previous script in playlist
⏩	Increase font size	Load next script in playlist	Load next script in playlist

LED Indicators	
RED LED	Wired Mode
GREEN LED	Bluetooth 4

Remote Accessories


Lanyard Necklace



Plug the lanyard necklace into the jack plug socket.

CR2032 Battery

A **CR2032 button battery** is installed inside this remote. The original battery supplied (when new) is expected to last for 3 years under average / normal use.

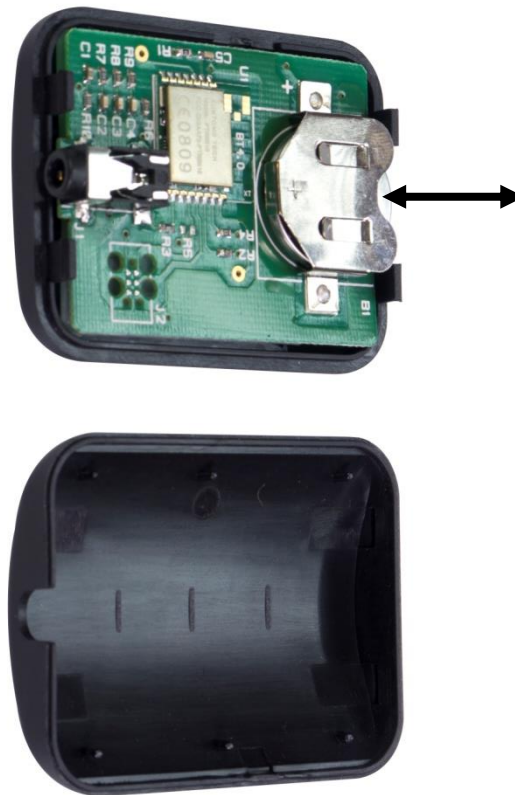

This button battery can be replaced by the user when it dies. **Please remove the back case cover carefully** to avoid user damage to the PCB or case. Then slide the old battery out.

Please ensure the new button battery is installed with the positive (+) side of the cell facing the (+) sign on the PCB battery slot.

FS-30 Foot Switch

Optionally you purchase the FS-30 foot switch control for direct wired control. The FS-30 foot switch connects via USB and offers three pedals with independent functions. The FS-30 uses non-contact photoelectric sensors for near silent operation.

The FS-30 supports control of both scrolling text and slides.



Control Buttons

The FS-30 will work all TP-700 teleprompters running dvPrompter Plus version 1581 or newer, please see the [appropriate](#) section of this manual for information on updating the dvPrompter Plus software.

Please connect the FS-30 to the **white USB** port on the teleprompters 15" LCD monitor, the FS-30 will work as soon as its connected, there is no need to set any control options within the dvPrompter Plus application.

The table below details the functions of each pedal.

Button	Whilst Scrolling Text	Whilst Paused	Slides
Left Pedal	Slow down scroll	Previous break marker	Previous slide
Right Pedal	Speed up scroll	Next break marker	Next slide
Middle Peal	Pause	Play	NA

Generic Presentation Clickers

Most generic presentation clickers with a USB receiver are supported by TP-700s running dvPrompter Plus version 1581 or newer, please see the [appropriate](#) section of this manual for information on updating the dvPrompter Plus software.

We have provided support for control of both scrolling text and slides.



*The above is an example of a 2.4Ghz wireless presentation clicker with a USB receiver.

Control Buttons

Please connect the USB receiver to the **white USB** port on the teleprompters 15" LCD monitor, the presentation clicker will work as soon as its connected, there is no need to set any control options within the dvPrompter Plus application.

The table below details the functions the buttons commonly found on most presentation clickers.

Left <	Slow down scroll	Previous break marker	Previous slide
Right >	Speed up scroll	Next break marker	Next slide
Black Screen	Pause	Play	NA
Start	Pause	Play	NA

Please Note: Whilst we have made every effort to support most generic presentation clickers, we cannot guarantee compatibility provide support for third party controllers.


dvPrompter Plus App

The TP-700 includes a fully unlocked version of the prompter Plus application.

Documents Screen

When you first launch the app, you will see the screen below.

The menu bar in the top left-hand corner provides access to the various settings menus.

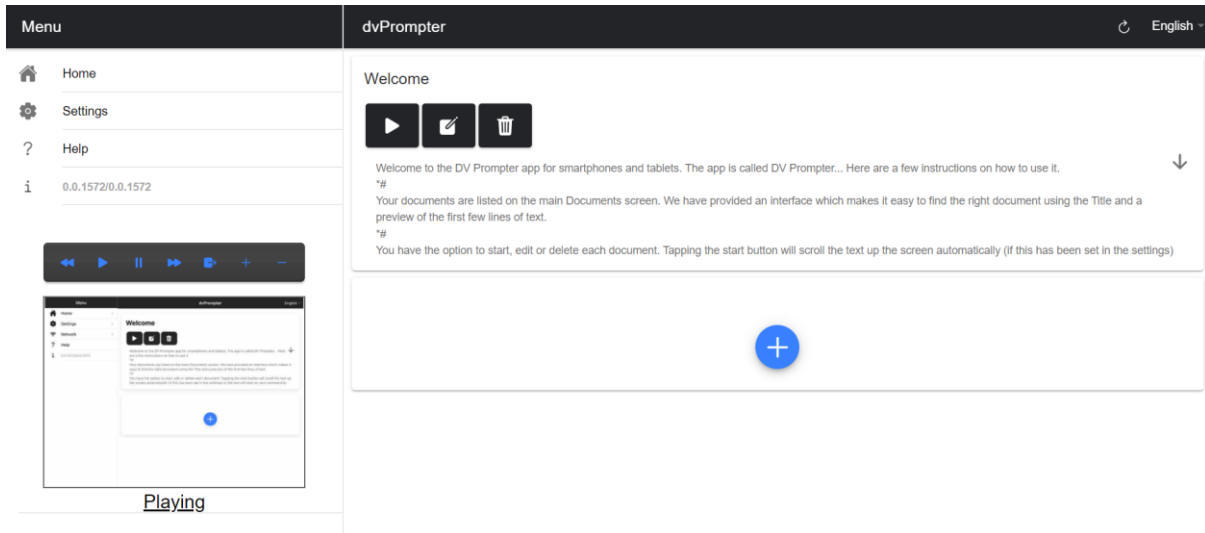


Creating and Editing Text Scripts and slides

Please see the ‘Network’ section of this guide to understand how to access the remote control webui of the app.

Text Scripts

To create a new script via the web interface simply tap the ‘+’ button, enter a title and then enter the script body into the rich text editor. The script will be saved automatically when you close the rich text editor by tapping the ‘X’.

To edit a script on the device simply tap the ‘Edit’ button, the script will be saved automatically when you close the rich text editor by tapping the ‘X’.

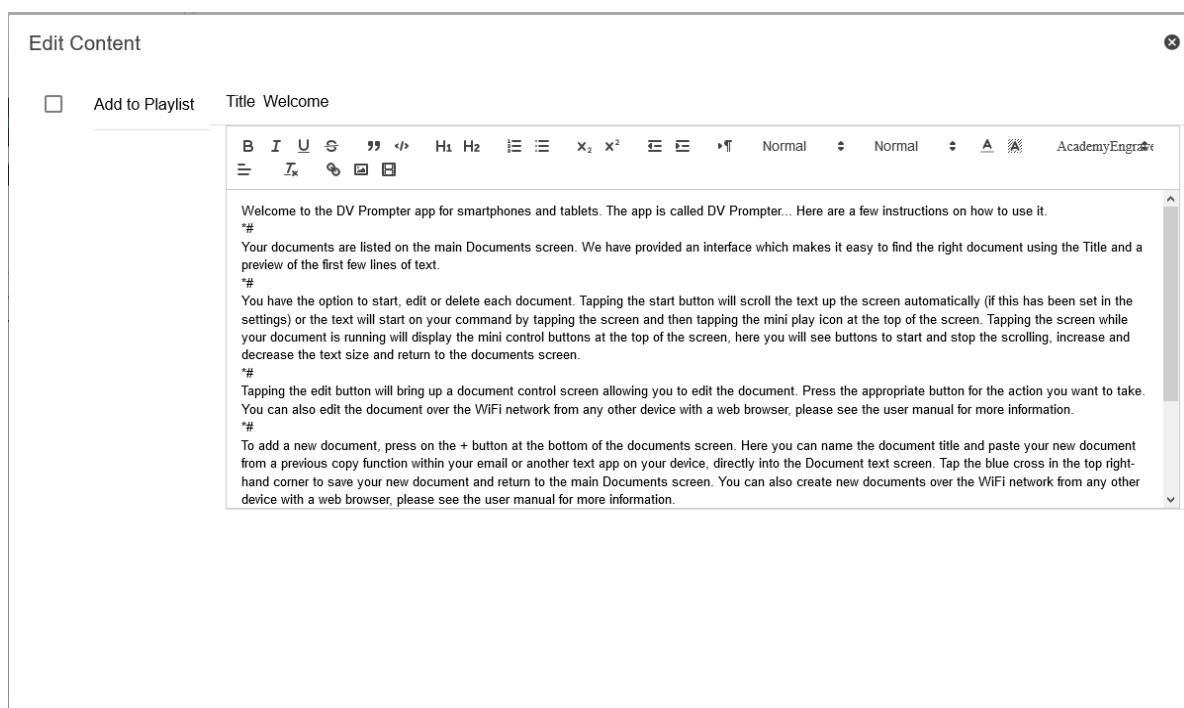

Slides

In addition to text-based scripts you can now import your Powerpoint or Keynote presentation slides via the web interface, slides can be controlled using the hardware WR-500 control or the web based remote control interface. dvPrompter Plus supports seamlessly switching between text-based scripts and slides, you can even add slides and text-based scripts to a playlist


dvPrompter Plus supports mirroring slides in real time so your content is the right way around even when viewed via the mirror glass.

Please Note: Slide mode allows you to import slides as images, you must first export your slides as images from PowerPoint and Keynote


Exporting Slides from PowerPoint

1. Before you convert slides to images, save your PowerPoint presentation to the PPTX or PPT format so you don't lose your work.

2. Select the slide you want to save as an image. If you want to convert all the slides to images, select any slide.
3. Select 'File' > 'Save As'. In PowerPoint for Mac, select 'File' > 'Export.'
4. Choose the location where you want to save the file and enter a name for the image file.

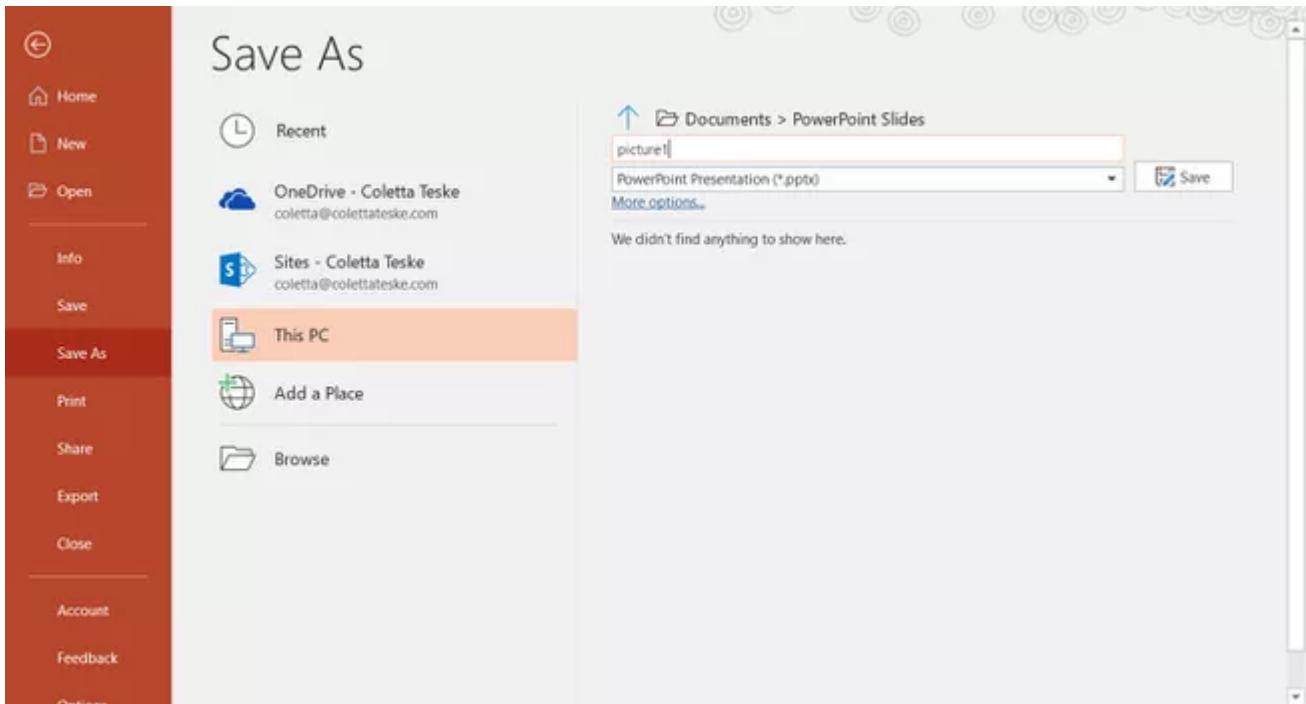

5. Select the 'Save As' type down arrow to display a list of file formats. By default, PowerPoint Presentation (*.pptx) appears in the text box. On Mac, use the menu next to 'File Format'.
6. Select the image format you wish to save your presentation. Choose JPEG.
7. Select 'Save'. In PowerPoint for Mac, choose either 'Save Every Slide' or 'Save Current Slide Only', then select 'Export'.
8. Choose whether you want to export 'All Slides' or 'Just This One'.

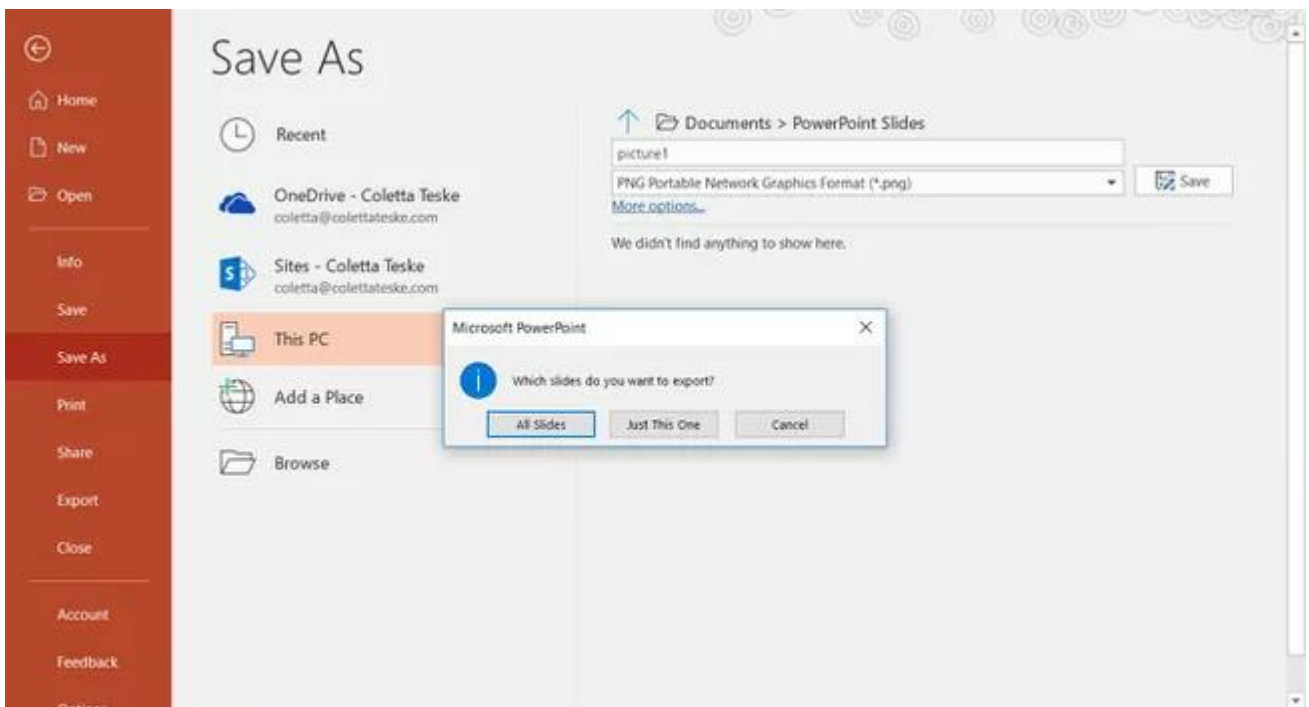


9. The slide is saved in the selected file format.

If you convert more than one PowerPoint slide to separate image files, a new folder is created in the destination folder. This new folder uses the same name as the presentation. If you haven't saved the PowerPoint file, your exported slide images are saved in a folder with a default name, for example Presentation1.

Exporting slides from Keynote


1. Before you convert slides to images, save your presentation so you don't lose your work.
2. In the top menu select 'File' > 'Export to' > 'Images'
3. Select the 'JPEG (High Quality)' format and specify the range of slides that you want to save as images. If you want to save all the slides, check the point 'ALL'.

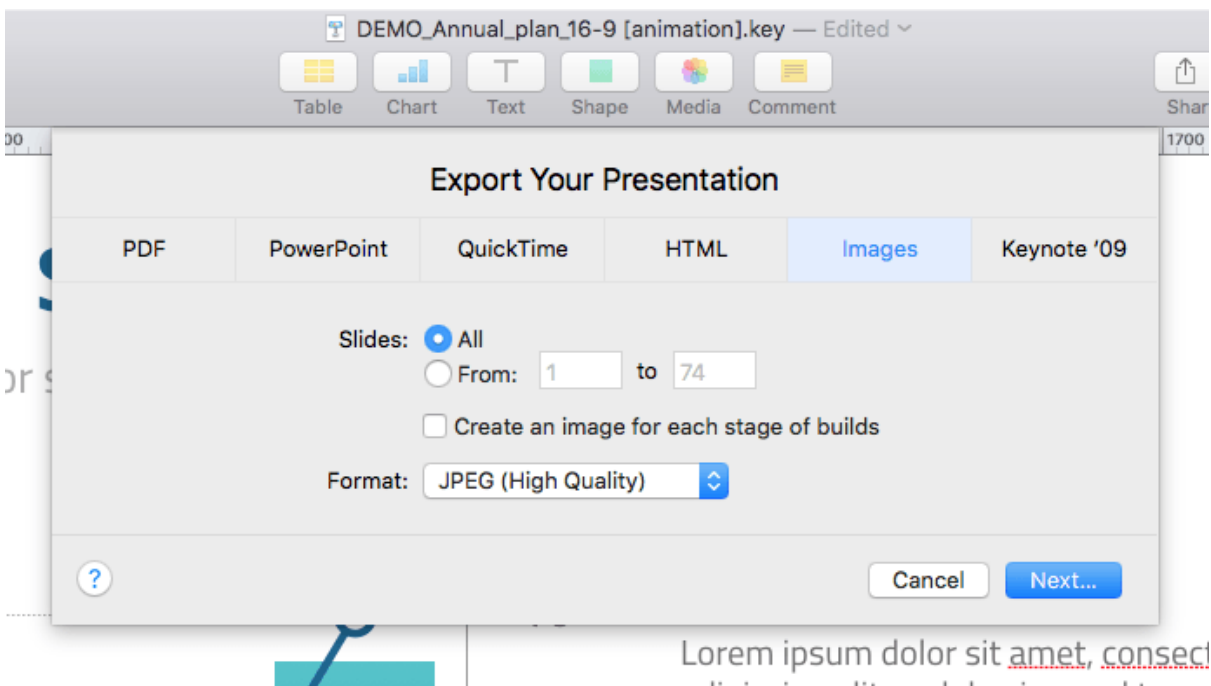

4. Click 'Next'
5. In the opened window select the folder where you want to save the images. Set the default name for the slide. During the export, KeyNote will automatically add the sequence number to this name.

Importing Slides

1. Tap or click the '+' button and select the 'Slides' option.
2. Enter a title, here I have used 'My Slides'

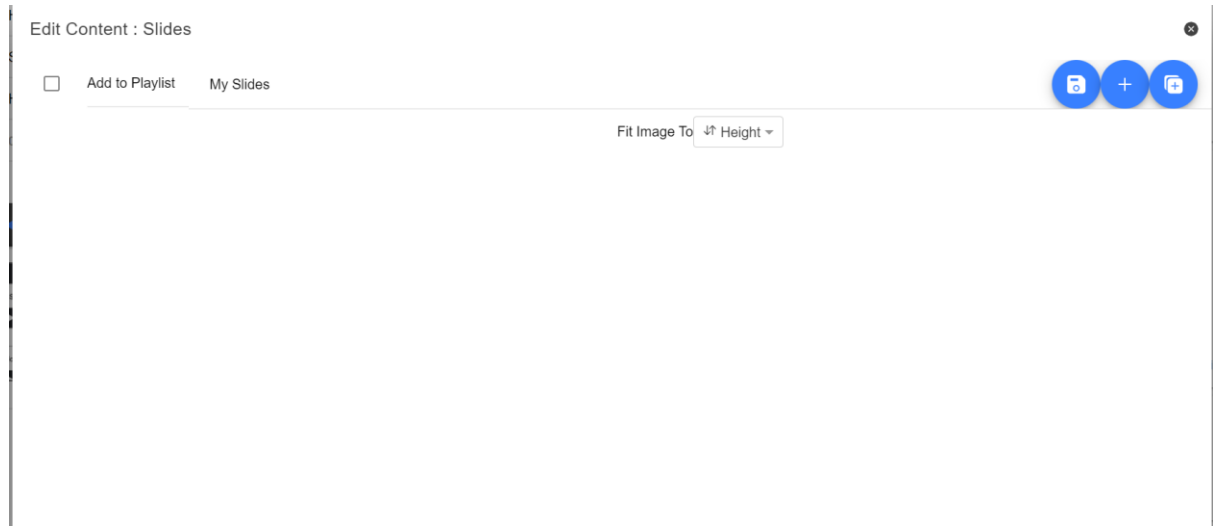


3. To import multiple slides, click button 2. Button 1 can be used to add a single slide to an existing slide deck.




1 **2**

4. Select all the slides you want to import, CTRL + A can be used to select all.



5. Your slides will be imported in alphanumerical order, individual slides can be delete by clicking the blue trashcan icon next to each slide.

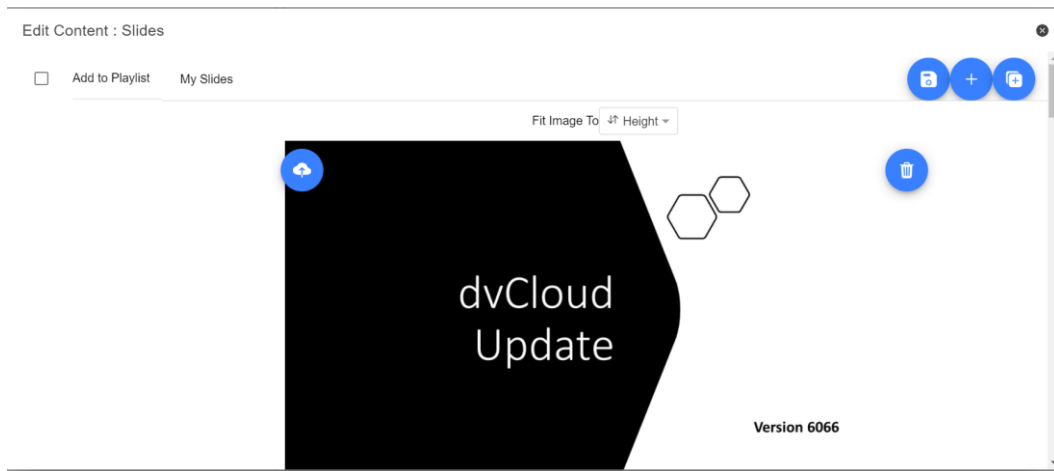

6. You can choose to fit the images to the 'Height' or 'Width' of your device, select the option that avoids stretching of the slides based on the aspect ratio of the slides and your devices screen.
7. The slides will be saved automatically when you close editor by tap or clicking the 'X', you can also save changes using the blue save button on the top right corner of the editor.

To edit slides, simply tap or click the 'Edit' button, the slides will be saved automatically when you close the rich text editor by tap or clicking the 'X'

Real time editing


Real time editing allows you to modify a script that is currently on screen, simply modify the script via the web interface and watch it update in real time as soon as you save your changes.

Please Note: The scrolling text will pause momentarily while the changes are loaded.

Playlists


Adding a script to the playlist

Checking the 'In Playlist' option when creating or editing a script via the webui will allow the app to automatically load the next script in the list, it also allows you to quickly jump between scripts using the hardware remote control (see the control section of this guide for more information).

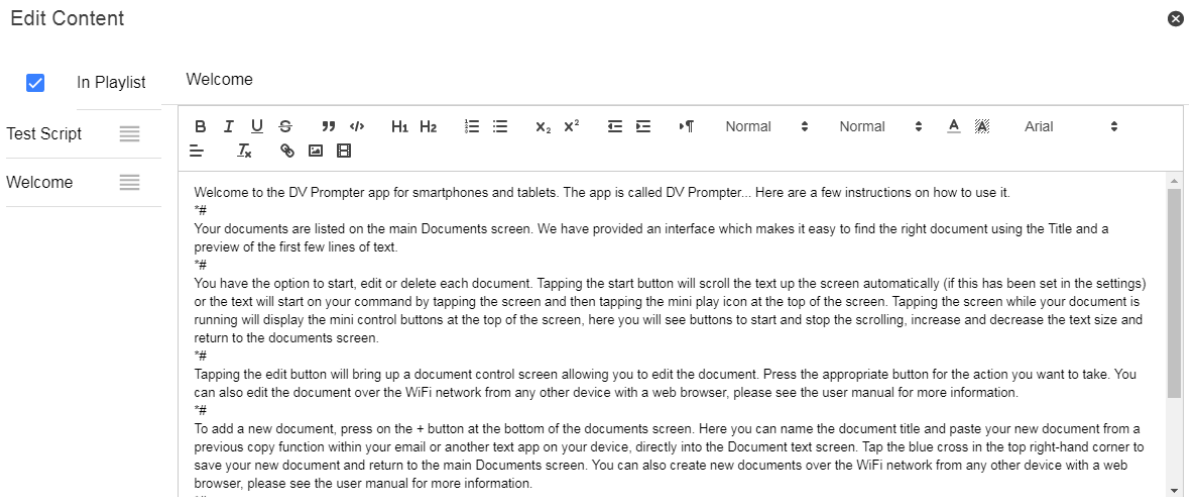


Changing the playlist order

To change the running order of the playlist simply click the horizontal bars to the right of the script name and drag to the desired position.

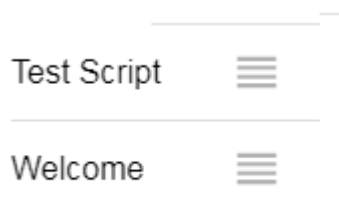

Control**Via the device (USB mouse)**

Clicking the screen when a script is loaded will display the menu bar shown below.

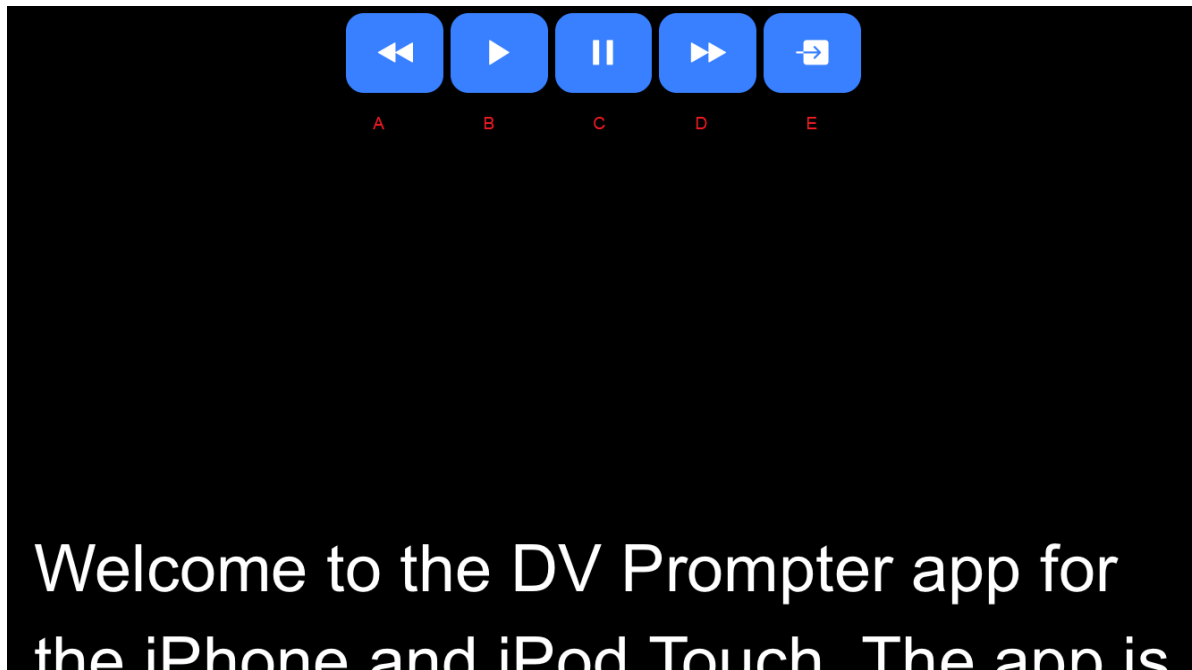

A: Decrease text size when scrolling / jump to previous script in playlist when paused

B: Start / Pause scrolling

C: Start / Pause scrolling


D: Increase text size when scrolling / jump to next script in playlist when paused

E: Unload script and return to documents screen

Via the web interface

Please see the ‘Network’ section of this guide to understand how to access the remote control webui of the app.

The network control interface is shown below.

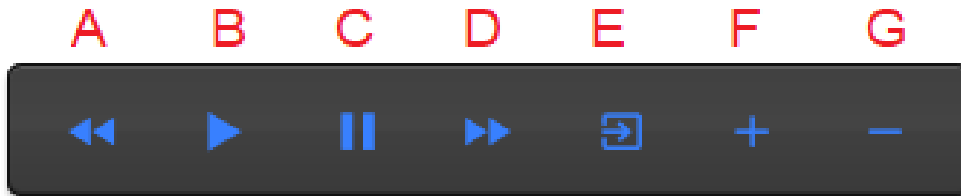

- A: Decrease text size when scrolling / jump to previous script in playlist when paused
- B: Start / Pause scrolling
- C: Start / Pause scrolling
- D: Increase text size when scrolling / jump to next script in playlist when paused
- E: Unload script and return to documents screen
- F: Increase speed when scrolling / jump to previous break marker when paused
- G: Decrease speed when scrolling / jump to next break marker when paused

Keyboard Shortcuts

Keyboard shortcuts can be assigned to any of the buttons (A to G) detailed above. To enable and assign keyboard shortcuts first enable the ‘Enable Hotkeys’ option from the ‘Settings’ menu on the web interface, the default shortcuts are shown below.

To change a shortcut simply left click the button you want to assign with the mouse and then press the key combination you want to assign.

Please Note: Take care not to assign key combinations that are assigned to system functions or that will be used when editing.



Using Optional Hardware Remote Controls

Please see the ‘Optional Teleprompter Remote Controls’ section of this manual for more information.

Menu Bar

Clicking the menu bar (found in the top left-hand corner of the documents screen will display the menu shown below, you will see three options:


Home – Return to the documents screen

Settings – Display all app settings

Network – Display the address required to access the app from any device with a web browser over the local Ethernet network

Help – Links directly to the dvPrompter Plus QSG

i – Displays the dvPrompter Plus app version

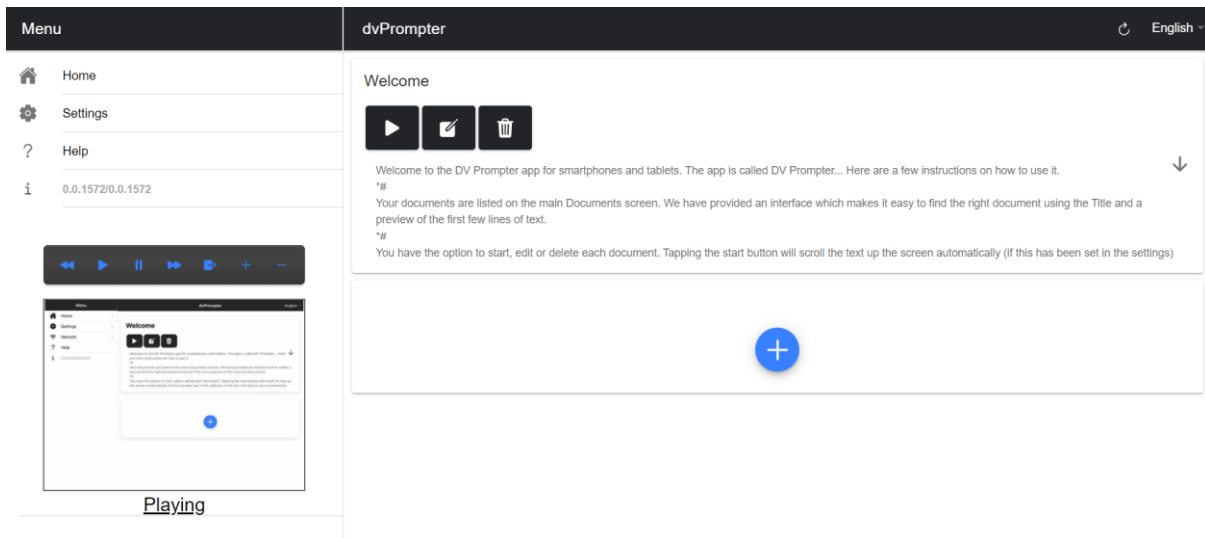

Settings

Menu	Settings	English
Home	Slave Mode	<input type="checkbox"/>
Settings	Display Settings	
Network	Default Font	<input type="text" value="x"/>
	Font Size	128px
	Line Height	1.00
	Font Colour #ffffff	<input type="checkbox"/>
	Background Colour #000000	<input type="checkbox"/>
	Prompting Settings	
	Orientation	Landscape
	Mirrored Display	<input type="checkbox"/>
	Loop	<input checked="" type="checkbox"/>
	Scrolling Speed	<input type="range" value="15"/>

Menu	Settings	English
Home	External Display	<input type="checkbox"/>
Settings	Border	None
Network	Timer	None
	Startup	
	Auto Start	<input checked="" type="checkbox"/>
	Start Delay(sec)	<input type="range" value="0"/>
	Network	
	Screenshot Enabled	<input checked="" type="checkbox"/>
	Screenshot Delay(ms)	<input type="range" value="50"/>
	Remote Settings	
	Break Marker *#	
	Remote Control	None
	Webui Access	Already Purchased

Slave Mode: When enabled the device will act as a slave screen to another dvPrompter app, please see the 'Synchronising multiple devices' section for more information.

Default font: Select the default font used by the editor (this can be overridden on a per script basis using the editor).

Font Size: Sets the default font size, this will apply to all text that does not have a font size set within the editor.

Line Height: Sets the spacing between lines when scrolling, values below 1 may result in text overlapping.

Font colour: Sets the default font colour (this can be overridden on a per script basis using the editor).

Background colour: Sets the background colour.

Orientation: Select if your device will be 'Landscape' or 'Portrait'.

Mirrored Display: Set to 'Off' if reading the text directly from the device, set to 'On' if reading the text via a mirror.

Loop: Set to 'On' to continually loop the script when finished (only valid when playlists are not in use).

Scrolling speed: Set the speed the text will start to scroll at, this can be adjusted via the hardware or network remote control.

Cue marker: Optionally select a cue marker to define the line of text the talent should read.

Cue Background: Set the cue marker background colour (only valid when using plain or combined cue markers).

External Display: When disabled any second display connected via HDMI or wireless will mirror the main display, when enabled text will only scroll on the second display, the main display can be used to create and edit scripts as well as control the text.

Border: Used to add a border around the scrolling text, this is useful if the text is too close to the edge of your monitor and or beam-splitter glass.

Timer: Display a timer showing the time the text as been scrolling on screen, the timer will reset when a new script is loaded and pause when the script is paused.

Auto start: When set to 'On' the script will start scrolling automatically, when set to 'Off' the script must be started using the on-screen menu, hardware or network remote control.

Start delay: Optionally set a delay (in seconds) between the start command being issued and text starting to scroll (work with manual start and auto start).

Screenshot Enabled: Enables or disabled the screenshots used for remote monitoring via the web interface.

Screenshot Delay (ms): The time in milliseconds a screenshot is taken and send to the network web interface for remote monitoring, a lower value will result in less delay but higher CPU and network usage. Lower values will require faster hardware.

Break marker: You can also set up text characters like *# that indicate a break in the scrolled text called break markers. These markers can then be used to quickly jump forward or backward between points in the text, when using the hardware or network remote control, should the running order of the production change.


Remote control: The optional Datavideo WR-500 controller can be used to control the script, please select either Bluetooth or wired mode.

Webui Access: All optionally features are already unlocked on the TP-700.


Enable Hotkeys: Allows you to assign keyboard shortcuts to the control buttons. This option can only be configured via the web interface.



Network

If your device is connected to a Wi-Fi or Ethernet network you can fully control the app over the network, simply enter the webui address into the web browser of another device on the same network.

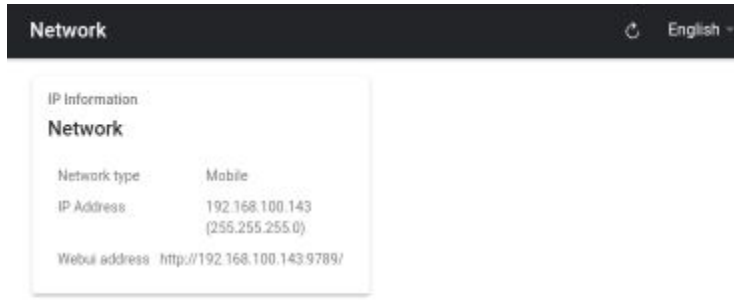

You can see an example of the remote-control interface below.

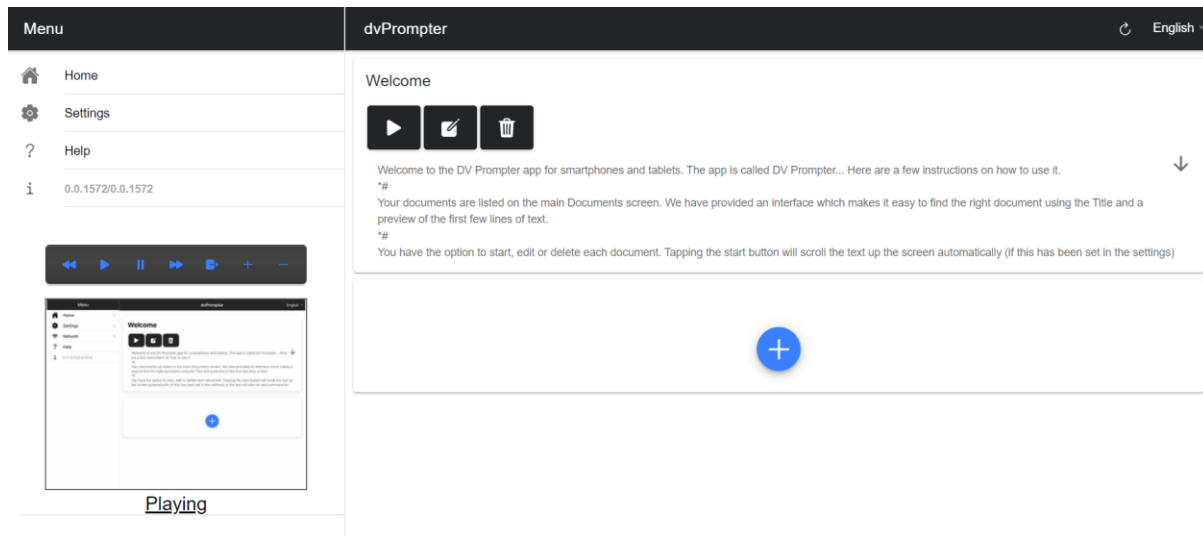

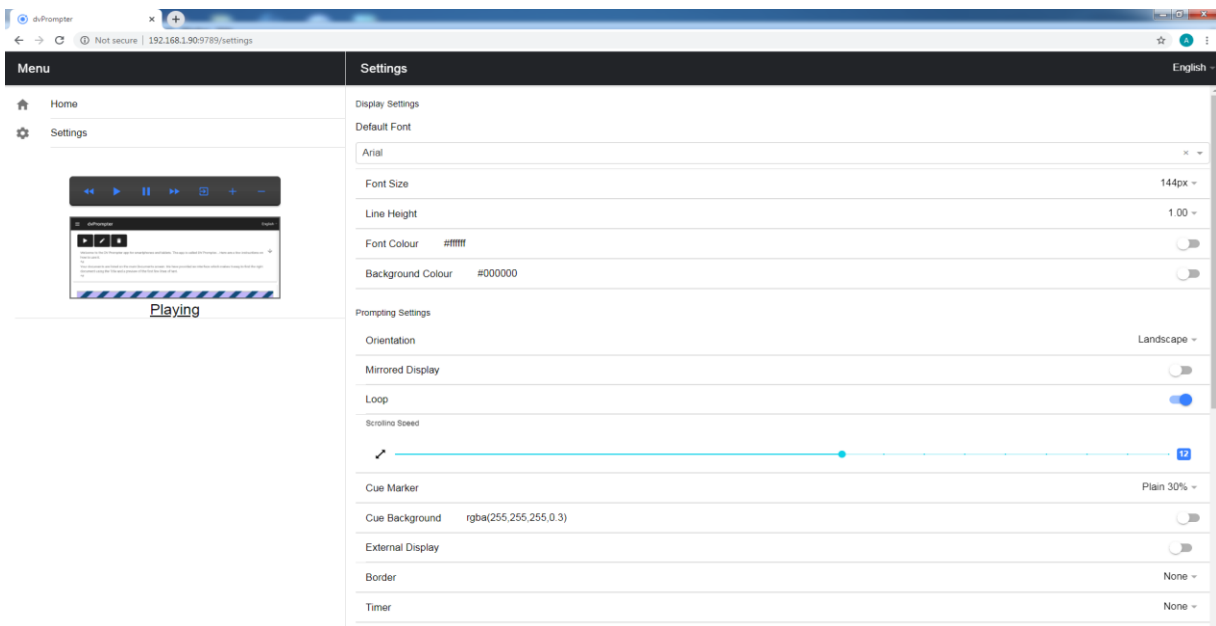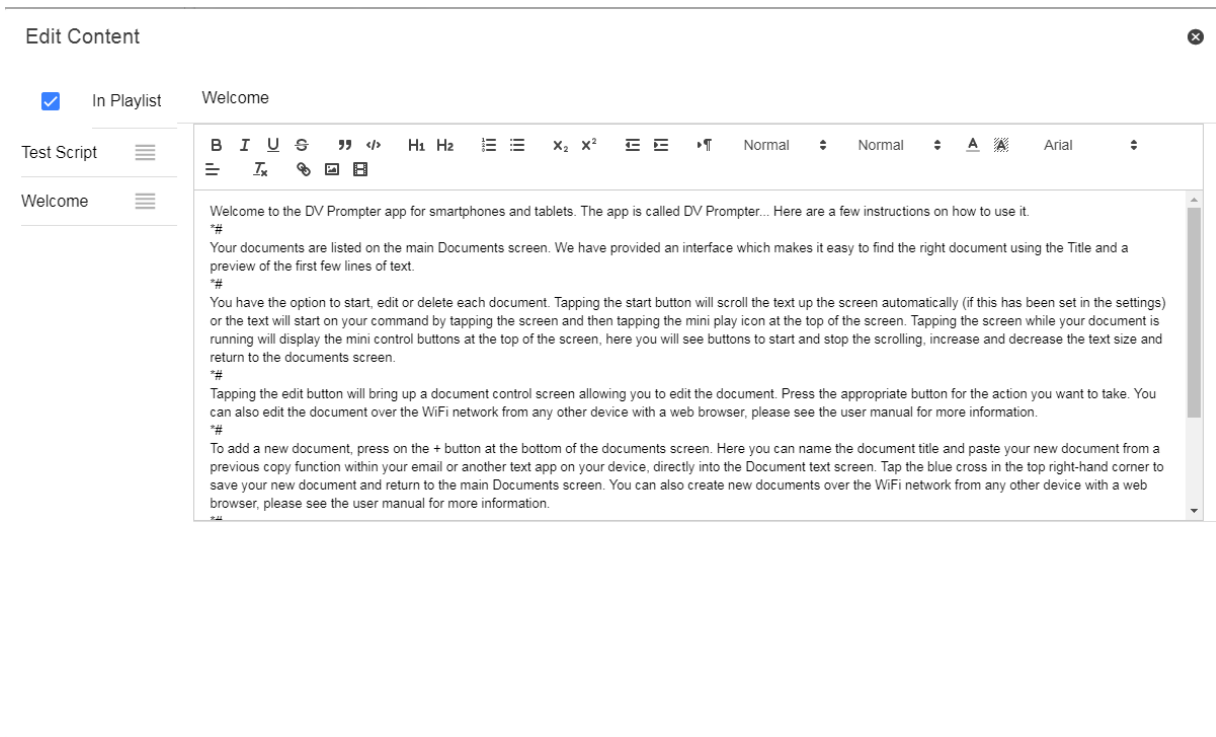

Synchronizing Multiple Devices

Via HDMI

The TP-700 features HDMI input and output ports, multiple TP-700 units can be connected in a daisy chain by connecting the HDMI output of one TP-700 to the HDMI input of another. The HDMI **output** port is located next to the Ethernet port.

To use the HDMI input:

1. Connect the supplied USB mouse
2. Right click to close the dvPrompter Plus application
3. Left click the 'HDMI IN' application



4. To exit the 'HDMI IN' application, right click the mouse

Please Note: The scrolling refresh rate will be reduced when driving external displays via HDMI, you may notice a slight jitter when scrolling at higher speeds.

Via Ethernet


The feature allows you to synchronize the scrolling text on two or more TP-700s via an Ethernet network.

Requirements


- All devices must be identical for synchronization to work (devices with identical screen heights may work but this cannot be guaranteed).
- Slave devices will place additional load on the master device, the number of slave devices that can be connected is dependent on the performance of the master device.
- All slave devices must be connected to the same local network as the master device.

Setup Instructions


1. The master and slave devices must all have unique IP addresses on the same network. We would recommend connecting all TP-700s to a DHCP network/router so that all devices are assigned a unique IP address automatically. Please see page 12 for instructions on switching the TP-700 into DHCP mode.
2. Obtain the IP address of the master device by navigating to the network menu.
3. Open the settings menu on the slave device, enable slave mode and enter the IP address of the master.

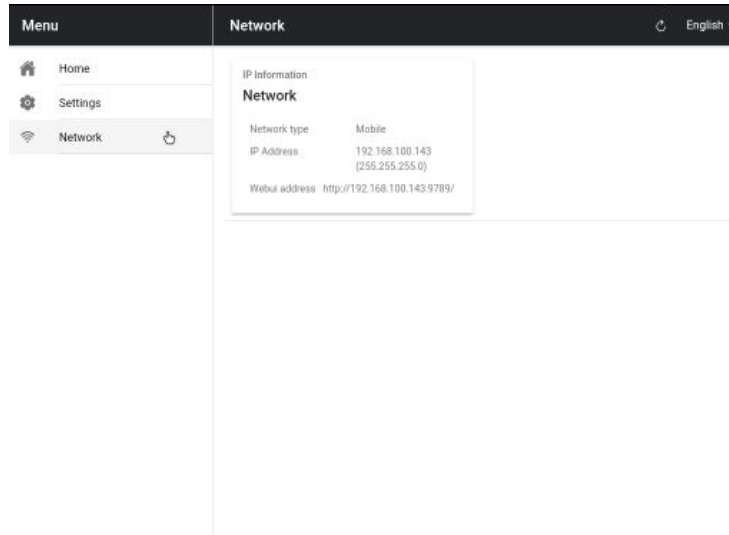

- 4. Tap home on the menu bar, you will see the screen below while the slave establishes a connection to the master.

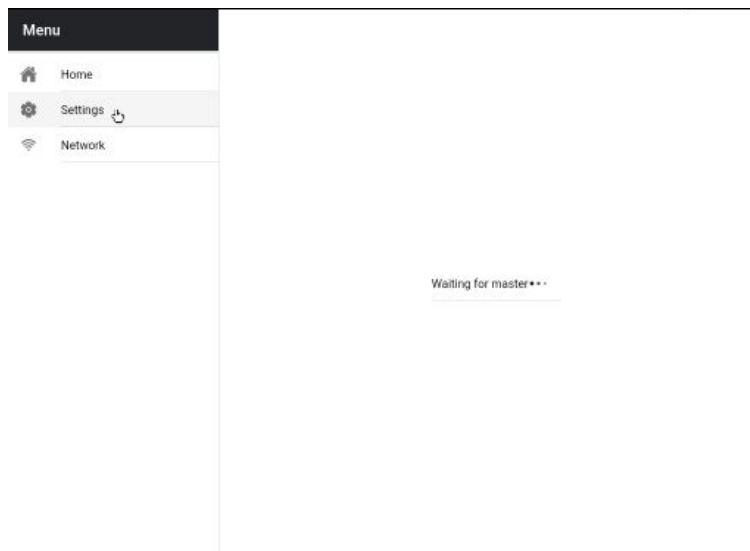

- 5. Once connected the screen will turn white then black, the slave will now mirror the master.
- 6. To exit slave mode tap the screen then press the blue exit button, the app will close.

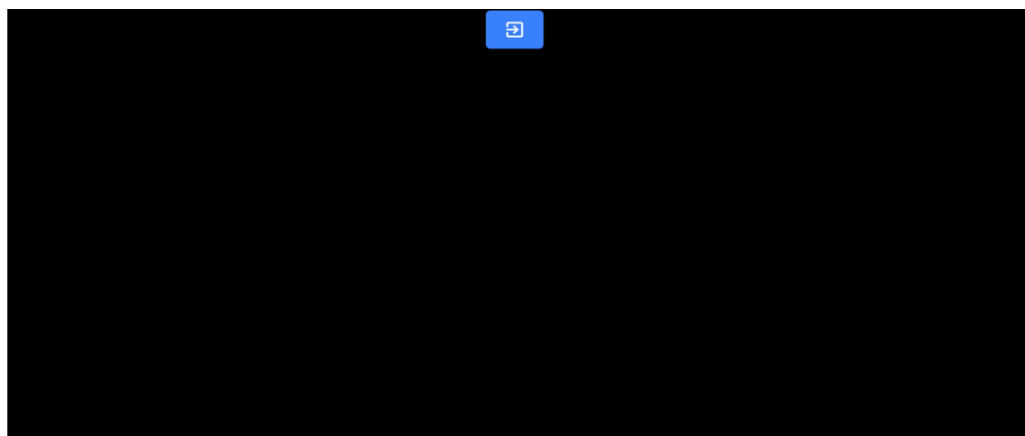

Connecting an External Display


You can connect an external display using the HDMI output on the TP-700. The HDMI **output** port is located next to the Ethernet port.

External Display Setting Disabled (Recommended if using webUI control)

In this mode the external display will mirror the devices screen.

External Display Setting Enabled (Recommended if using USB keyboard and mouse)

In this mode the text will only scroll on the external display leaving the device screen free for script control and editing. The script control options can be access via the menu bar as seen below.

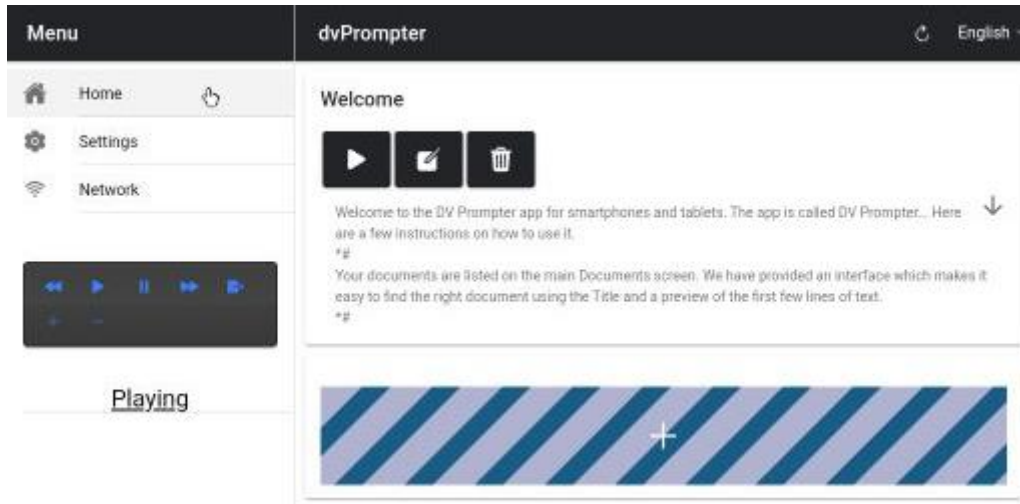


External Display Rotation


By default, the internal LCD screen is rotation angle is set to 180 degrees and the external HDMI output is set to 0 degrees. This is the correct configuration for connecting multiple TP-700 units via HDM, however if using the HDMI output to connect to an external display you should set the external rotation angle to 180 degrees also.

To change this setting:

1. Connect the supplied USB mouse and right click to close the dvPrompter Plus app
2. Click the 'Settings' app by clicking it once

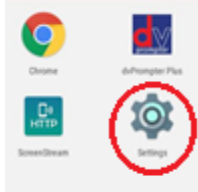

3. Click 'Display' and change the setting shown below

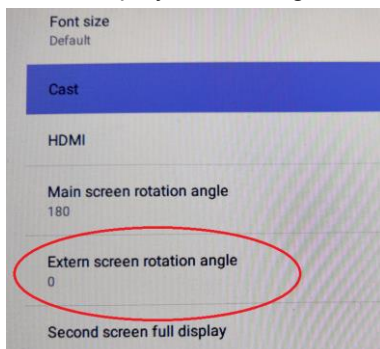

Updating the App & Firmware


Please check the monitor's firmware is up to date and the check the app version.

Updating the Monitor Firmware


Please see the separate guide here <https://www.datavideo.com/file/download?id=4252>

Updating the App


You can download the latest App from www.datavideo.com/product/TP-700. The current App version is shown at the bottom of the menu.

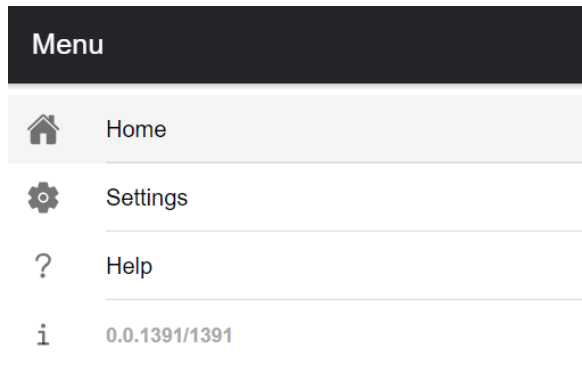


1. Download the latest App from www.datavideo.com/product/TP-700
2. Copy the downloaded .apk file to the root directory of a USB flash drive
3. Connect the USB flash drive containing the file to one of the TP-700s USB ports
4. Connect the supplied USB mouse to the other USB port
5. Open the 'File Manager +' App by clicking it once

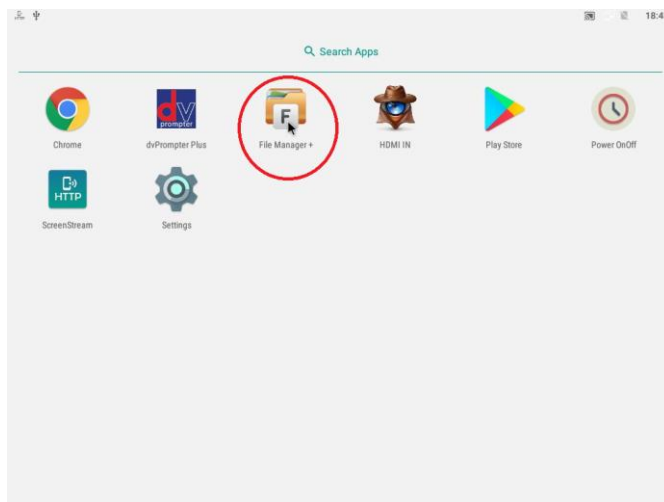


6. Open the USB flash drive by clicking it once

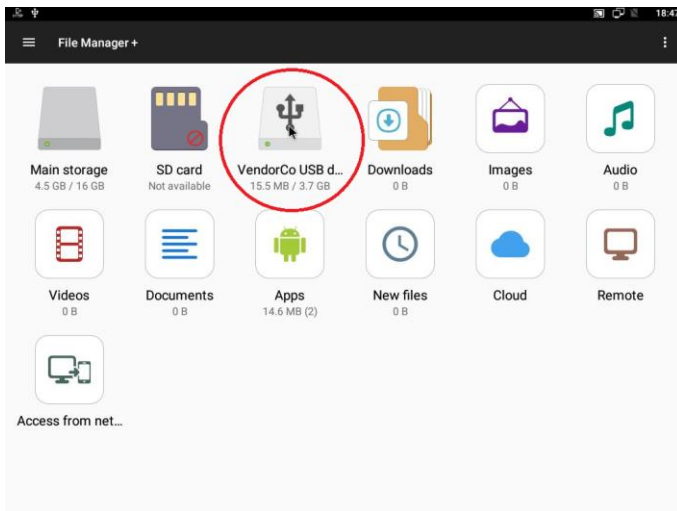

7. Double click the dvPrompter Plus .apk file you downloaded earlier

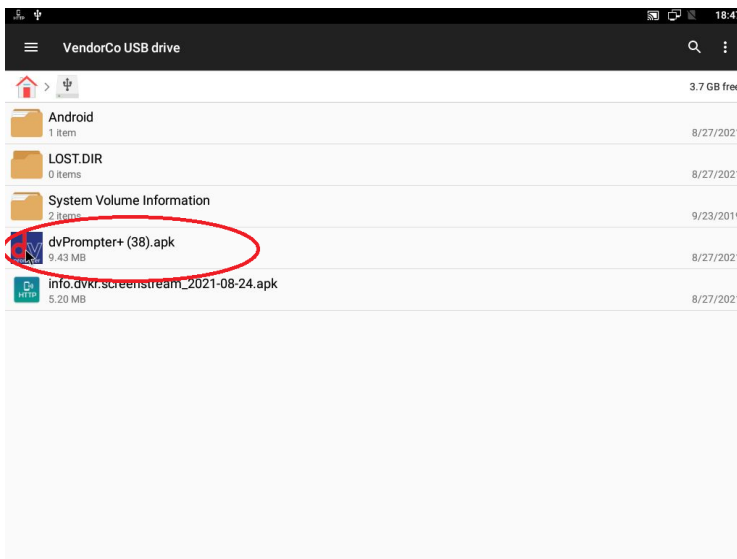

8. The update will install, the dvprompter App will automatically open when complete

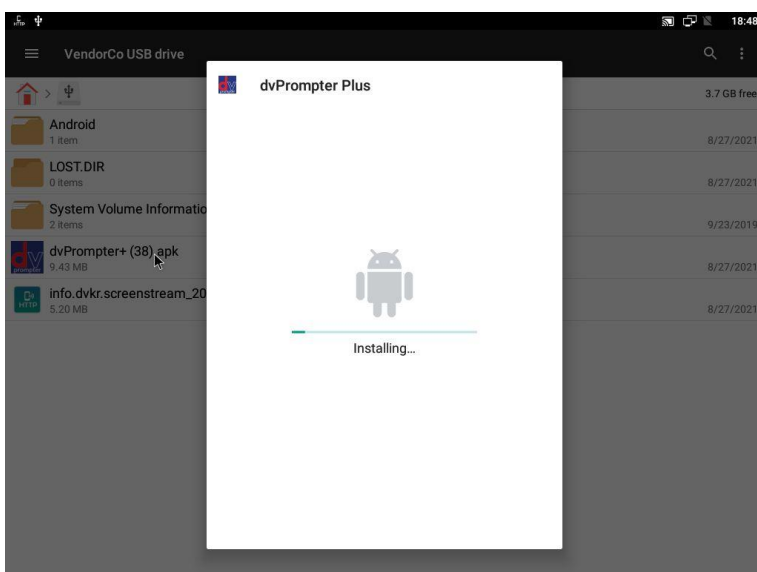

Specifications

Device Used	15" monitor with integrated dvPrompter Plus Software	
Multi-language Support	English Dutch Spanish Portuguese Russian	
Prompter Size (Max)	Width	430
	Height	345
	Depth	820
LCD Native Resolution	1024 x 768	
LCD Brightness	350 NIT	
Remote Control	Monitoring and control via LAN Optional WR-500 wired hardware remote	
Weight	Net Weight	6.3 KG
	Gross Weight	7.8 KG
Operating Temperature	0 – 40°C	
Gift box size	540x400x220 mm	
Power	12V 2A DC (Mains adapter supplied) V-Lock battery	

Service & Support

It is our goal to make owning and using Datavideo products a satisfying experience. Our support staff is available to assist you to set up and operate your system. Contact your local office for specific support requests. Plus, please visit www.datavideo.com to access our FAQ section.

Please visit our website for latest manual update.

www.datavideo.com/product/TP-700

datavideo
www.datavideo.com



@DatavideoUSA @DatavideoIndia2016
@DatavideoEMEA @Datavideojapan
@DatavideoTaiwan @DatavideoLatam
@DatavideoAsia @DatavideoBrasil



@Datavideo
@Datavideo_EMEA
@Datavideo_Taiwan



@DatavideoUSA
@DVTWDVCN



@DatavideoUSA
@DatavideoEurope